

[Manuals.plus](#) /

› [Cinkeda](#) /

› Cinkeda 27.5" Tall Farmhouse Lamp with USB Charging Ports and 3-Way Dimmable Touch Control (Model: TD-CK-206-1PK)
Instruction Manual

Cinkeda TD-CK-206-1PK

Cinkeda 27.5" Tall Farmhouse Lamp

Model: TD-CK-206-1PK

Brand: Cinkeda

INTRODUCTION

This instruction manual provides essential information for the safe and efficient use of your Cinkeda 27.5" Tall Farmhouse Lamp. Please read this manual thoroughly before installation and operation, and retain it for future reference. This lamp features a rustic design, 3-way dimmable touch control, and integrated USB-A, USB-C, and AC charging ports for convenience.



Image: The Cinkeda Farmhouse Lamp in a living room, highlighting its design and presence.

SAFETY INSTRUCTIONS

- Ensure the lamp is unplugged from the power outlet before assembly, cleaning, or changing the bulb.
- Do not use bulbs exceeding the maximum wattage of 60 watts.
- Use only E26 base bulbs. Compatible bulb types include incandescent, halogen, LED, or CFL.
- This product is designed for indoor use only. Do not expose to water or high humidity.
- Keep the lamp away from flammable materials.
- The cord, plug, and USB port of this bedside lamp are UL listed, ensuring safety standards are met.
- Do not attempt to modify or repair the lamp yourself. Contact qualified service personnel for repairs.
- Ensure the lamp is placed on a stable, flat surface to prevent tipping.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Lamp Base with integrated USB A/C ports and AC outlet

- Lampshade (Cylindrical oatmeal fabric)
- Harp and Finial
- Bulb (if included, check packaging)

Note: The product description indicates a bulb is included.

SETUP AND ASSEMBLY

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Assemble Lampshade:** If the lampshade requires assembly, follow the instructions provided with the shade to attach the fabric to the frame.
3. **Attach Harp:** Secure the harp to the lamp saddle on the lamp base.
4. **Install Bulb:** Screw the appropriate E26 base bulb (max 60W) into the lamp socket.
5. **Place Lampshade:** Position the lampshade onto the harp.
6. **Secure Finial:** Screw the finial onto the top of the harp to hold the lampshade in place.
7. **Connect to Power:** Plug the lamp's power cord into a standard 120V AC wall outlet.



Image: The fully assembled Cinkeda Farmhouse Lamp, showcasing its design and ready for use.

OPERATING INSTRUCTIONS

3-Way Dimmable Touch Control

The lamp features a sensitive touch control switch located on the base. Simply tap the touch control button to cycle through the brightness levels and turn the lamp on or off.

- **First Tap:** Activates Low-level brightness, suitable for a nightlight or soft ambient lighting.
- **Second Tap:** Activates Mid-level brightness, ideal for daily use and general illumination.
- **Third Tap:** Activates High-level brightness, excellent for reading, studying, or task lighting.
- **Fourth Tap:** Turns the lamp off.

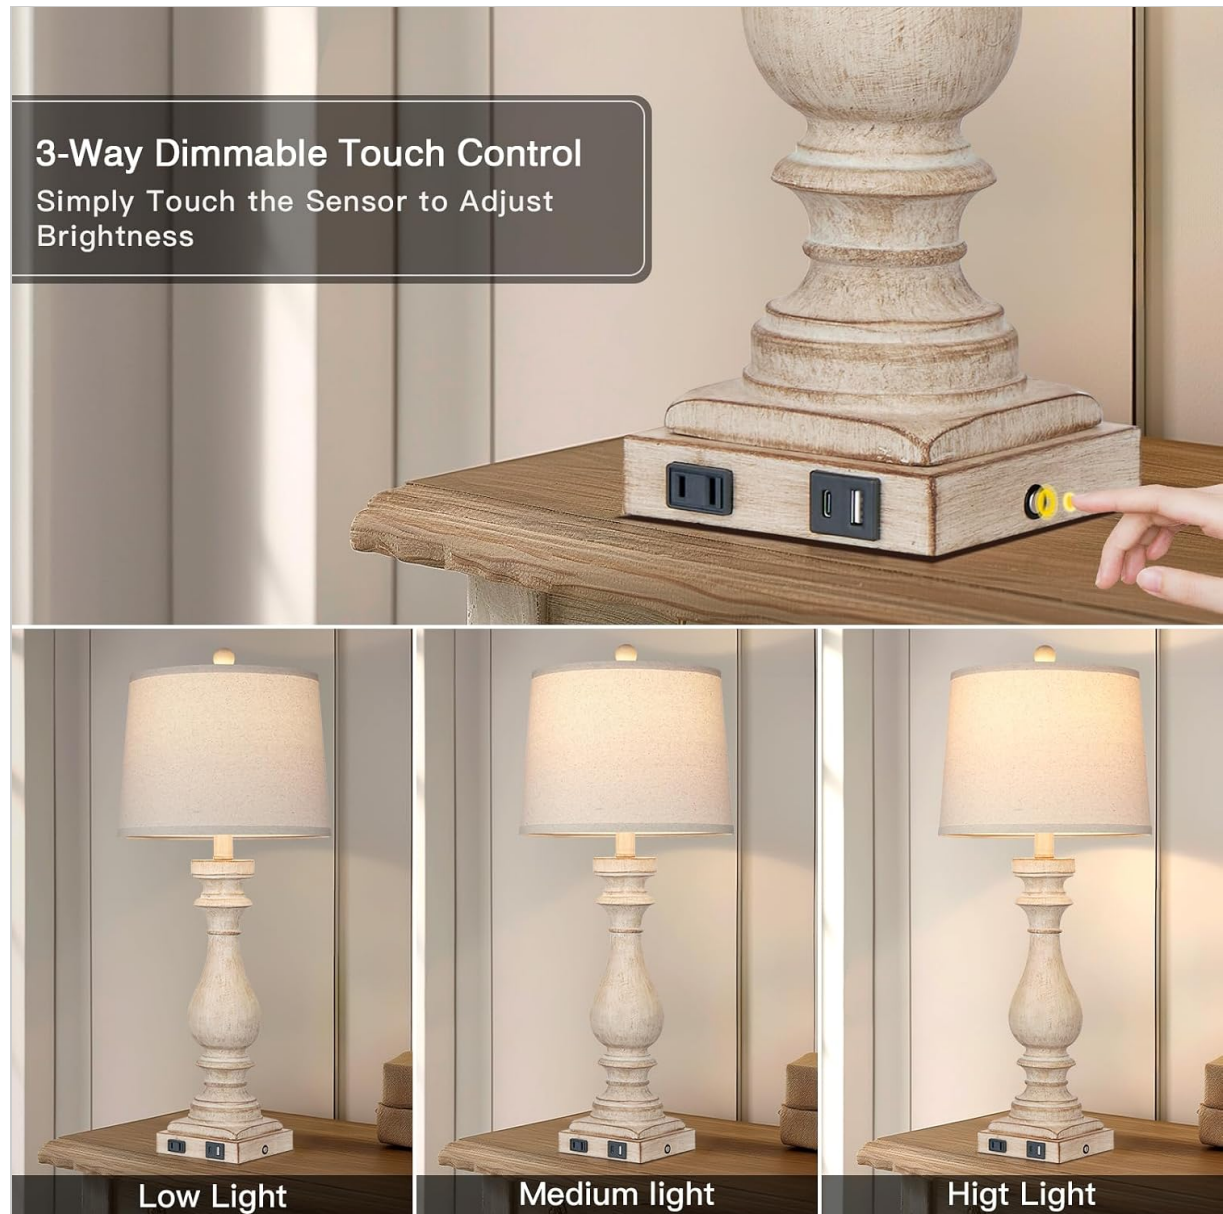


Image: Illustration of the 3-way dimmable touch control feature, showing the touch sensor and the resulting light levels (Low, Medium, High).

USB Charging Ports and AC Outlet

The lamp base includes built-in USB-A and USB-C charging ports (5V/2.1A) and a 2-prong AC outlet. These ports are functional whether the lamp light is on or off, allowing you to charge various electronic devices.

- **USB-A Port:** Connect compatible USB-A cables to charge smartphones, tablets, headphones, and other devices.

- **USB-C Port:** Connect compatible USB-C cables for faster charging of modern devices.
- **AC Outlet:** Plug in small electronic appliances or chargers. Ensure the device's power requirements do not exceed the outlet's capacity.

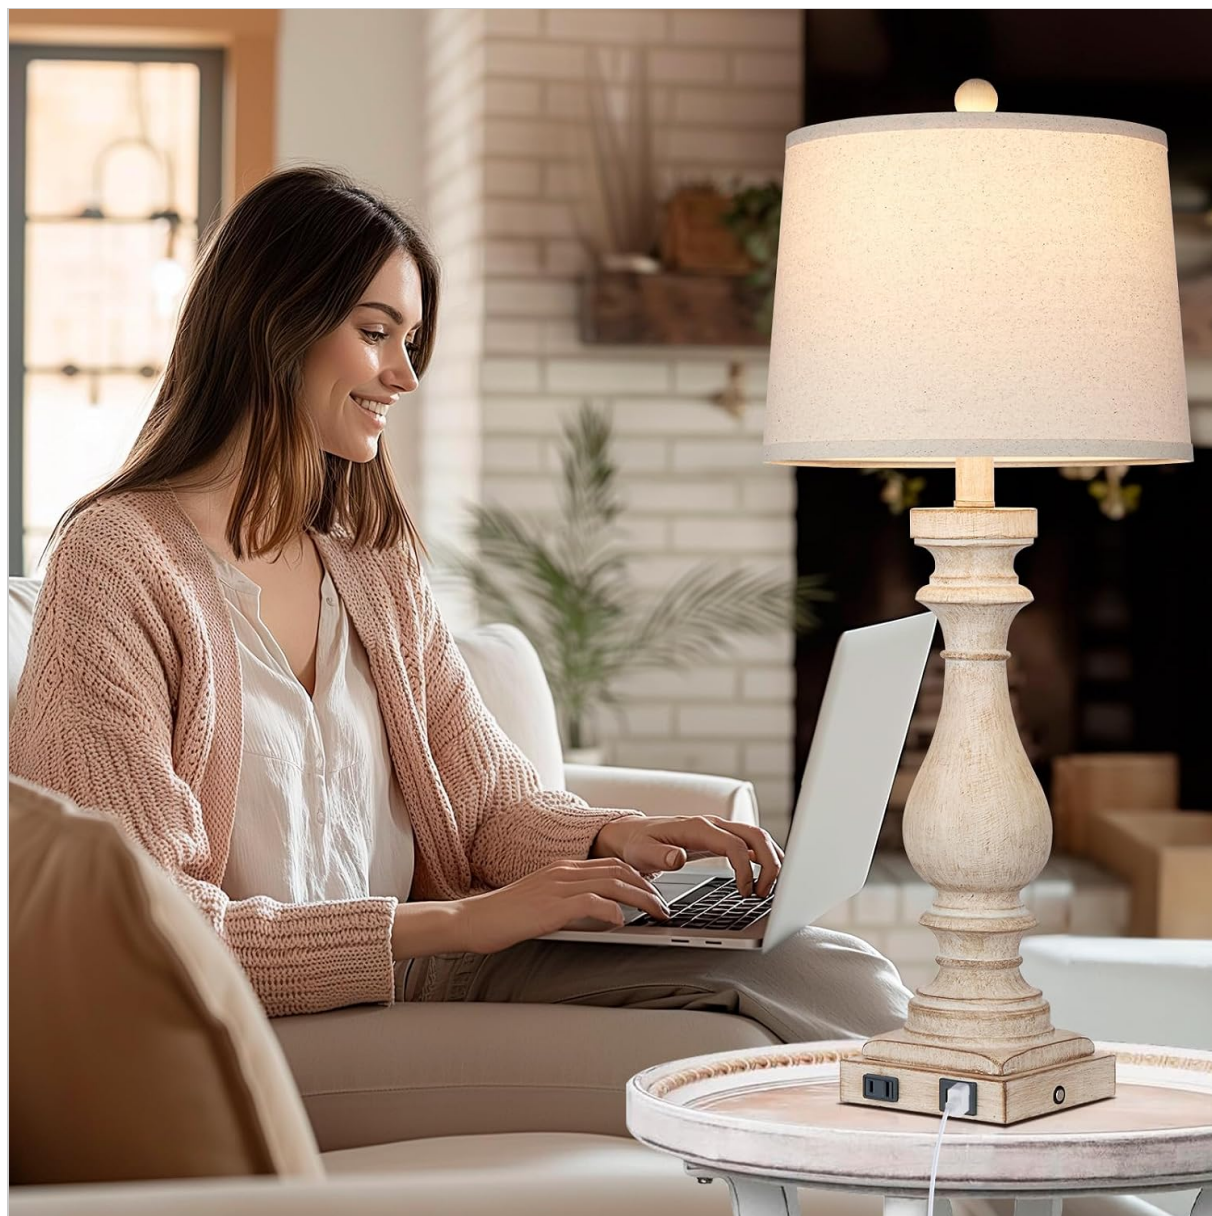


Image: The lamp's USB charging ports in use, demonstrating convenience for charging devices like laptops or phones.

MAINTENANCE

- **Cleaning:** Disconnect the lamp from power before cleaning. Wipe the lamp base with a soft, dry cloth. For the lampshade, use a lint roller or a soft brush to remove dust. Do not use liquid cleaners or abrasive materials.
- **Bulb Replacement:** Ensure the lamp is unplugged and the bulb has cooled before replacing. Unscrew the old bulb and screw in a new E26 base bulb (max 60W).
- **Cord Care:** Regularly inspect the power cord for any damage. If the cord is damaged, discontinue use and contact customer support.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Lamp does not turn on.	Lamp not plugged in. Bulb is loose or burnt out. Power outlet is not working.	Ensure the power cord is securely plugged into a working outlet. Tighten the bulb or replace it with a new one. Test the outlet with another device.
Touch control is unresponsive.	Loose bulb. Incorrect bulb type (non-dimmable). Internal wiring issue.	Ensure the bulb is screwed in tightly. Verify that the bulb is dimmable and compatible with touch control lamps. Contact customer support if the issue persists.
USB ports or AC outlet not charging.	Device cable is faulty. Device requires more power than supplied. Lamp is unplugged.	Try a different charging cable or device. Ensure the lamp is plugged into a live power source. Note that USB ports provide 5V/2.1A; some devices may charge slower or not at all if they require higher power.

SPECIFICATIONS

Model Number	TD-CK-206-1PK
Dimensions (D x W x H)	12.5" x 12.5" x 27.5"
Base Material	Resin
Shade Material	Linen
Finish Type	White Washed
Bulb Base	E26
Max Wattage	60 Watts
Voltage	120 Volts
Light Source Type	LED (compatible with Incandescent, Halogen, CFL)
Switch Type	Touch Control (3-Way Dimmable)
USB Ports	USB-A & USB-C (5V/2.1A)
AC Outlet	1 x 2-Prong AC Outlet
Indoor/Outdoor Use	Indoor Only



Image: Detailed dimensions of the lamp, including overall height, shade width, shade height, and base width.

WARRANTY AND SUPPORT

Cinkeda is committed to product quality. All lamps undergo UL standard testing to ensure safety. For any problems or inquiries, please contact us directly via Amazon. We aim to provide satisfying after-sales service. For further assistance, please visit the [Cinkeda Store on Amazon](#).