

Tiger JRX-T100KT

Tiger JPW-T100KV IH Rice Cooker (5.5 Cups, Mauve Black) - Instruction Manual

This comprehensive instruction manual provides detailed guidance for the setup, operation, maintenance, and troubleshooting of your Tiger JPW-T100KV IH Rice Cooker. Follow these instructions to achieve perfectly cooked rice and maximize the lifespan of your appliance.

1. INTRODUCTION

Thank you for choosing the Tiger JPW-T100KV IH Rice Cooker. This advanced appliance is designed to deliver superior rice cooking results with its Induction Heating (IH) technology and a variety of convenient features. With a 5.5-cup capacity, 13 versatile menu settings, and a 12-hour heat retention function, preparing delicious rice has never been easier.



Figure 1: Tiger JPW-T100KV IH Rice Cooker (Mauve Black)

2. IMPORTANT SAFETY INFORMATION

Please read all safety instructions carefully before using the appliance to prevent injury or damage.

- **Electrical Safety:** Ensure the voltage matches your power supply. Do not immerse the appliance, cord, or plug in water or other liquids.
- **Steam Vent: WARNING: May cause burns or scalding. Do not touch the steam vent when in use. Do not block or cover the steam vent.** Blocking the steam vent may cause deformation or malfunction.
- **Hot Surfaces:** The outer casing and inner pot become hot during and immediately after operation. Use oven mitts or handles when handling hot parts.
- **Children:** Keep the appliance out of reach of children. Close supervision is necessary when the appliance is used near children.
- **Damage:** Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any manner. Contact customer service for repair.
- **Intended Use:** Use the appliance only for its intended household purpose as described in this manual.

3. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the parts of your rice cooker:

- **Main Unit:** Houses the heating element and control panel.
- **Inner Pot:** Non-stick pot for cooking rice. Features measurement markings.
- **Inner Lid:** Removable lid inside the main lid, often with a dimple design for even cooking.
- **Outer Lid:** The main lid of the rice cooker.
- **Steam Vent:** Located on the top lid, releases steam during cooking.
- **Control Panel:** Digital display and buttons for menu selection, timer, and functions.
- **Power Cord:** Detachable or retractable cord for power supply.
- **Rice Scoop:** Included accessory for serving rice.

4. SETUP

1. **Unpacking:** Carefully remove all packaging materials and accessories from the box.
2. **Initial Cleaning:** Wash the inner pot, inner lid, and rice scoop with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth.
3. **Placement:** Place the rice cooker on a stable, flat, heat-resistant surface, away from direct sunlight and heat sources. Ensure adequate ventilation around the steam vent.
4. **Connect Power:** Insert the power cord securely into the appliance and then into a suitable electrical outlet.

5. OPERATING INSTRUCTIONS

Basic Rice Cooking

1. **Measure Rice:** Use the provided rice scoop to measure the desired amount of rice.
2. **Wash Rice:** Rinse the rice thoroughly under cold water until the water runs clear.
3. **Add Water:** Place the washed rice into the inner pot. Add water up to the corresponding water level marking inside the pot for your chosen rice type and quantity.
4. **Place Inner Pot:** Ensure the exterior of the inner pot is dry, then place it into the main unit. Close the outer lid securely.
5. **Select Menu:** Press the 'Menu' button to cycle through the available cooking options. The JPW-T100KV offers 13 menus: Plain/White, Premium, Quick, Express-Limited Cups, Cake, Multigrain, Brown, GABA Brown, Slow Cook, Porridge, Mixed/Sweet, Long-grain.
6. **Start Cooking:** Press the 'Start' button. The cooking indicator will light up, and the cooking process will begin.
7. **Completion:** Once cooking is complete, the appliance will typically switch to 'Keep Warm' mode automatically.

Timer Function (2 Memories)

The rice cooker features a cooking reservation timer with two memory settings, allowing you to set a desired completion time for your rice.

1. Prepare rice and water in the inner pot as usual.
2. Select your desired cooking menu.
3. Press the 'Timer' button. Use the 'Hour' and 'Min' buttons to set the desired completion time.

4. Press 'Start'. The timer indicator will light up, and the rice cooker will automatically start cooking to finish at the set time.

Keep Warm Function

The 'Keep Warm' function automatically activates after cooking is complete, maintaining the rice at an optimal serving temperature for up to 12 hours. The warmth retention time elapsed display will show how long the rice has been kept warm.

- To manually activate 'Keep Warm', press the 'Keep Warm' button.
- To cancel 'Keep Warm' or any other function, press the 'Cancel' button.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and hygiene.

1. **Before Cleaning:** Always unplug the rice cooker and allow it to cool completely before cleaning.
2. **Inner Pot:** Wash the non-stick inner pot with warm, soapy water using a soft sponge. Do not use abrasive cleaners or metal scrubbers, as this can damage the non-stick coating.
3. **Inner Lid:** The inner lid is removable for easy cleaning. Wash it with warm, soapy water and rinse thoroughly. Pay attention to the dimple design to ensure no rice particles remain.
4. **Steam Vent:** Clean the steam vent regularly to prevent blockages. The 'Care grain frame' feature assists in easy cleaning of this area.
5. **Exterior:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
6. **Storage:** Ensure all parts are completely dry before reassembling and storing the appliance.

7. TROUBLESHOOTING

If you encounter any issues, refer to the following common troubleshooting tips:

- **Rice is too hard/soft:** Adjust the water-to-rice ratio. Ensure rice is properly washed.
- **Rice is not cooking:** Check if the power cord is securely plugged in. Ensure the 'Start' button was pressed and the correct menu selected. Verify the inner pot is correctly seated.
- **Steam leaking from lid:** Ensure the inner lid and outer lid are properly closed and sealed. Check for any food debris obstructing the seal.
- **Unusual odor:** Perform a thorough cleaning of all removable parts. If the odor persists, contact customer support.

For issues not covered here, please contact Tiger customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	Tiger

Model Name	JRX-T100KT
Capacity	5.5 Cups
Product Dimensions (approx.)	26 cm (D) x 35.4 cm (W) x 20 cm (H)
Body Mass (approx.)	3.7 kg (8.16 lbs)
Color	Mauve Black
Power Source	Corded Electric
Voltage	100 Volts
Power Cord Length (approx.)	1.2 m
Special Feature	Airtight Lid, 13 Menu Settings, 12-hour Heat Retention, Cooking Reservation Timer (2 memories), Warmth Retention Time Elapsed Display, Care Grain Frame
Material	Aluminum (Inner Pot & Lid)
Product Care Instructions	Wipe with Damp Cloth

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Tiger website. Keep your purchase receipt as proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question