

ECONTROLLY KM15E

ECONTROLLY KM15E Remote Control User Manual

For Mitsubishi AC Air Conditioners MSZ-GE25VA, MSZ-GE22VA

INTRODUCTION

This manual provides instructions for the ECONTROLLY KM15E replacement remote control, designed for use with Mitsubishi AC Air Conditioner models MSZ-GE25VA and MSZ-GE22VA. This remote control offers direct functionality without the need for complex programming.

PACKAGE CONTENTS

- 1 x ECONTROLLY KM15E Remote Control
- *Note: Batteries are not included.*

SETUP

Battery Installation

The KM15E remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 1: Battery compartment with cover removed, showing battery insertion points.

Initial Use

Once batteries are installed, the remote control is ready for immediate use. No programming or setup is required. Point the remote control towards your Mitsubishi AC Air Conditioner and press the desired function button.

OPERATING INSTRUCTIONS

The KM15E remote control provides direct access to essential functions of your Mitsubishi AC unit. Refer to the image below for button identification.



Figure 2: Overview of the KM15E remote control buttons.

- **ON/OFF Button (Orange):** Press to turn the air conditioner unit on or off.
- **Temperature Adjustment (Up/Down Arrows):** Use the **TOO WARM** (down arrow) and **TOO COOL** (up arrow) buttons to adjust the desired temperature.
- **MODE Button:** Cycles through available operating modes such as Cool, Dry, Fan, and Heat (if supported by your AC unit).
- **FAN Button:** Adjusts the fan speed (e.g., Low, Medium, High, Auto).
- **VANE Button:** Controls the direction of the air swing/louvers.
- **ECONO COOL Button:** Activates the Econo Cool function for energy-saving operation.
- **SMART SET Button:** Activates a pre-set comfort setting.
- **TIME Buttons (Up/Down Arrows):** Used to set the timer functions.

- **START Button:** Confirms timer settings.
- **STOP Button:** Cancels timer settings.
- **RESET CLOCK Button:** Resets the internal clock of the remote control.

Note on Temperature Display: The remote control's display typically shows temperature in Celsius. Based on user feedback, there is no known method to switch the display to Fahrenheit on this specific replacement model.

MAINTENANCE

Battery Replacement

Replace batteries when the remote control's performance degrades or the display becomes dim. Always replace both batteries simultaneously with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, wipe it gently with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's surface or internal components.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and the AC unit's receiver.
 - Verify that the remote control is pointed directly at the AC unit.
- **Temperature display is in Celsius only:**
 - This replacement remote control model is designed to display temperature in Celsius only. There is no function to switch to Fahrenheit.
- **AC unit not responding to specific functions:**
 - Ensure your specific Mitsubishi AC model (MSZ-GE25VA, MSZ-GE22VA) supports the function you are trying to use. Some advanced features may vary between AC unit models.

SPECIFICATIONS

Model Number	KM15E
Compatible AC Models	Mitsubishi MSZ-GE25VA, MSZ-GE22VA
Power Source	2 x AAA Batteries (not included)
Dimensions (L x W x H)	16.2 cm x 6.3 cm x 3 cm (6.38 x 2.48 x 1.18 inches)
Item Weight	2 ounces (approx. 56 grams without batteries)
Color	Black (Remote body is white, buttons are black/orange)

6.3 cm / 2.48 in

3 cm / 1.18 in

16.2 cm / 6.38 in



Figure 3: Physical dimensions of the KM15E remote control.

WARRANTY INFORMATION

Specific warranty details for this product are typically provided by the seller at the time of purchase or included with the product packaging. Please refer to your purchase documentation or contact the seller directly for information regarding warranty coverage and terms.

SUPPORT

If you encounter any issues not covered in this manual, or if you require further assistance with your ECONTROLLY KM15E remote control, please contact the seller or manufacturer directly. Provide your product model number (KM15E) and a detailed description of the issue for efficient support.

For general inquiries or to verify compatibility with other models, it is recommended to reach out to the manufacturer's customer service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Answered questions about this manual

Why doesn't the temperature on my ECONTROLLY KM15E remote match the cooling setting?

If the temperature on your ECONTROLLY KM15E remote does not seem to match your expectations or the actual room temperature, please consider the following factors based on the product specifications:Celsius vs. Fahrenheit: This specific...

[Read full answer](#)

