

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [COSORI](#) /

› [COSORI 5-Quart 18-Function Multi-Cooker \(Model CRC-R501-KUS\) Instruction Manual](#)

## COSORI CRC-R501-KUS

# COSORI 5-Quart 18-Function Multi-Cooker

MODEL: CRC-R501-KUS

## 1. Introduction

---

Thank you for choosing the COSORI 5-Quart 18-Function Multi-Cooker. This versatile appliance is designed to simplify your cooking process, offering a wide range of functions to prepare delicious meals with ease. Please read this manual thoroughly before first use and keep it for future reference.



Image 1: COSORI 5-Quart 18-Function Multi-Cooker. This image shows the sleek black and silver design of the multi-cooker with its control panel visible.

## 2. What's Included

Your COSORI Multi-Cooker package includes the following items:

- 1x COSORI 5.0-Quart Rice Cooker (Model CRC-R501-KUS)
- 2x Nonstick Inner Pot (one 5.0-Quart, one 3.0-Quart)
- 1x Measuring Cup (6.1 oz / 180 ml)
- 1x Standing Rice Paddle
- 1x 3.0-Quart Steam Basket (for steaming food only)
- 1x Recipe Book
- 1x Quick Reference Guide
- 1x User Manual

## 3. Product Features

- **18 Functions Multi-Cooker:** Offers diverse cooking options including various white and brown rice

textures, 3 types of grains, 3 types of oats, steamed vegetables, slow cook soups, and sauté flavored rice.

- **Healthy & Safe Materials:** Features a non-stick 6-layer inner pot made without BPA, PFOA, or PFOS.
- **Perfect Rice Every Time:** Utilizes fuzzy logic technology to automatically adjust the 7-step cooking process for fluffy and evenly cooked results.
- **Easy to Use:** Clear measurement marks on the inner pot simplify water measurement.
- **Effortless Cooking:** Includes automatic 24-hour keep warm and 24-hour delay timer functions.
- **Quick Cooking:** 'Quick Rice' feature cooks white rice faster at 1000W without compromising taste or quality.
- **Easy to Clean:** Non-stick inner pot and removable lid are dishwasher-safe.
- **5-Quart Capacity:** Large capacity (10 cups uncooked rice) suitable for family meals.

## 4. Setup

---

1. **Unpack:** Carefully remove all components from the packaging.
2. **Initial Cleaning:** Before first use, wash the inner pot, steam basket, measuring cup, and rice paddle with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the cooker with a damp cloth.
3. **Placement:** Place the multi-cooker on a stable, level, heat-resistant surface. Ensure adequate ventilation around the unit. **WARNING:** Do not place the cooker directly under cabinets when in use, as steam released during cooking can damage cabinetry.
4. **Connect Power:** Plug the power cord into a grounded electrical outlet. The display will illuminate.

## 5. Operating Instructions

---

The COSORI Multi-Cooker features an intuitive control panel with various preset functions. Refer to the Quick Reference Guide for specific water-to-rice ratios.

### 5.1. General Operation

1. Add desired ingredients to the inner pot.
2. Place the inner pot into the cooker base.
3. Close the lid securely.
4. Select the desired cooking function (e.g., White Rice, Brown Rice, Steam, Slow Cook).
5. Press the 'Start' button to begin cooking.
6. The cooker will automatically switch to 'Keep Warm' mode once cooking is complete.

### 5.2. Cooking Rice

For best results, rinse rice thoroughly before cooking until water runs clear. Use the provided measuring cup for accurate ratios.

- **White Rice:** Select 'White Rice' function. The fuzzy logic system will adjust cooking time for optimal texture.
- **Brown Rice:** Select 'Brown Rice' function. This setting ensures proper cooking for whole grain rice.
- **Quick Rice:** For faster white rice preparation, select 'Quick Rice'. This function uses 1000W power to reduce cooking time.

### 5.3. Other Functions

- **Steam:** Use the steam basket for vegetables, dumplings, or other steamed dishes.

- **Slow Cook:** Ideal for soups, stews, and braised dishes.
- **Sauté:** Allows you to brown ingredients directly in the inner pot before cooking.
- **Porridge/Oatmeal:** Dedicated settings for creamy porridges and oats.
- **Cake/Egg:** Specialized functions for baking cakes or cooking eggs.
- **Delay Timer:** Set a delayed start time up to 24 hours in advance.
- **Keep Warm:** Automatically activates after cooking to maintain food temperature.

Your browser does not support the video tag.

*Video 1: Demonstration of the COSORI 18-Function Rice Cooker, highlighting its various cooking modes and 24-hour keep warm feature.*

Your browser does not support the video tag.

*Video 2: Instructions on how to cook oatmeal using the COSORI Rice Cooker.*

## 6. Cleaning and Maintenance

---

Proper cleaning ensures the longevity and optimal performance of your multi-cooker.

- **Inner Pot:** The non-stick inner pot is dishwasher-safe for easy cleaning. Alternatively, wash with warm, soapy water and a soft sponge.
- **Removable Lid:** The removable lid is also dishwasher-safe. Ensure all food residue is removed from the gasket and steam vent.
- **Steam Basket, Measuring Cup, Rice Paddle:** These accessories are dishwasher-safe.
- **Exterior:** Wipe the exterior of the cooker base with a damp cloth. Do not immerse the base in water or any other liquid.
- **Storage:** Ensure all parts are completely dry before storing the cooker.

## 7. Troubleshooting

---

If you encounter any issues with your COSORI Multi-Cooker, please refer to the following common troubleshooting tips:

- **Rice is too hard/soft:** Adjust the water-to-rice ratio according to the type of rice and desired texture. Ensure rice is rinsed properly.
- **Cooker not turning on:** Check if the power cord is securely plugged into both the cooker and a working electrical outlet.
- **Error codes:** If an error code appears on the display, consult the full User Manual for specific code meanings and solutions.
- **Steam leakage:** Ensure the lid is properly closed and sealed, and the gasket is clean and correctly positioned.

For more detailed troubleshooting, please consult the comprehensive User Manual.

## 8. Specifications

---

<b>Brand</b>	COSORI
<b>Model Name</b>	CRC-R501-KUS

<b>Capacity</b>	5 Quarts / 10 Cups (uncooked rice)
<b>Power Source</b>	Electric
<b>Wattage</b>	1000 watts
<b>Material</b>	Stainless Steel
<b>Color</b>	Black
<b>Special Feature</b>	Non-Stick, Removable Bowl, Timer, Fuzzy Logic
<b>Product Care Instructions</b>	Dishwasher Safe (Inner Pot, Removable Lid, Accessories)

## 9. Warranty and Support

---

COSORI provides a 1-year limited warranty for this product. For warranty details, product support, or any questions, please contact COSORI Customer Support. Contact information can be found in the Quick Reference Guide or on the official COSORI website.