

[Manuals.plus](#) /

› [Winado](#) /

› Winado Portable Swamp Cooler User Manual

## Winado FLS-Z33DR

# Winado Portable Swamp Cooler User Manual

Model: FLS-Z33DR | Brand: Winado

## 1. INTRODUCTION

Thank you for choosing the Winado Portable Swamp Cooler. This 3-in-1 evaporative air cooler functions as a cooling fan, a standard fan (without ice pack), and a humidifier, effectively lowering air temperature and increasing humidity. It features a convenient 12-hour timer and is designed for ease of use and portability. Please read this manual thoroughly before operation to ensure proper use and maintenance.

## 2. IMPORTANT SAFETY INSTRUCTIONS

- Always place the cooler on a stable, level surface.
- Do not immerse the unit, plug, or cord in water or other liquids.
- Unplug the cooler from the power outlet before filling, cleaning, or performing any maintenance.
- Ensure the water tank is filled to the appropriate level (between MIN and MAX) before using the cooling function.
- Keep children and pets away from the unit during operation.
- Do not block air inlets or outlets.
- Use only with a grounded electrical outlet.
- Do not operate the unit with a damaged cord or plug.

## 3. PRODUCT OVERVIEW AND COMPONENTS

The Winado Portable Swamp Cooler comes with the following components:

- 1 x Evaporative Air Cooler Unit
- 1 x Remote Control
- 4 x Wheels (2 lockable)
- 4 x Ice Packs
- 1 x Instruction Manual (this document)

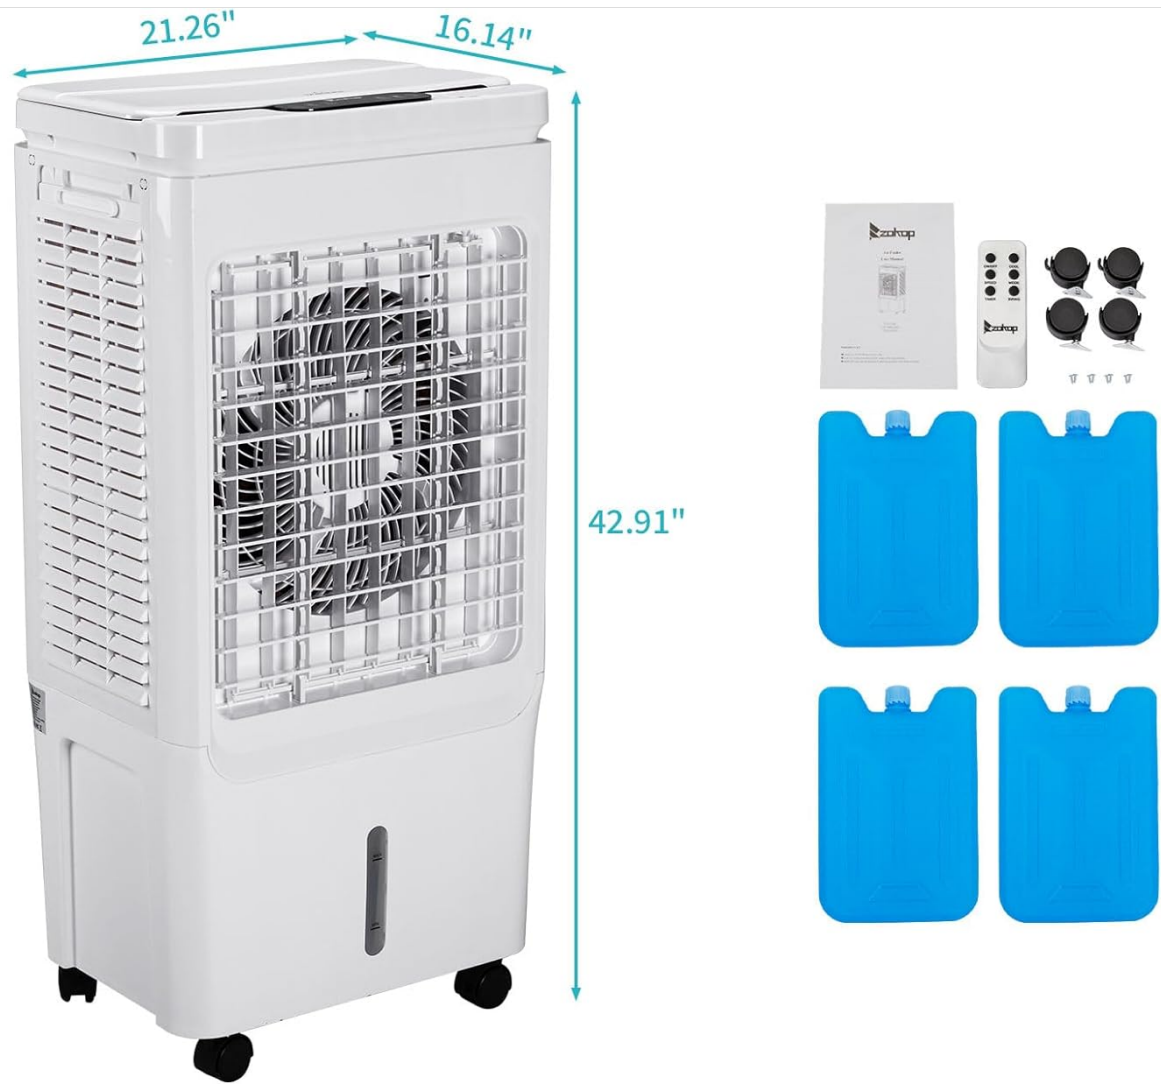


Figure 3.1: Winado Portable Swamp Cooler with remote and ice packs.

# Push-Button Easy to Control



Figure 3.2: Digital control panel with ON/OFF, COOL, MODE, SPEED, SWING, and TIMER buttons.



<b>Air Flow:</b>	2059CFM	<b>Tank Capacity:</b>	10.56GAL/40L
<b>Max.Room Size:</b>	215.28 Sq.ft/20 m <sup>2</sup>	<b>Left and Right Swing:</b>	60°
<b>Up and Down Swing:</b>	60°	<b>Noise:</b>	≤60 db
<b>Weight:</b>	24.25lbs		

Figure 3.3: Product dimensions and key specifications.

## 4. SETUP GUIDE

### 4.1 Unpacking and Wheel Installation

1. Carefully remove all components from the packaging.
2. Turn the unit upside down. Insert the four casters into the designated holes at the bottom of the cooler. Two of the casters are lockable; ensure these are placed at the front for easy access.
3. Turn the unit upright.

# ENJOY YOUR SUMMER

Easy to Move



Patio



Pool



Restaurant



Workshop

**NOTE:** When used indoors, it is recommended to open doors or windows.

Figure 4.1: The cooler is equipped with 360-degree rotating wheels for easy movement, with two wheels featuring locking mechanisms for stability.

## 4.2 Filling the Water Tank and Adding Ice Packs

1. Open the top water inlet cover.
2. Place the provided ice packs into the designated compartments within the water tank.
3. Carefully pour clean water into the tank. Ensure the water level is between the 'MIN' and 'MAX' indicators on the water level line. Do not overfill.
4. Close the top water inlet cover securely.



# Effortless Design

Add water or Ice from the top easily

Figure 4.2: Effortless design allows for easy addition of water or ice from the top.

Video 4.1: Official Winado video demonstrating the features and operation of the swamp cooler, including water and ice pack filling. (Creator: Seller)

## 5. OPERATING INSTRUCTIONS

The cooler can be operated using the digital control panel on top of the unit or the included remote control.

### 5.1 Control Panel and Remote Control Functions

- **ON/OFF:** Press to turn the unit on or off.
- **COOL:** Activates the cooling function. This function requires water in the tank. Do not press if there is no water inside.
- **MODE:** Cycles through 3 wind modes: Normal, Natural, and Sleep.
- **SPEED:** Adjusts fan speed between Low, Medium, and High.

- **SWING:** Activates the auto-oscillation function (90° swing) for wider air distribution.
- **TIMER:** Sets the operating timer for up to 12 hours.



Figure 5.1: Detailed view of the control panel buttons and their functions.



# Effortless Design

Add water or Ice from the top easily

Figure 5.2: The included remote control provides convenient operation from a distance.

## 5.2 Using the Cooling Function (Evaporative Cooling)

For optimal cooling, ensure the water tank is filled and ice packs are in place. Press the 'COOL' button on the control panel or remote. The unit will begin to circulate water over the cooling pads, producing a cooler, humidified airflow.

## 5.3 Fan Only Mode

To use the unit as a standard fan without evaporative cooling, do not add water to the tank or press the 'COOL' button. Simply turn the unit on and select your desired fan speed and oscillation settings.

## 6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your swamp cooler.

## 6.1 Cleaning the Water Tank

1. Unplug the unit from the power outlet.
2. Locate the marked drain at the bottom of the unit. Open the drain plug to empty the water tank.
3. Clean the inside of the tank with a soft cloth and mild detergent. Rinse thoroughly with clean water.
4. Close the drain plug securely before refilling.

## 6.2 Cleaning Air Filters

The unit features removable and easily cleanable filters. Refer to the side of the unit for filter access. Gently remove the filters, wash them with water and mild soap, rinse thoroughly, and allow them to air dry completely before reinserting.

## 6.3 Storage

When not in use for extended periods, empty and clean the water tank and filters. Store the unit in a cool, dry place, away from direct sunlight and extreme temperatures.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not turn on.	No power, power cord not plugged in, or power button not pressed.	Check power connection. Ensure power outlet is functional. Press ON/OFF button.
No cooling effect.	Water tank empty, COOL function not activated, or ice packs not frozen.	Fill water tank. Press COOL button. Ensure ice packs are frozen before use.
Weak airflow.	Air filters are dirty or fan speed is too low.	Clean air filters. Increase fan speed.
Unusual noise.	Unit not on a level surface or internal component obstruction.	Place unit on a flat, stable surface. Unplug and check for obstructions.

## 8. SPECIFICATIONS

Feature	Specification
Model Number	FLS-Z33DR
Power Source	Electric
Voltage	110 Volts
Wattage	150 watts

Feature	Specification
Item Weight	25 pounds
Product Dimensions (D x W x H)	21.26 x 16.14 x 42.91 inches
Water Tank Capacity	10.6 Gallons
Air Flow Capacity	2059 CFM
Max. Room Size Coverage	215 square feet
Fan Speeds	3 (Low, Medium, High)
Oscillation	90° Auto Oscillation
Timer	Up to 12 hours
Included Components	Remote Control, 4 Wheels, Instruction Manual, 4 Ice Packs

## 9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided on the product packaging or visit the official Winado website. Keep your purchase receipt for warranty claims.