

ECONTROLLY KM15E

ECONTROLLY KM15E Replacement Remote Control User Manual

Model: KM15E

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY KM15E replacement remote control, designed for use with various Mitsubishi Air Conditioner models, including MSZ-GE22VA, MSZ-GE25VA, and E2209C426. This remote control requires no programming and is ready to use after battery installation.

2. PACKAGE CONTENTS

- 1 x ECONTROLLY KM15E Replacement Remote Control

(Batteries and detailed instructions for the original AC unit are not included.)

3. SETUP

3.1 Battery Installation

The KM15E remote control operates on two (2) AAA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Note: Ensure batteries are inserted correctly. Incorrect polarity may prevent the remote from functioning.




This image illustrates the open battery compartment on the back of the remote control, where two AAA batteries are to be inserted. Below the main display, a panel can be slid down to reveal additional function buttons.

4. OPERATING INSTRUCTIONS

This remote control is designed to function immediately after battery installation without any programming.



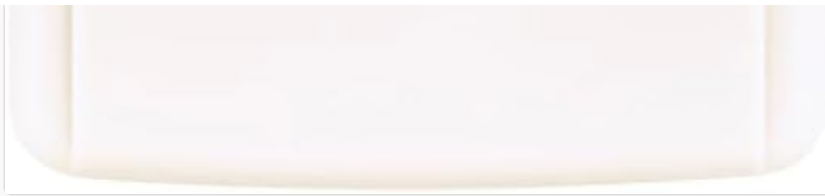


This image displays the main interface of the remote control, featuring the digital screen at the top and the most frequently used buttons: the orange ON/OFF button, and the 'TOO WARM' (down arrow) and 'TOO COOL' (up arrow) buttons for temperature adjustment.

4.1 Basic Functions

- **Power ON/OFF:** Press the orange **ON/OFF** button to turn the air conditioner on or off.
- **Temperature Adjustment:**
 - Press the **"TOO WARM"** (down arrow) button to decrease the set temperature.
 - Press the **"TOO COOL"** (up arrow) button to increase the set temperature.

4.2 Advanced Functions (Hidden Panel)

Slide down the front panel below the main buttons to access additional functions.

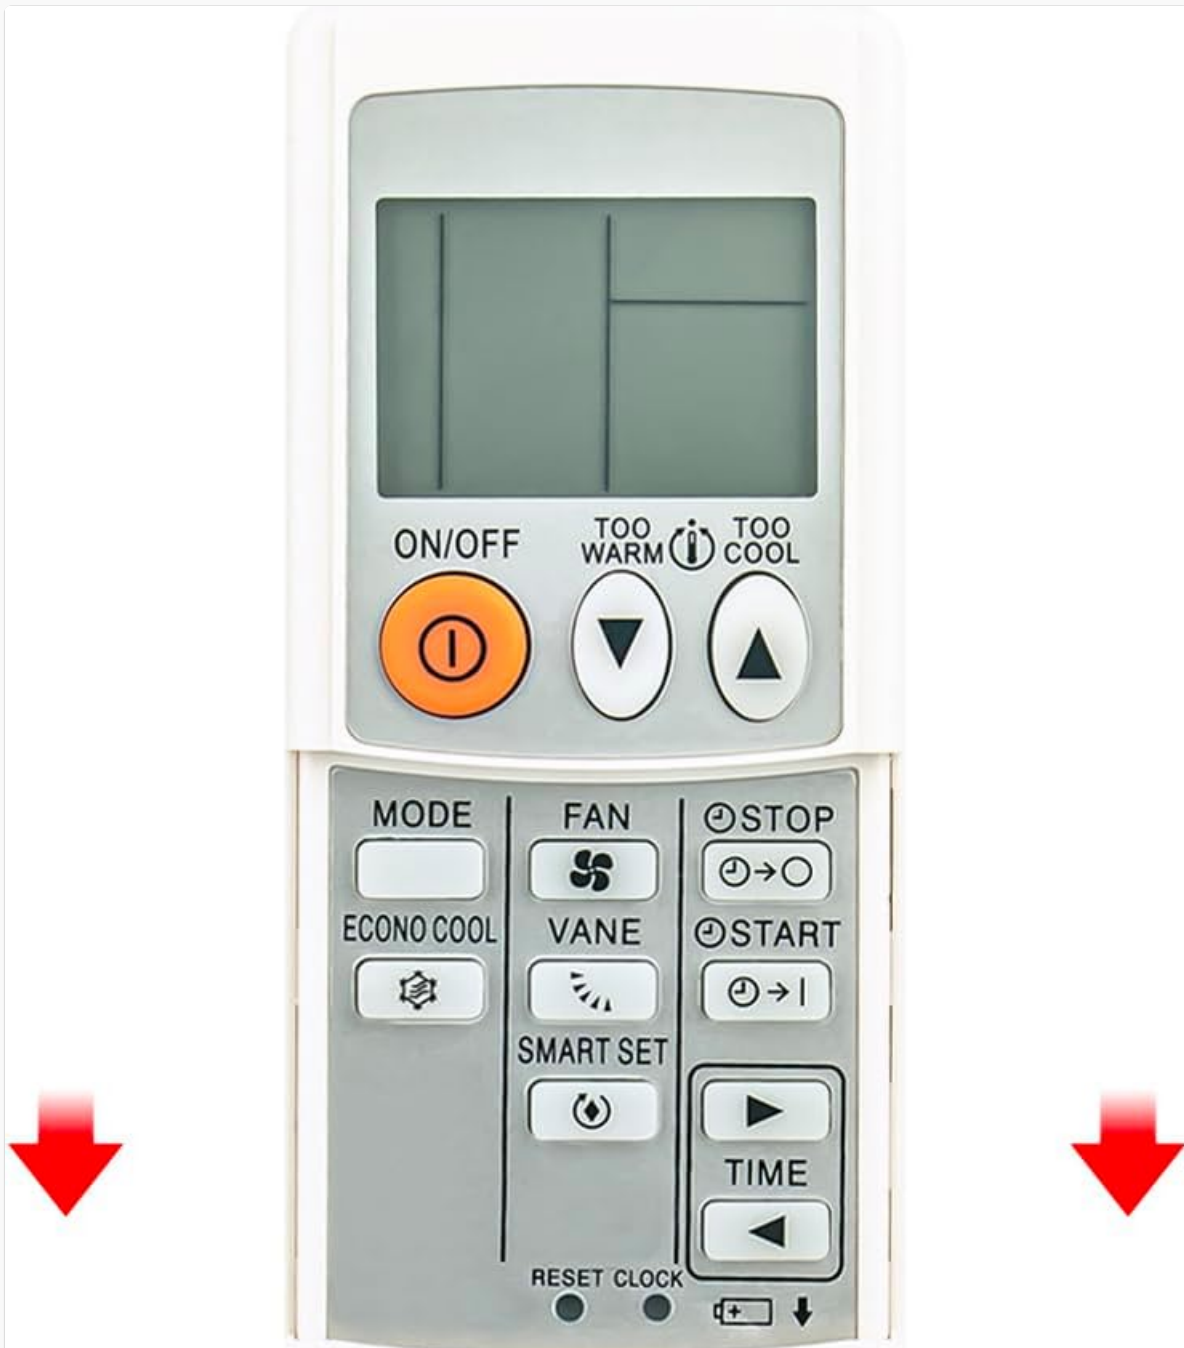



This image shows the remote control with its hidden panel open, exposing buttons for **MODE**, **FAN**, **ECONO COOL**, **VANE**, **SMART SET**, **STOP**, **START**, and **TIME** functions, along with a **RESET CLOCK** button.

- **MODE:** Cycles through operating modes (e.g., Cool, Heat, Dry, Fan, Auto).
- **FAN:** Adjusts fan speed.
- **ECONO COOL:** Activates energy-saving cooling mode.
- **VANE:** Adjusts the direction of the airflow vanes.
- **SMART SET:** Activates a pre-set comfort setting.
- **STOP / START:** Used for timer functions.
- **TIME:** Used for setting timers.
- **RESET CLOCK:** Resets the internal clock of the remote.

Note: The specific functionality of these buttons may vary slightly depending on your Mitsubishi Air Conditioner model. Refer to your air conditioner's original manual for detailed operation of these advanced features.

5. MAINTENANCE

5.1 Battery Replacement

Replace batteries when the remote's display becomes dim or the remote stops responding. Always replace both batteries at the same time with new AAA alkaline batteries.

5.2 Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the remote.

6. TROUBLESHOOTING

• **Remote not responding:**

- Check battery polarity.
- Replace batteries with new ones.
- Ensure there are no obstructions between the remote and the air conditioner's receiver.
- Point the remote directly at the air conditioner.

• **Temperature display in Celsius instead of Fahrenheit:**

This replacement remote control is designed to display temperature in Celsius. There is no function to switch the temperature unit to Fahrenheit on this specific model (KM15E). If Fahrenheit display is required, please ensure you purchase a remote control specifically designed for Fahrenheit display.

• **Some functions not working:**

- Ensure the hidden panel is fully open to access all buttons.
- Verify that your specific Mitsubishi Air Conditioner model supports the function you are trying to use. Refer to your AC unit's original manual.

7. SPECIFICATIONS

Feature	Detail
Model Number	KM15E
Compatible Brands	Mitsubishi
Compatible Models	MSZ-GE22VA, MSZ-GE25VA, E2209C426, and others
Power Source	2 x AAA Batteries (not included)
Dimensions	7 x 2 x 0.65 inches (17.78 x 5.08 x 1.65 cm)
Item Weight	2.3 ounces (65 grams)
Color	White
Special Feature	No programming required



16.2 cm / 6.38 in



This image provides a visual representation of the remote control's physical dimensions, indicating its length, width, and thickness in both centimeters and inches.

8. WARRANTY AND SUPPORT

For warranty information or technical support, please contact the seller or manufacturer directly. Keep your purchase receipt as proof of purchase.

ECONTROLLY KM15E User Manual. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Are there visual descriptions of the operating modes available for the ECONTROLLY KM15E remote, and what icon denotes the air conditioner cooling mode?

The ECONTROLLY KM15E replacement remote for Mitsubishi air conditioners uses standard icons to represent different operating modes. To cycle through these, you must slide down the front panel below the main buttons to access...

[Read full answer](#)