

[Manuals.plus](#) /

› [Lighting EVER](#) /

› Lighting EVER Lepro Bundle User Manual: 1000LM Camping Lantern & PR320019-2 Headlamp

Lighting EVER LE-1000LM Lantern, PR320019-2 Headlamp

Lighting EVER Lepro Bundle User Manual

1000LM BATTERY POWERED LED CAMPING LANTERN & PR320019-2 SUPER BRIGHT HEADLAMP

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your Lighting EVER Lepro Bundle, which includes a 1000LM Battery Powered LED Camping Lantern and a PR320019-2 Super Bright Headlamp. Please read these instructions thoroughly before operating the products and retain this manual for future reference.



Image 1.1: The Lepro Bundle, featuring both the camping lantern and the headlamp.

2. PRODUCT OVERVIEW

2.1 Lepro 1000LM Camping Lantern

The Lepro 1000LM Camping Lantern is a battery-powered LED light designed for outdoor and emergency use, offering versatile illumination options.

Features:

- **High Brightness & Dimmable:** Provides up to 1000 lumens, adjustable by long-pressing the power button.
- **4 Lighting Modes:** Easily switch between Daylight White, Warm White, Full Brightness, and Flashing modes with a short press.
- **Long Battery Life:** Powered by 3 D alkaline batteries (not included), offering up to 12 hours of light at 1000 lumens.
- **Waterproof:** Designed to withstand outdoor conditions.
- **Versatile Hanging Options:** Equipped with a top handle and a bottom hook for various placement needs.

Specifications:

- **Brightness:** 1000 lumens
- **Battery Type:** 3 x D Alkaline batteries (not included)
- **Battery Life:** Up to 12 hours (at 1000 lumens)
- **Water Resistance Level:** Waterproof
- **Material:** Plastic
- **Mounting Type:** Tabletop Mount, Hanging Hook



Image 2.1: The camping lantern providing ambient light inside a tent.


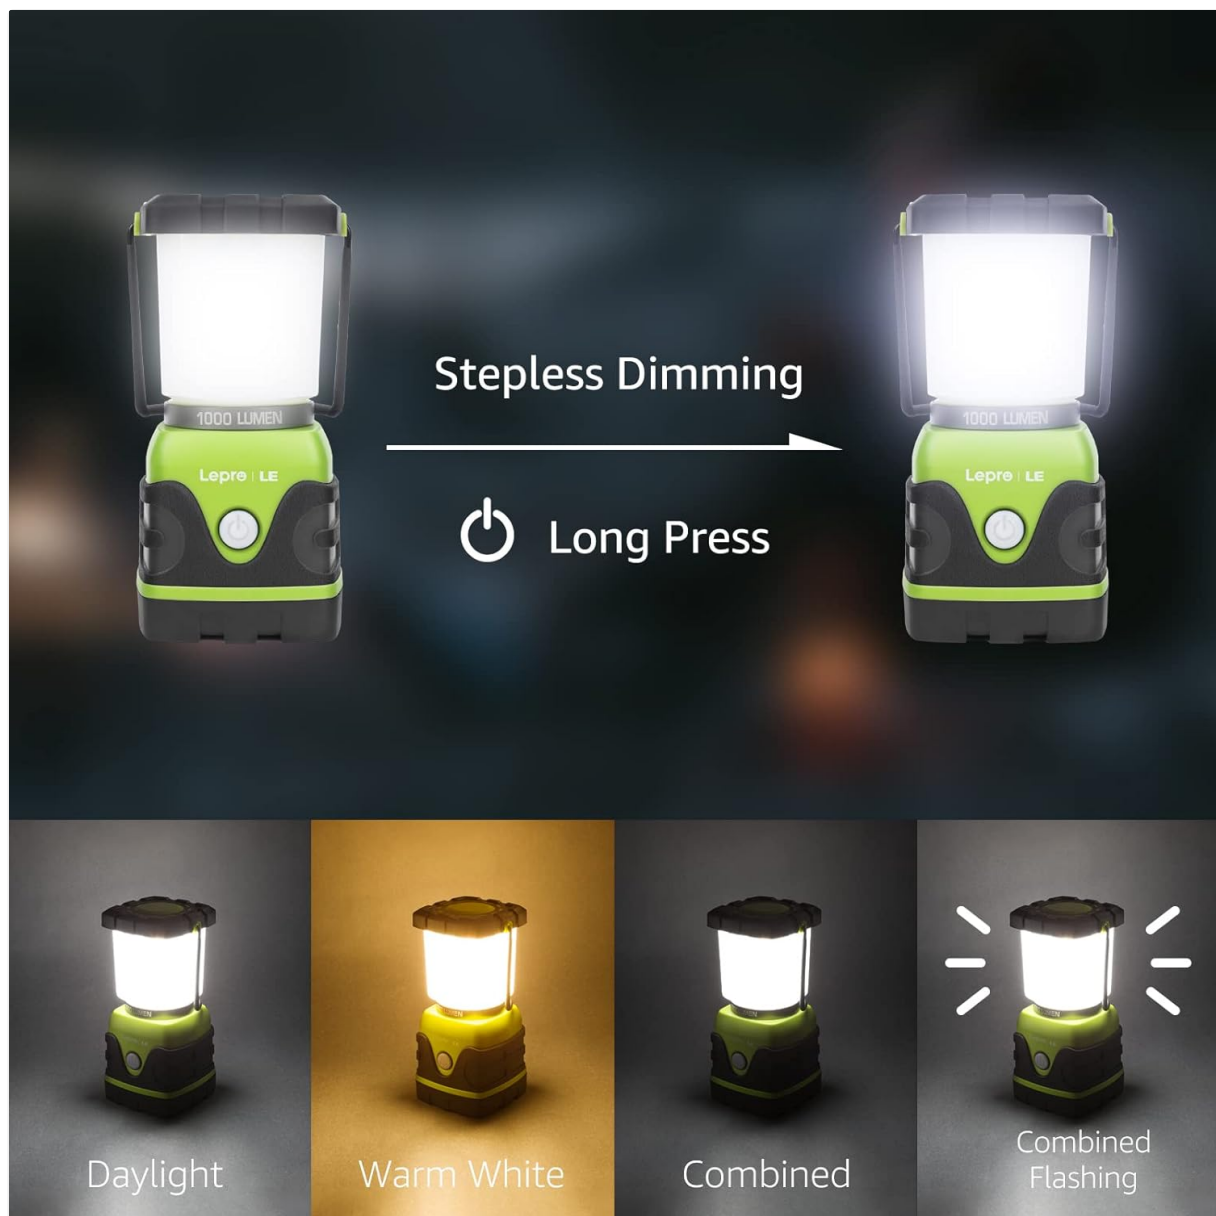


Image 2.2: Visual representation of the lantern's stepless dimming and four light modes.



Bottom Hook

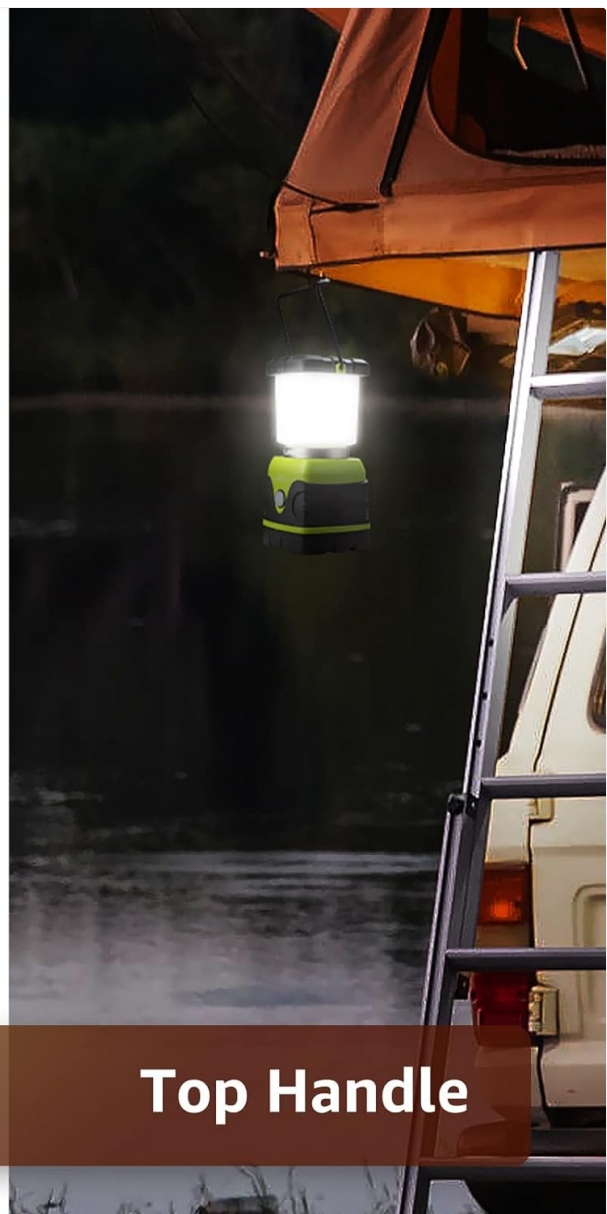

Top Handle

Image 2.3: The lantern's versatile hanging options using its bottom hook and top handle.

2.2 Lepro PR320019-2 Super Bright Headlamp

The Lepro PR320019-2 Headlamp offers powerful and adaptable lighting with hands-free operation, ideal for various activities.

Features:

- **Superior Brightness & 230° Wide Beam:** Delivers 350 lumens with a broad 230° illumination angle.
- **Adjustable Spotlight:** Unique adjustable spotlight for focused lighting on specific areas.
- **Versatile Lighting Modes:** Includes 6 lighting modes: COB light (high/low) and spotlight (high/low).
- **Motion Sensor:** Enables hands-free operation; wave your hand to activate or deactivate the COB light.
- **USB Rechargeable:** Features a 1200mAh battery, rechargeable via Type-C cable (included).
- **IP44 Waterproof and Dustproof:** Provides protection against splashes and dust.

Wide Beam Floodlight & Spotlight

30°
Adjustable



230°
Area
Illumination



Notes: Spotlight & flood light can not be on at the same time

Image 2.4: The headlamp's wide beam and adjustable spotlight capabilities.



Image 2.5: The headlamp's various lighting modes, including motion sensor activation.

3. SETUP

3.1 Lepro 1000LM Camping Lantern: Battery Installation

1. Locate the battery compartment cover at the bottom of the lantern.
2. Twist or slide the cover to open it.
3. Insert 3 new D alkaline batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover securely.



Image 3.1: The lantern's dimensions and required D-size batteries.

3.2 Lepre PR320019-2 Headlamp: Initial Charging

1. Before first use, fully charge the headlamp.
2. Locate the USB-C charging port on the headlamp.
3. Connect the included Type-C USB cable to the headlamp and a suitable USB power source (e.g., wall adapter, power bank, computer USB port).
4. The charging indicator light will show charging status. Allow approximately 4 hours for a full charge.
5. Disconnect the cable once fully charged.

1200mAh USB Rechargeable

Type-C cable included



4 Hours

Fully Charged



4-10 Hrs Usage



Image 3.2: The headlamp connected to a power source for charging.

4. OPERATING INSTRUCTIONS

4.1 Lepro 1000LM Camping Lantern

- **Power On/Off:** Short press the power button to turn the lantern on or off.
- **Change Lighting Mode:** While the lantern is on, short press the power button repeatedly to cycle through Daylight White, Warm White, Full Brightness, and Flashing modes.
- **Dimming:** When the lantern is in any steady light mode (not flashing), long press the power button to adjust the brightness continuously. Release the button when the desired brightness is reached.

4.2 Lepro PR320019-2 Headlamp

- **Power On/Off:** Press the power button to turn the headlamp on or off.
- **Change Lighting Mode:** Short press the power button to cycle through the 6 available lighting modes (COB High, COB Low, Spotlight High, Spotlight Low, etc.).
- **Motion Sensor Activation:** To activate the motion sensor for hands-free control of the COB light, press the dedicated motion sensor button. Once activated, you can wave your hand in front of the sensor to turn the COB light on or off.

- **Adjustable Spotlight:** Manually adjust the angle of the spotlight to direct light as needed.

5. MAINTENANCE

- **Cleaning:** Wipe the exterior of both products with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the lantern and headlamp in a cool, dry place when not in use. For the lantern, remove batteries if storing for extended periods to prevent leakage.
- **Battery Care (Lantern):** Replace D alkaline batteries when the light output diminishes. Always use fresh batteries of the same type.
- **Battery Care (Headlamp):** Recharge the headlamp regularly, especially if it has not been used for a long time, to maintain battery health.

6. TROUBLESHOOTING

- **Lantern not turning on:** Check if D batteries are inserted correctly with proper polarity. Replace with new batteries if necessary.
- **Headlamp not turning on/charging:** Ensure the headlamp is fully charged. Check the USB-C cable and power source for proper connection.
- **Dim light output:** For the lantern, replace batteries. For the headlamp, recharge the battery.
- **Motion sensor not responding:** Ensure the motion sensor feature is activated. Clean the sensor area to remove any obstructions.

7. SAFETY INFORMATION

- Do not look directly into the LED light source to avoid eye injury.
- Keep out of reach of children.
- Do not mix old and new batteries or different types of batteries in the lantern.
- Do not attempt to disassemble or modify the products.
- Ensure the USB-C port cover on the headlamp is securely closed when not charging, especially in wet conditions.
- Dispose of used batteries responsibly according to local regulations.

8. WARRANTY AND SUPPORT

Your Lighting EVER Lepro Bundle products are covered by the manufacturer's warranty. For specific warranty details, product support, or to inquire about replacement parts, please refer to the warranty card included with your purchase or visit the official Lighting EVER website. Please have your product model number and purchase date available when contacting support.