

AGARO 34208

AGARO Elite Upright Wet & Dry Carpet Cleaner Instruction Manual

Model: 34208

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation and maintenance of your AGARO Elite Upright Wet & Dry Carpet Cleaner. Please read all instructions carefully before use and retain this manual for future reference.

Key Features:

- Wet & Dry carpet cleaning with powerful vacuum function.
- 13.5 kPa suction power for effective dirt removal.
- 2.6L clean water tank capacity and 1.3L dirt collection tank.
- 800W motor for robust performance.
- Dual rolling brush for deep cleaning.
- 7-meter long power cord for extended reach.
- Includes upholstery nozzle with hose and handle for versatile cleaning.

2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Read all instructions before using the appliance.
- Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.

- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without filters in place.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your AGARO Elite Carpet Cleaner.

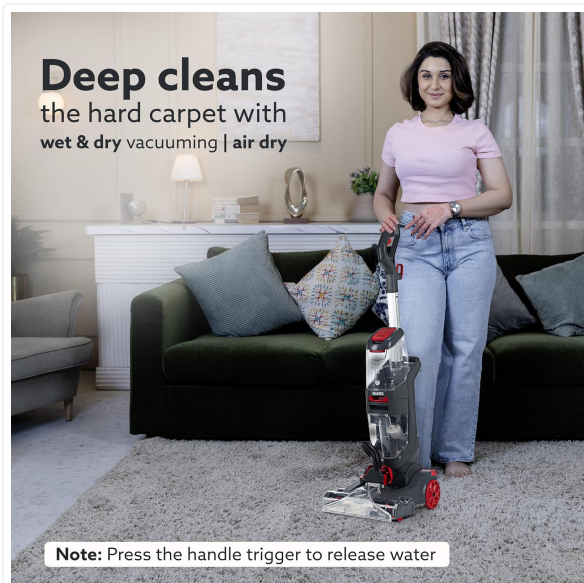


Figure 1: Main Unit and Included Accessories (Upholstery Nozzle with Hose)



Figure 2: Clean Water Tank (2.6L) and Dirty Water Tank (1.3L)



Figure 3: Base Controls: Handle Unlock, Power ON/OFF, Adjustable Water Flow Knob, Hose Connector.



Figure 4: Removable Double Rolling Brush for deep cleaning and easy maintenance.

4. SETUP

1. Handle Assembly:

Remove the screw from the top of the main unit. Insert the handle into the designated slot, ensuring it aligns

with the screw hole. Secure the handle by re-inserting and tightening the screw.

Your browser does not support the video tag.

Video 1: Product Overview and Setup Guide. This video demonstrates the assembly of the handle, attachment of the clean water tank, and cable management. (Relevant segments: 0:15 - 0:30, 3:02 - 3:22)

2. Clean Water Tank Installation:

Place the 2.6L clean water tank onto the top of the main unit, ensuring it clicks securely into place.

3. Cable Management:

Wrap the 7-meter power cord around the two clips located on the top and bottom of the vacuum cleaner's back. Secure the plug by clipping it onto the cable to keep it tidy when not in use.

5. OPERATING INSTRUCTIONS

5.1. Filling the Clean Water Tank:

1. Remove the clean water tank from the main unit.
2. Open the red lid marked "SOLUTION OPEN" on the tank.
3. Pour clean water into the tank up to the "MAX" level indicator.
4. Add your preferred cleaning solution (e.g., carpet shampoo) into the designated solution compartment.
5. Close the lid securely and gently shake the tank to mix the water and solution.
6. Re-install the clean water tank onto the main unit.

5.2. Dry Vacuuming:

1. Plug in the carpet cleaner.
2. Press the handle release button on the left side of the base with your foot to recline the handle.
3. Switch on the power using the ON/OFF button on the right side of the base.
4. Move the vacuum cleaner back and forth over the carpet. Do not press the water spray button on the handle during dry vacuuming.
5. For heavily soiled carpets, wet vacuuming is recommended.

Your browser does not support the video tag.

Video 2: Dry Vacuuming Demonstration. This segment shows how to perform dry vacuuming on a carpet. (Relevant segment: 4:10 - 4:35)

5.3. Wet Vacuuming:

1. Ensure the clean water tank is filled with water and cleaning solution.
2. Switch on the vacuum cleaner.
3. Adjust the water flow using the adjustable water flow knob on the base.
4. Press the water spray button on the handle to release water and cleaning solution onto the carpet.
5. Gently pull the vacuum cleaner backward over the carpet to allow the brushes to scrub and the suction to lift the dirty water.
6. Push the vacuum cleaner forward without pressing the water spray button to allow the suction to work effectively.
7. Repeat the backward and forward motion until the water around the roller brush appears clean, indicating the

carpet is thoroughly cleaned.

8. For stubborn stains, allow the roller brush to sit on the stain for a few seconds before continuing to clean from different directions.

Your browser does not support the video tag.

Video 3: Wet Vacuuming and Stain Removal. This video demonstrates the wet vacuuming process and how to tackle heavy stains. (Relevant segment: 4:36 - 5:36)

5.4. Using the Upholstery Nozzle:

1. Open the hose connector lid on the main unit.
2. Connect the upholstery nozzle hose by pressing the clip on the connector and inserting it into the hose connector.
3. Switch on the vacuum cleaner.
4. Use the water spray button on the upholstery nozzle handle to spray water onto the upholstery.
5. Scrub the upholstery with the brush on the nozzle, then pull the nozzle backward to vacuum the dirty water.
6. Repeat until the upholstery is clean.

Your browser does not support the video tag.

Video 4: Upholstery Cleaning Demonstration. This segment illustrates how to attach and use the upholstery nozzle for cleaning furniture. (Relevant segment: 5:37 - 5:53)

6. MAINTENANCE

6.1. Emptying and Cleaning the Dirty Water Tank:

1. When the dirty water tank reaches its "MAX" level, the vacuum cleaner's suction will automatically stop.
2. Remove the dirty water tank from the main unit.
3. Press the clip on the backside of the tank and lift the lid to empty the dirty water.
4. Rinse the tank thoroughly with clean water.
5. Re-install the clean dirty water tank.

Your browser does not support the video tag.

Video 5: Dirty Water Tank Management. This video shows how to empty and clean the dirty water tank. (Relevant segment: 5:57 - 6:23)

6.2. Cleaning the Roller Brushes:

1. Remove the clear cover over the roller brushes by pressing the clips on both sides.
2. Remove the side cap and gently slide off the belt from the roller brushes.
3. Press the two push buttons on top of the roller brushes and gently pull them out.
4. Clean the roller brushes and the clear cover under running water.
5. Re-assemble the roller brushes, belt, side cap, and clear cover in reverse order.

Your browser does not support the video tag.

Video 6: Roller Brush Cleaning. This video demonstrates the removal and cleaning of the dual rolling brushes. (Relevant segments: 0:53 - 1:36, 6:24 - 6:36)

7. SPECIFICATIONS

Feature	Specification
Brand	AGARO
Model Number	34208
Model Name	Elite
Colour	Grey & Red
Item Weight	6400 Grams
Product Dimensions (D x W x H)	4D x 35W x 62H Centimeters
Power Source Type	Corded Electric
Motor Power	800W
Suction Pressure	13.5 kPa
Clean Water Tank Capacity	2.6 Litres
Dirt Collection Tank Capacity	1.3 Litres
Power Cord Length	7 Meters
Included Components	Main Unit, upholstery nozzle with hose, handle, 2 screws

8. TROUBLESHOOTING

If you encounter any issues with your AGARO Elite Carpet Cleaner, please refer to the following common troubleshooting steps:

- **No Power:** Ensure the power cord is securely plugged into a working 16 Amp outlet. Check if the ON/OFF switch is in the "ON" position.
- **No Suction:**
 - Check if the dirty water tank has reached its maximum fill level. If so, empty it.
 - Ensure all tanks and covers are properly seated and sealed.
 - Inspect the hose for any blockages.
- **No Water Spray:**
 - Check if the clean water tank is filled with water and cleaning solution.
 - Ensure the water flow knob is adjusted to an open position.
 - Verify that the water spray button on the handle or upholstery nozzle is being pressed.
- **Roller Brushes Not Rotating:**
 - Ensure the handle is reclined for operation; the roller brush will not rotate if the handle is locked in the upright position.
 - Check for any obstructions (hair, debris) wrapped around the brushes and clean them as per the maintenance section.
 - Verify the drive belt is correctly installed and not damaged.

If the problem persists after following these steps, please contact AGARO customer support.

9. WARRANTY AND SUPPORT

The AGARO Elite Upright Wet & Dry Carpet Cleaner (Model 34208) typically comes with a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms, conditions, and duration. For customer support, service, or to inquire about replacement parts, please contact AGARO customer care. Contact information can usually be found on the product packaging, the official AGARO website, or within the included user manual.

Manufacturer Contact Information: AGARO, Universal Corporation Limited

Importer Contact Information: Universal Corporation Ltd, 4/1 Middleton Street, Sikkim Commerce House, Kolkata-71