



Manuals.plus /

› Grundig /

› Grundig Xplore Bluetooth Speaker User Manual

## Grundig Xplore 8 Black

# Grundig Xplore Bluetooth Speaker User Manual

Model: Xplore 8 Black

## INTRODUCTION

---

Thank you for choosing the Grundig Xplore Bluetooth Speaker. This manual provides essential information for the safe and efficient use of your device. Please read it thoroughly before operation and keep it for future reference.



Image: The Grundig Xplore Bluetooth Speaker in black, highlighting its robust, portable design.

## PACKAGE CONTENTS

---

Please check the package for the following items:

- Grundig Xplore Black Bluetooth Speaker
- USB-C Cable
- User Manual

## PRODUCT FEATURES

---

- **Impressive Sound:** 8 W RMS total output power with integrated passive radiator for dynamic bass.
- **Extended Bluetooth Range:** Enjoy music up to 30 meters from your smartphone.
- **Power Bank Function:** Charge smart devices on the go (5V and 1A output).
- **Hands-Free Calling:** Integrated microphone for easy call answering.
- **Durable Design:** Robust, dust and water resistant casing with IP67 protection.
- **Long Battery Life:** Up to 15 hours of operation with a 3.7V 2500 mAh lithium-polymer battery.
- **Quick Charging:** Full charge in approximately 3 to 4 hours.



Image: Visual representations of key features: 15+ hours battery life and True Wireless Stereo (TWS) capability.

## SAFETY INFORMATION

---

To ensure safe operation and prevent damage, please observe the following:

- Do not expose the speaker to extreme temperatures or direct sunlight for prolonged periods.
- Despite IP67 rating, avoid submerging the speaker in water for extended durations or at depths beyond 1 meter. Ensure the port cover is securely closed before exposure to water.
- Do not attempt to disassemble or modify the speaker. This will void the warranty and may cause damage.
- Use only the provided USB-C cable or a certified equivalent for charging.
- Keep the speaker away from strong magnetic fields.
- Clean the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents.

## SETUP

---

### 1. Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB-C cable to the speaker's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The battery indicator will show charging status. A full charge takes approximately 3 to 4 hours.



Image: The charging and AUX-in ports located on the side of the speaker, protected by a waterproof flap.

## 2. Bluetooth Pairing

1. Power on the speaker by pressing and holding the power button ( ) until you hear an audible cue.
2. The speaker will automatically enter Bluetooth pairing mode, indicated by a flashing LED light.
3. On your smartphone or other Bluetooth device, enable Bluetooth and search for available devices.
4. Select "Grundig Xplore" from the list of devices.
5. Once paired, the LED light will become solid, and you will hear a confirmation sound.

The speaker has a Bluetooth range of up to 30 meters (100 feet) in open areas.

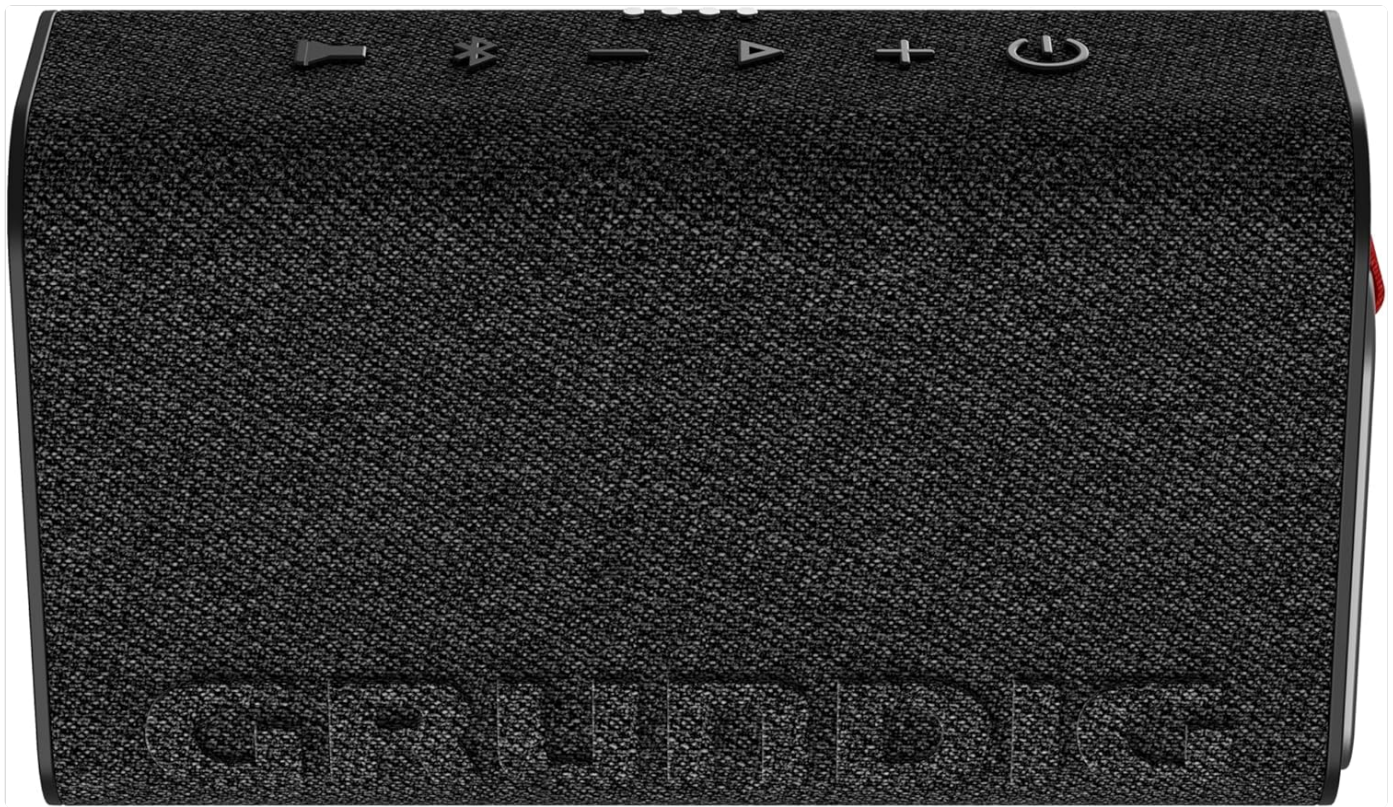


Image: Top panel of the speaker displaying the tactile control buttons for various functions.

### 3. True Wireless Stereo (TWS) Pairing (Optional)

If you have two Grundig Xplore speakers, you can pair them together for a stereo sound experience:

1. Ensure both speakers are powered on and not connected to any other Bluetooth device.
2. On one speaker (this will be the primary speaker), press and hold the Bluetooth button for 3 seconds. It will enter TWS pairing mode.
3. The second speaker will automatically connect to the primary speaker. You will hear a confirmation sound when TWS pairing is successful.
4. Now, connect your smartphone to the primary speaker via Bluetooth as described in step 2.

## OPERATING INSTRUCTIONS

---

### Power On/Off

- Press and hold the Power button ( ) for 2 seconds to turn the speaker on or off.

### Music Playback

- **Play/Pause:** Press the Play/Pause button (▶) once.
- **Volume Up:** Press the Volume Up button (⊕).
- **Volume Down:** Press the Volume Down button (⊖).
- **Next Track:** Press and hold the Volume Up button (⊕).
- **Previous Track:** Press and hold the Volume Down button (⊖).

### Hands-Free Calling

- **Answer Call:** Press the Play/Pause button (▶) once when a call comes in.
- **End Call:** Press the Play/Pause button (▶) once during a call.
- **Reject Call:** Press and hold the Play/Pause button (▶) for 2 seconds.

## Power Bank Function

The speaker can be used as a power bank to charge your smartphone or other small devices. Connect your device to the speaker's USB-A output port (located under the protective flap) using an appropriate charging cable. The speaker provides 5V and 1A output.

## Water and Dust Resistance (IP67)

The Grundig Xplore speaker is rated IP67, meaning it is fully protected against dust ingress and can withstand immersion in water up to 1 meter for up to 30 minutes. Ensure the protective flap covering the charging and AUX ports is securely closed before exposing the speaker to water or dust.

## MAINTENANCE

---

- **Cleaning:** Wipe the speaker with a soft, damp cloth. Do not use harsh chemicals or abrasive materials.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Speaker does not turn on.	Low battery.	Charge the speaker fully.
No sound.	Volume too low; device not paired; incorrect input source.	Increase volume on speaker and connected device. Re-pair Bluetooth. Ensure correct mode if using AUX.
Bluetooth connection unstable or fails.	Device too far; interference; pairing issue.	Move device closer to speaker. Avoid obstacles. Forget device on your phone and re-pair.
Power bank function not working.	Speaker battery low; incorrect cable; device not compatible.	Ensure speaker has sufficient charge. Use a compatible charging cable. Check device compatibility.

## SPECIFICATIONS

---

Feature	Detail
Model Name	Xplore Black
Bluetooth Version	V5.3
Output Power	8 W RMS
Speaker Size	4.2 cm
Battery Type	Lithium-Polymer
Battery Capacity	3.7 V, 2500 mAh
Playback Time	Up to 15 hours
Charging Time	3-4 hours
Bluetooth Range	Up to 30 meters
Power Bank Output	5 V, 1 A
Water/Dust Resistance	IP67
Dimensions (L x W x H)	3.6 x 9.7 x 7.9 cm
Weight	240 grams
Material	Plastic
Color	Black

## WARRANTY AND SUPPORT

---

Grundig products are designed for reliability and performance. For warranty information or technical support, please refer to the warranty card included in your package or visit the official Grundig website. Keep your proof of purchase for warranty claims.

For further assistance, you may contact Grundig customer support through their official channels.