

[Manuals.plus](#) /

› [Dyson](#) /

› Dyson Supersonic Hair Dryer Model 560711-01 Instruction Manual

Dyson 560711-01

Dyson Supersonic™ Hair Dryer Instruction Manual

Model: 560711-01

INTRODUCTION

The Dyson Supersonic™ Hair Dryer is engineered for fast drying and precise styling without extreme heat. Its intelligent heat control system measures airflow temperature over 40 times a second to prevent heat damage, helping to protect your hair's natural shine. This manual provides essential information for the safe and effective use of your hair dryer and its attachments.

Key features include:

- **Fast Drying:** Utilizes a high-pressure, high-velocity jet of controlled air.
- **Intelligent Heat Control:** Prevents extreme heat damage.
- **Versatile Styling:** Comes with 5 magnetic attachments for various hair types and styles.
- **Precise Settings:** Features 4 heat settings and 3 airflow speeds, plus a cold shot.

WHAT'S IN THE BOX

Your Dyson Supersonic™ Hair Dryer package includes the following components:

- 1 x Dyson Supersonic™ Hair Dryer (Prussian Blue)
- 1 x Flyaway attachment
- 1 x Styling concentrator
- 1 x Diffuser
- 1 x Gentle air attachment
- 1 x Smoothing nozzle
- 1 x Presentation case

Flyaway attachment



Hides flyaways under longer hair
to give you a smooth, shiny finished look.

Image: The Dyson Supersonic Hair Dryer in Prussian Blue, accompanied by its five magnetic attachments (Flyaway, Styling Concentrator, Diffuser, Gentle Air, Smoothing Nozzle) and a matching presentation case.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Inspect:** Check the hair dryer and attachments for any signs of damage. Do not use if damaged.
3. **Power Connection:** Plug the hair dryer into a suitable electrical outlet. Ensure the voltage matches your region's power supply. *Note: Some regions may require a specific plug type. Verify compatibility before use.*
4. **Attach Accessories:** The attachments are magnetic and easily snap onto the front of the hair dryer. Rotate them to the desired orientation.

OPERATING INSTRUCTIONS

The Dyson Supersonic™ Hair Dryer features intuitive controls for heat and airflow speed, allowing for customized styling.



Image: Detailed view of the Dyson Supersonic Hair Dryer's control buttons, indicating the 3 speed settings, 4 heat settings, and the cold shot button.

Controls:

- **Power Button:** Located on the handle. Press to turn the dryer on or off.
- **Airflow Speed Button:** Located on the back of the head. Press to cycle through 3 precise speed settings:
 - High: For fast drying and styling.
 - Medium: For regular drying.
 - Low: For diffusing.
- **Heat Settings Button:** Located on the back of the head. Press to cycle through 4 precise heat settings:
 - 100°C: Fast drying and styling.
 - 80°C: Regular drying.
 - 60°C: Cooler drying and diffusing.
 - 28°C: Constant cold.
- **Cold Shot Button:** Located on the handle. Press and hold for a burst of cold air (28°C) to set your style after drying.

General Usage:

1. Ensure your hair is towel-dried before using the hair dryer.
2. Select your desired heat and speed settings.
3. Direct the airflow towards your hair, moving the dryer continuously to avoid concentrating heat in one area.
4. Use the cold shot to finish your style and add shine.

ATTACHMENTS GUIDE

The Dyson Supersonic™ Hair Dryer comes with five magnetic attachments designed for different styling needs. All attachments are magnetic for easy fitting and 360° rotation.

1. Flyaway Attachment



Image: The Dyson Supersonic Hair Dryer with the Flyaway attachment, designed to smooth hair.

The Flyaway attachment is designed to hide flyaways under longer hair, creating a smooth, shiny finished look. Use on dry, straight hair for best results.

2. Styling Concentrator

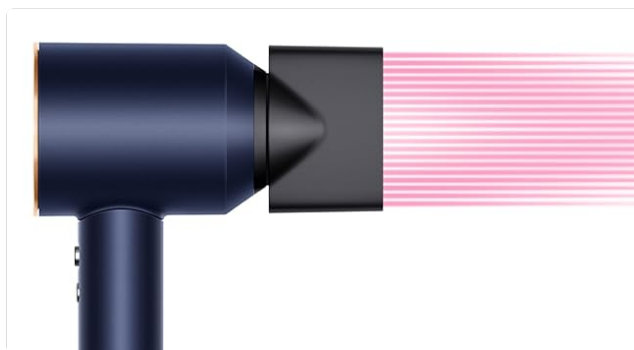


Image: The Dyson Supersonic Hair Dryer with the Styling Concentrator attachment, which provides a focused airflow.

The Styling Concentrator creates a focused blade of air, allowing you to style one section of hair at a time without disturbing the rest. Ideal for precision styling.

3. Diffuser



Image: The Dyson Supersonic Hair Dryer with the Diffuser attachment, designed for even air distribution.

The Diffuser simulates natural drying, helping to reduce frizz and define curls and waves. Use on a low speed and medium heat setting, gently moving the diffuser through your hair.

4. Gentle Air Attachment

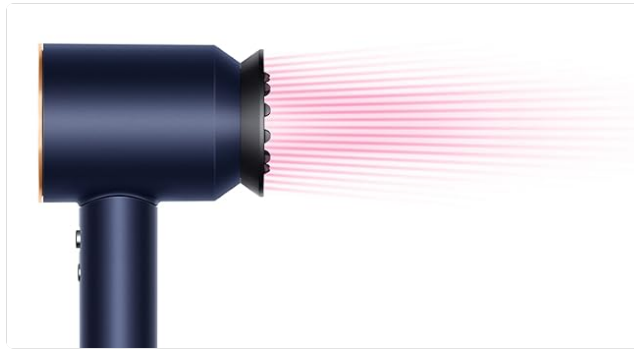


Image: The Dyson Supersonic Hair Dryer with the Gentle Air attachment, providing a softer airflow.

Engineered to be kinder to fine hair and sensitive scalps, the Gentle Air attachment creates a gentle, cooler airflow while still drying hair fast.

5. Smoothing Nozzle

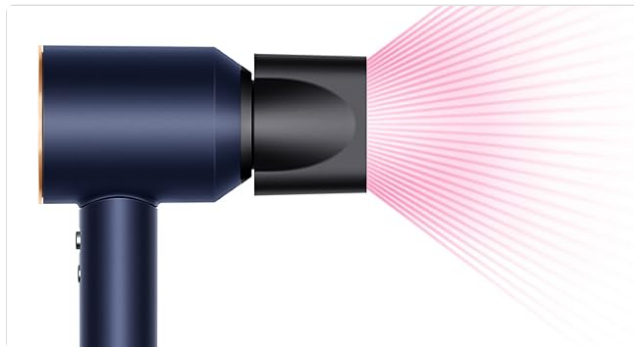


Image: The Dyson Supersonic Hair Dryer with the Smoothing Nozzle attachment, designed for a smooth finish.

The Smoothing Nozzle dries hair with controlled, smooth airflow, helping to create a smooth, natural finish. Use with a round brush for best results.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your Dyson Supersonic™ Hair Dryer.

- **Filter Cleaning:** The hair dryer has a removable filter cage at the bottom of the handle. Twist and pull down the filter cage. Wipe the filter mesh with a soft, dry cloth to remove any dust or hair product residue. Ensure the filter is clean before reattaching. Clean regularly, especially if you notice reduced airflow.
- **Exterior Cleaning:** Wipe the exterior of the hair dryer and attachments with a soft, damp cloth. Do not use abrasive cleaners or immerse the dryer in water.
- **Storage:** Store the hair dryer and its attachments in a dry place, away from direct sunlight and moisture. Use the provided presentation case for protection.

TROUBLESHOOTING

If you encounter issues with your Dyson Supersonic™ Hair Dryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Hair dryer not turning on.	No power supply; faulty outlet; power button not pressed correctly.	Check power cord connection. Try a different outlet. Ensure power button is fully pressed.
Reduced airflow or overheating.	Blocked filter; internal overheating protection activated.	Clean the filter as described in the Maintenance section. If overheating, turn off the dryer and allow it to cool down for at least 30 minutes before restarting.
Attachments not staying on.	Attachments not properly aligned; magnetic connection issues.	Ensure attachments are clean and dry. Align them correctly with the magnetic ring on the dryer.
Incorrect plug type for region.	Product purchased from a region with different electrical standards.	Verify the plug type is compatible with your local electrical outlets. Contact Dyson support or your retailer if an incorrect plug was supplied.

SPECIFICATIONS

Feature	Detail
Model Number	560711-01
Product Dimensions	9.7 x 7.8 x 24.5 cm
Item Weight	655 g
Colour	Prussian Blue
Material	Copper (accents)
Wattage	1600 W
Power Source	Corded Electric
Number of Speed Settings	3
Number of Heat Settings	4 (including cold shot)
Maximum Temperature	100°C
Hair Type Compatibility	All hair types
Country of Origin	Malaysia

WARRANTY AND SUPPORT

Your Dyson Supersonic™ Hair Dryer comes with a **2-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical support, or any product-related inquiries, please contact Dyson Customer Service:

- **Manufacturer:** Dyson
- **Importer/Packer:** Dyson Technology India Pvt Ltd
- Refer to your product registration details or the official Dyson website for specific contact information in your region.

Please retain your proof of purchase for warranty purposes.