

[Manuals.plus](#) /

› [Alessi](#) /

› Alessi Plissé MDL16 B Digital Kitchen Scale User Manual

Alessi MDL16 B

Alessi Plissé MDL16 B Digital Kitchen Scale User Manual

Model: MDL16 B

INTRODUCTION

The Alessi Plissé MDL16 B Digital Kitchen Scale is designed for precise weighing in your kitchen. Featuring a unique pleated design by Michele De Lucchi, this scale combines functionality with aesthetic appeal. It includes a rechargeable battery, USB-C charging port, and an innovative system for both countertop use and wall mounting. The integrated display with touch controls allows for easy operation, including unit selection and tare function.

PACKAGE CONTENTS

- Alessi Plissé MDL16 B Digital Kitchen Scale
- USB-C Charging Cable
- Wall Mount Bracket (optional installation)
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the components of your Alessi Plissé Digital Kitchen Scale.



Image 1: The Alessi Plissé MDL16 B Digital Kitchen Scale shown with its accompanying wall mount bracket. The scale features a circular design with a pleated edge and a smooth weighing surface.

- **Weighing Surface:** Tempered glass surface for placing items to be weighed.
- **Integrated Display:** Digital screen showing weight measurements and unit indicators.
- **Touch Controls:** Two touch-sensitive buttons for power/tare and unit selection.
- **USB-C Port:** Located on the side for recharging the internal battery.
- **Wall Mount Slot:** Integrated slot on the back for hanging the scale on the wall bracket.

SETUP

1. Initial Charging

Before first use, fully charge the scale. Connect the provided USB-C cable to the scale's USB-C port and plug the other end into a compatible USB power adapter (not included). The display will indicate charging status. A full charge ensures optimal battery performance.

2. Placement Options

The scale can be used on a flat countertop or mounted on a wall.



Image 2: Scale placed on a kitchen countertop, ready for use.



Image 3: Scale mounted on a kitchen wall, saving counter space.

3. Wall Mount Installation (Optional)

To mount the scale on a wall:

1. Choose a suitable location on a sturdy wall, away from heat sources or direct sunlight.
2. Securely fasten the wall mount bracket to the wall using appropriate screws and anchors (not included, choose based on wall material). Ensure the bracket is level.
3. Align the slot on the back of the scale with the bracket and gently slide the scale onto the bracket until it is securely seated.

OPERATING INSTRUCTIONS

1. Power On/Off

Press the left touch button (marked with a circle and vertical line) to turn the scale on. The display will illuminate and show '0 g' or the last used unit. To turn off, press and hold the same button for a few seconds until the display turns off. The scale will automatically shut off after a period of inactivity to conserve battery.



Image 4: Close-up of the scale's digital display showing '0 g', indicating it is ready for weighing.

2. Changing Units

With the scale powered on, press the right touch button (marked with a 'U' or unit symbol) to cycle through available units of measurement. The scale supports grams (g) and kilograms (kg). Some models may also support pounds (lb) and ounces (oz).



Image 5: Close-up of the scale's digital display showing 'lb oz', indicating the unit of measurement.

3. Tare Function

The tare function allows you to weigh multiple ingredients in the same container or to subtract the weight of a container. Place an empty container on the weighing surface. Once the weight stabilizes, press the left touch button (power/tare button) briefly. The display will reset to '0', indicating the container's weight has been tared. You can now add ingredients, and only their weight will be displayed.

4. Weighing Procedure

1. Place the scale on a flat, stable surface or ensure it is securely wall-mounted.
2. Press the power button to turn on the scale.
3. Select your desired unit of measurement using the unit button.
4. If using a container, place it on the scale and press the tare button.
5. Carefully place the item(s) to be weighed onto the center of the weighing surface.
6. Read the stable weight displayed on the screen.

MAINTENANCE

Cleaning

Wipe the scale with a soft, damp cloth. Do not use abrasive cleaners or immerse the scale in water. The tempered glass surface and thermoplastic resin body are easy to clean.

Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Recharge the scale when the low battery indicator appears. Store the scale in a cool, dry place if not used for extended periods.

TROUBLESHOOTING

- **Scale not turning on:** Ensure the battery is charged. Connect the USB-C cable and charge for at least 30 minutes before attempting to power on again.
- **Inaccurate readings:** Ensure the scale is on a flat, stable surface. Avoid placing it near vibrating appliances or in drafts. Recalibrate by turning the scale off and on. Ensure the tare function is used correctly if weighing in a container.
- **Display shows 'Err':** This may indicate an overload. Remove items from the scale immediately. The maximum weight capacity is 5 kg.
- **Display is dim or flickering:** The battery may be low. Recharge the scale using the USB-C cable.

SPECIFICATIONS

Model:	MDL16 B
Brand:	Alessi
Material:	Thermoplastic Resin, Tempered Glass
Display Type:	Digital
Maximum Weight Capacity:	5 Kilograms
Reading Precision:	1 gram
Battery Type:	Integrated Rechargeable
Charging Port:	USB-C
Dimensions:	Height 2.8 cm, Diameter 27.5 cm
Item Weight:	1.64 Kilograms

WARRANTY AND SUPPORT

This product is covered by a manufacturer's warranty. For specific warranty terms and conditions, please refer to the documentation provided with your purchase or visit the official Alessi website. For technical support or service inquiries, please contact Alessi customer service through their official channels.

IMPORTANT SAFETY INFORMATION

- Do not exceed the maximum weight capacity of 5 kg.

- Keep the scale away from water and extreme temperatures.
- Do not attempt to disassemble or repair the scale yourself. Contact qualified personnel for service.
- Keep out of reach of children.
- Use only the provided USB-C cable for charging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question