

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Sunbeam](#) /

› [Sunbeam Rise and Shine Kettle and Toaster Set User Manual](#)

## Sunbeam PUP3100BK

# Sunbeam Rise and Shine Kettle and Toaster Set User Manual

Model: PUP3100BK

## INTRODUCTION

---

Thank you for purchasing the Sunbeam Rise and Shine Kettle and Toaster Set. This set is designed to provide convenience and style to your kitchen, allowing you to prepare hot beverages and toast simultaneously. This manual provides important information on the safe operation, maintenance, and care of your new appliances.

## IMPORTANT SAFETY INFORMATION

---

Please read all instructions carefully before using the appliances and retain them for future reference. Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons.

- Do not immerse the kettle, power base, or toaster in water or any other liquid.
- Ensure the voltage rating on the appliance corresponds to your mains supply voltage.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Keep cords away from hot surfaces.
- Always unplug the appliances from the power outlet when not in use and before cleaning.
- The kettle features a **3-way safety system** to prevent boil-dry and overheating.
- Do not place the appliances on or near a hot gas or electric burner, or in a heated oven.
- Use the appliances only for their intended household use.

## PRODUCT OVERVIEW

---

The Sunbeam Rise and Shine Kettle and Toaster Set features a sleek contemporary design with a glossy textured finish and high shine chrome accents.

## Kettle Components



**Figure 1:** Side view of the Sunbeam Rise and Shine Kettle, showcasing its black finish and horizontal textured lines.



**Figure 2:** Angled view of the Sunbeam Rise and Shine Kettle, highlighting the clear water level indicator on the side, marked for capacities up to 1.7 liters.

- **Lid:** Push-button release for easy filling.
- **Water Window:** Clear indicator for precise water level measurement, up to 1.7L capacity (approximately 7 standard cups).
- **Handle:** Ergonomically designed for comfortable pouring.
- **Power Base:** Cordless design with a 360-degree rotational base for easy placement.
- **Concealed Element:** 2400W concealed heating element for rapid boiling.

## Toaster Components



**Figure 3:** Top-down view of the Sunbeam Rise and Shine 4-slice Toaster, showing the wide self-centring bread slots and control buttons.



**Figure 4:** Angled view of the Sunbeam Rise and Shine Toaster, displaying its sleek black design, control dials, and levers.

- **Bread Slots:** Four wide, self-centring slots for even toasting of various bread types.
- **Browning Control Dials:** Two independent dials with 7 browning settings for customized toast.
- **High-Lift Lever:** Allows for easy removal of smaller items.
- **Function Buttons:**
  - **Cancel:** Stops the toasting cycle immediately.
  - **Reheat:** Warms toast without further browning.
  - **Defrost:** Toasts frozen bread.
  - **QuickCheck:** Allows you to check toast progress without interrupting the cycle.
- **Crumb Tray:** Removable tray for easy cleaning.

## SETUP

1. **Unpacking:** Carefully remove all packaging materials from the kettle and toaster. Retain packaging for storage or disposal.
2. **Initial Cleaning:**
  - **Kettle:** Before first use, fill the kettle with water to the MAX level, boil, and then discard the water. Repeat this process two to three times to remove any manufacturing residues.
  - **Toaster:** Wipe the exterior with a damp cloth. Operate the toaster for a few cycles without bread on the highest

setting to burn off any manufacturing odors. Ensure adequate ventilation during this process.

3. **Placement:** Place both appliances on a stable, flat, heat-resistant surface, away from the edge of the countertop and out of reach of children. Ensure there is sufficient space around the appliances for ventilation.
4. **Power Connection:** Plug the power cords into a suitable grounded electrical outlet.

## OPERATING INSTRUCTIONS

---

### Kettle Operation

1. **Filling:** Press the lid release button to open the lid. Fill the kettle with the desired amount of fresh water, ensuring it is between the MIN and MAX fill lines on the water window. Close the lid securely.
2. **Placement on Base:** Place the kettle firmly onto its 360-degree power base.
3. **Boiling:** Press the ON/OFF switch downwards. The indicator light will illuminate, indicating the kettle is heating.
4. **Automatic Shut-off:** The kettle will automatically switch off once the water has boiled. The indicator light will extinguish.
5. **Pouring:** Carefully lift the kettle from the base and pour the hot water. Be cautious of steam escaping from the spout.
6. **Re-boiling:** If the kettle has just boiled, allow a few moments for the internal thermostat to reset before attempting to re-boil.

### Toaster Operation

1. **Loading Bread:** Place slices of bread or other items into the wide toasting slots. The self-centring guides will automatically adjust to hold the bread evenly.
2. **Select Browning Setting:** Turn the browning control dial to your desired setting, from 1 (lightest) to 7 (darkest). Start with a medium setting (e.g., 3 or 4) and adjust as needed for future use.
3. **Start Toasting:** Press the toast lever down until it latches. The indicator light for the selected function (if any) will illuminate, and the toasting cycle will begin.
4. **Using Function Buttons:**
  - **Defrost:** Press this button after lowering the lever for frozen bread. The defrost light will illuminate.
  - **Reheat:** Press this button after lowering the lever to warm already toasted bread. The reheat light will illuminate.
  - **Cancel:** Press this button at any time to stop the toasting cycle and eject the toast.
  - **QuickCheck:** Lift the lever momentarily to check toast progress without cancelling the cycle. The lever will automatically return to the down position.
5. **Removing Toast:** Once the toasting cycle is complete, the toast will automatically pop up. Use the high-lift lever to raise smaller items for easier removal.

## MAINTENANCE AND CLEANING

---

Regular cleaning will help maintain the performance and appearance of your Sunbeam appliances.

1. **Always Unplug:** Before cleaning, ensure both the kettle and toaster are unplugged from the power outlet and have cooled down completely.
2. **Exterior Cleaning:** Wipe the exterior surfaces of both appliances with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as these can damage the finish.

3. **Kettle Descaling:** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas.
- Fill the kettle with a solution of one part white vinegar to two parts water.
  - Bring the solution to a boil and let it stand for at least 30 minutes, or longer for heavy build-up.
  - Empty the kettle and rinse thoroughly with fresh water several times.
  - For stubborn deposits, a commercial descaling agent designed for kettles can be used following the product's instructions.
4. **Toaster Crumb Tray:** The crumb tray is located at the bottom of the toaster.
- Slide out the crumb tray.
  - Discard crumbs.
  - Wipe the tray clean with a damp cloth and dry thoroughly before reinserting.
  - Never operate the toaster without the crumb tray in place.
5. **Cord Storage:** Both the kettle power base and toaster have built-in cord storage at their base to keep your countertop neat when not in use.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle not boiling / Toaster not operating.	Not plugged in; power outlet not active; kettle not properly seated on base; toaster lever not latched.	Check power plug and outlet; ensure kettle is correctly placed on base; push toaster lever down until it clicks.
Kettle switches off before boiling.	Kettle has limescale build-up; lid not closed properly.	Descal the kettle (refer to Maintenance section); ensure lid is securely closed.
Toast is too light/dark.	Browning setting is too low/high.	Adjust the browning control dial to a higher or lower setting.
Smoke coming from toaster.	Crumbs accumulated in the bottom; food lodged in slots.	Unplug and allow to cool. Remove crumb tray and clean. Carefully remove any lodged food (do not use metal utensils).
Kettle has an unusual taste or odor.	New appliance odor; mineral deposits.	Perform initial cleaning steps again (boil and discard water several times); descale the kettle.

## SPECIFICATIONS

Feature	Detail
Brand	Sunbeam
Model Number	PUP3100BK
Colour	Black
Material	Plastic

Feature	Detail
Power/Wattage	2400 watts (Kettle)
Kettle Capacity	1.7 Liters
Toaster Slices	4
Browning Settings	7
Product Dimensions (approx.)	52D x 26W x 34H centimetres (for the set)
Item Weight (approx.)	4.36 kg (for the set)

## WARRANTY AND SUPPORT

---

Sunbeam products are designed to meet high quality standards. For information regarding warranty coverage, product registration, or technical support, please refer to the warranty card included with your purchase or visit the official Sunbeam website.

For customer service inquiries, please contact Sunbeam customer support through their official channels. Keep your proof of purchase for any warranty claims.

**Online Resources:** [www.sunbeam.com.au](http://www.sunbeam.com.au)