

[Manuals.plus](#) /

> [Funsicle](#) /

> Funsicle 14 Foot x 42 Inch Oasis Designer Outdoor Round Above Ground Swimming Pool User Manual

Funsicle 325412306

Funsicle 14 Foot x 42 Inch Oasis Designer Outdoor Round Above Ground Swimming Pool User Manual

Model: 325412306 | Brand: Funsicle

INTRODUCTION

This manual provides essential information for the safe and efficient setup, operation, and maintenance of your Funsicle 14 Foot x 42 Inch Oasis Designer Outdoor Round Above Ground Swimming Pool. Please read all instructions carefully before assembly and use to ensure proper function and longevity of your pool.



Image: The Funsicle 14 Foot x 42 Inch Oasis Designer Outdoor Round Above Ground Swimming Pool, showcasing its natural teak print liner and sturdy frame.

IMPORTANT SAFETY INFORMATION

WARNING: Failure to follow these instructions can result in serious injury or death.

- Always supervise children in and around the pool.

- Do not dive or jump into the pool. The water depth is not sufficient for diving.
- Ensure the pool is set up on a level, solid surface free of sharp objects.
- Keep all electrical devices away from the pool.
- Regularly check the pool structure, ladder, and pump for damage.
- Maintain proper water chemistry to prevent health issues.
- Secure the pool area to prevent unsupervised access.

PACKAGE CONTENTS

Verify that all components listed below are present and undamaged before beginning assembly.

- Pool Liner (Natural Teak Print)
- Frame Poles (SmartConnect Technology)
- SkimmerPlus SFX1000 Filter Pump (110-120V)
- Type C Filter Cartridge
- SureStep Ladder
- Pool Cover
- Ground Cloth
- Deluxe Maintenance Kit (includes pole, vacuum head, skimmer net, hose, clamps)

Oasis Designer Pool Set Features:



SmartConnect®

Durable oval-shaped design
with click in easy assembly

Pool cover

Keeps out debris, leaves & insects,
and reduces water evaporation




SureStep™ ladder

Convenient in &
out access

Ground cloth

Minimizes dirt & particles
tracked into pool

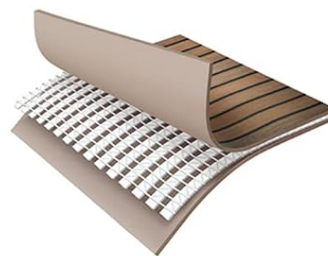

Durable puncture-resistant liner

3-layered: Polyester mesh
between heavy gauge
PVC materials

Image: Overview of the FunSicle Oasis Designer Pool Set features, including the SmartConnect frame, pool cover, ground cloth, SureStep ladder, and the durable puncture-resistant liner.



Image: The SkimmerPlus filter pump and a Type C filter cartridge, essential for water filtration.

Removable
Ladder



Image: The removable SureStep ladder, providing safe and convenient access to the pool.



Image: Components of the Deluxe maintenance kit, including a telescopic pole, vacuum head, skimmer net, hose, and clamps.

SETUP INSTRUCTIONS

1. Site Preparation

1. Choose a flat, level area in your yard, away from overhead power lines, trees, and structures.
2. Clear the area of all debris, rocks, and sharp objects.
3. Lay down the included ground cloth to protect the pool liner from punctures.

2. Pool Assembly

1. Unfold the pool liner and spread it evenly over the ground cloth, ensuring the drain plug is accessible.
2. Assemble the frame poles using the SmartConnect technology. The oval poles snap together easily without tools.
3. Insert the assembled poles through the liner sleeves as indicated in the detailed diagram provided in your physical manual.
4. Connect all frame components securely to form the pool structure.
5. Attach the SkimmerPlus filter pump to the designated port on the pool sidewall. Ensure all connections are tight.
6. Assemble the SureStep ladder according to its separate instructions and place it securely against the pool.

OPERATING INSTRUCTIONS

1. Filling the Pool

1. Once the pool structure is fully assembled and stable, begin filling the pool with water.
2. Fill the pool to the recommended water level, typically indicated by a fill line on the liner or just below the top rail. The pool has a capacity of approximately 3,357 gallons.
3. As the pool fills, smooth out any wrinkles in the bottom of the liner.

2. Filter Pump Operation (SkimmerPlus SFX1000)

1. Ensure the filter pump is properly connected and the Type C filter cartridge is installed.
2. Plug the pump into a grounded electrical outlet. Do not use extension cords.
3. The SkimmerPlus pump combines skimming and filtration. The skimmer basket will collect larger debris from the water surface.
4. The filter cartridge inside the pump will capture smaller particles, ensuring clean water.
5. Run the pump daily for several hours to maintain water clarity. The exact duration depends on usage and environmental conditions.

Includes our exclusive 2 in 1 side-mounted SkimmerPlus® filter pump



1. Skimmer basket picks up debris, leaves & insects



2. Filter cartridge captures small particles



Look for
Funicle filters
Type

C

**1000
GPH**

Combines the functions of a skimmer & filter pump in one unit
Filter pump attaches to pool sidewall for easy maintenance
and efficient space

Image: Detailed diagram illustrating the two-in-one function of the SkimmerPlus filter pump, showing how the skimmer basket collects debris and the filter cartridge captures small particles.

MAINTENANCE

1. Water Chemistry

- Regularly test pool water using a test kit to check pH, chlorine, and alkalinity levels.
- Adjust chemical levels as needed to maintain a balanced and sanitary swimming environment.
- Consult a pool chemical guide for recommended levels and treatment procedures.

2. Filter Cartridge Cleaning and Replacement

- Turn off and unplug the filter pump before performing any maintenance.
- Remove the Type C filter cartridge from the SkimmerPlus pump.
- Rinse the cartridge thoroughly with a garden hose to remove debris.
- Replace the filter cartridge every 2-4 weeks, or more frequently with heavy use, to ensure optimal filtration.

3. Pool Cleaning

- Use the included Deluxe maintenance kit to remove debris from the pool.
- Use the skimmer net to remove floating debris from the surface.
- Attach the vacuum head to the telescopic pole and connect it to the pump's suction port (if applicable) or use a garden hose for manual vacuuming to clean the pool floor.

4. Winterization and Storage

- Before freezing temperatures, drain the pool completely using the 2-in-1 drainage plug.
- Clean and dry all pool components thoroughly.
- Disassemble the frame and liner, and store them in a dry, protected area to prevent damage and prolong product life.

TROUBLESHOOTING GUIDE

Refer to the table below for common issues and their solutions.

Problem	Possible Cause	Solution
Pump not running	Not plugged in; Power outage; GFCI tripped; Motor overheated	Check power connection; Restore power; Reset GFCI; Allow motor to cool
Water is cloudy	Dirty filter cartridge; Improper chemical balance; Insufficient pump run time	Clean or replace filter; Test and adjust water chemistry; Increase pump run time
Water leaking from connections	Loose clamps; Damaged O-rings/gaskets	Tighten clamps; Inspect and replace O-rings/gaskets if damaged
Pool liner tear/puncture	Sharp object; Wear and tear	Locate and repair with a vinyl repair kit. For large tears, contact customer support.

PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	325412306
Dimensions	14 Foot Diameter x 42 Inch Height (168"L x 42"W x 168"H)
Water Capacity	3,357 Gallons
Shape	Round
Color/Design	Natural Teak Print
Material	3-ply ToughMesh (Heavy Gauge PVC, Polyester Mesh)
Filter Pump	SkimmerPlus SFX1000 (110-120V)
Included Accessories	SureStep Ladder, Pool Cover, Ground Cloth, Deluxe Maintenance Kit
Assembly Required	Yes
Indoor/Outdoor Usage	Outdoor



Image: The Funsicle pool indicating its 42-inch height, providing a clear visual of its dimensions.

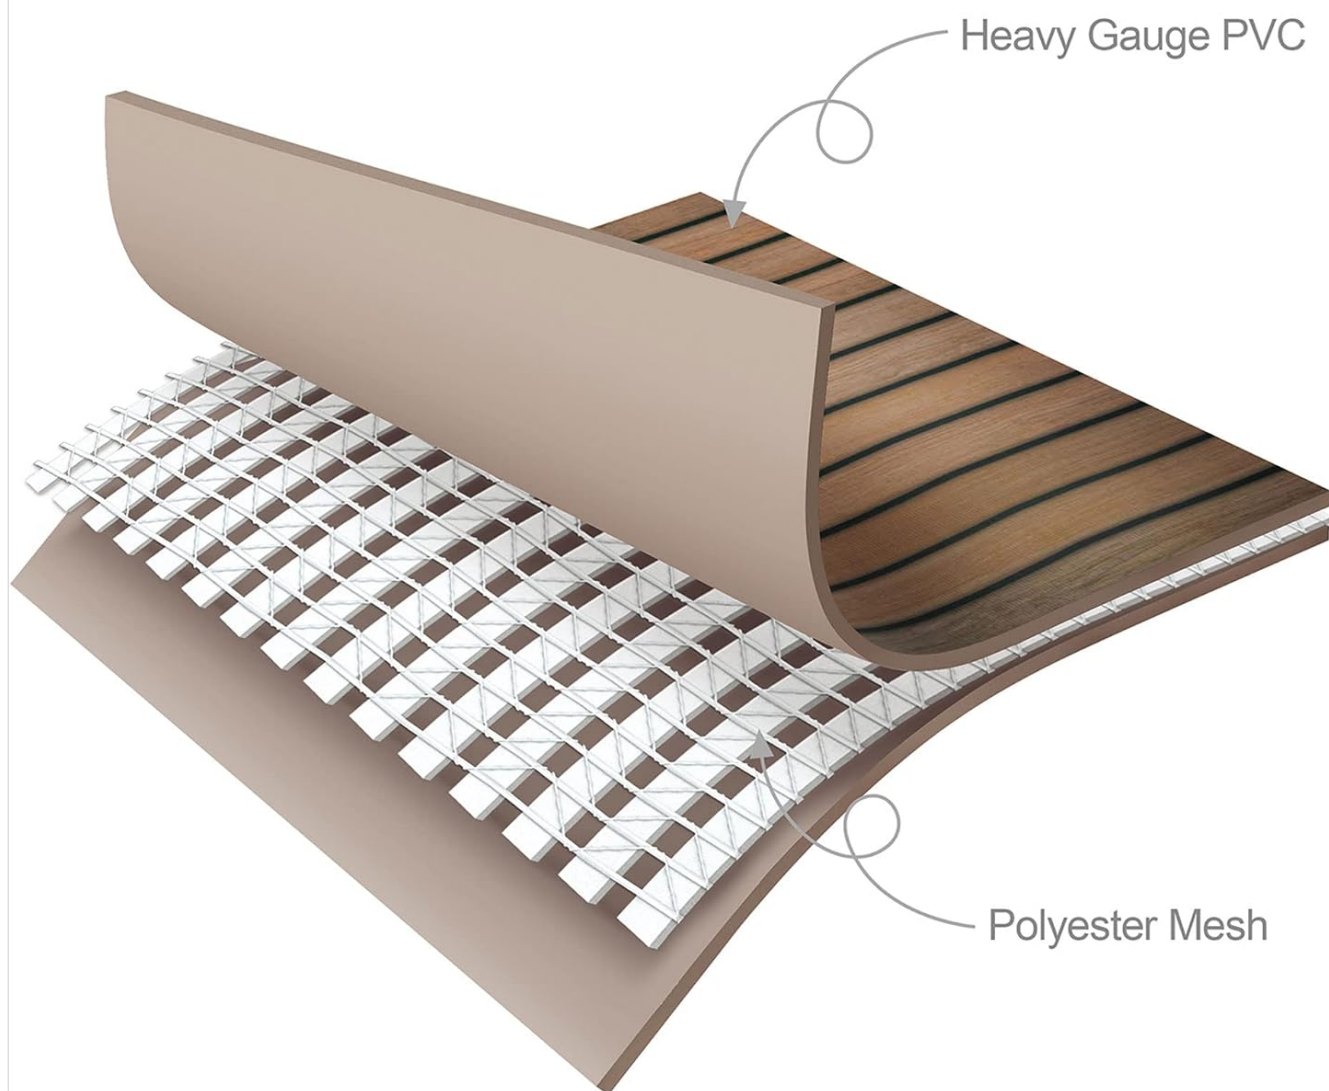


Image: Cross-section diagram illustrating the durable 3-ply ToughMesh material, composed of heavy gauge PVC and polyester mesh, which provides puncture resistance for the pool liner.

WARRANTY INFORMATION

The Funsicle 14 Foot x 42 Inch Oasis Designer Outdoor Round Above Ground Swimming Pool comes with a manufacturer's warranty. The pool, pump, and ladder are covered by a **1-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims. This warranty covers manufacturing defects and does not cover damage due to misuse, improper installation, or normal wear and tear.

CUSTOMER SUPPORT

For technical assistance, missing parts, or warranty inquiries, please contact Funsicle customer support. Refer to the contact information provided in the packaging or visit the official Funsicle website for the most up-to-date support details. For additional resources and product information, you may visit the [Funsicle Store on Amazon](#).

