

ICOOKPOT YSH15(55)AJ

ICOOKPOT 1.5L Glass Electric Kettle with Tea Infuser and Temperature Control User Manual

Model: YSH15(55)AJ

PRODUCT OVERVIEW

The ICOOKPOT 1.5L Glass Electric Kettle is designed for efficient and precise beverage preparation. It features a durable borosilicate glass body and 304 stainless steel components, ensuring no plastic contact with water during operation. With 1200W rapid boiling and programmable temperature control, it is suitable for various teas, coffee, and other hot water needs.

- **Precise Temperature Control:** Offers settings from 115°F to 212°F for optimal steeping of different beverages.
- **Rapid Boiling:** 1200W heating element ensures quick water boiling.
- **Durable & Safe Materials:** Constructed from borosilicate glass and 304 stainless steel, ensuring BPA-free and corrosion-resistant performance.
- **User-friendly Design:** Features an easy-pour spout with a mesh filter, an easily openable lid for fast filling, a cool-to-touch handle, and a 360-degree cordless base.
- **Easy to Use:** Simple menu knob for selecting desired functions without complex time or temperature setups. Wide mouth for easy cleaning.

SETUP

1. **Unpack:** Carefully remove all components from the packaging. Ensure all parts, including the kettle, power base, and tea infuser, are present and undamaged.
2. **Initial Cleaning:** Before first use, wash the glass kettle and tea infuser with warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the power base with a damp cloth. Do not immerse the power base in water.
3. **Placement:** Place the power base on a stable, flat, heat-resistant surface near a power outlet. Ensure the power cord is not dangling where it could be pulled or tripped over.
4. **Fill Kettle:** Fill the glass kettle with fresh, cold water. Do not exceed the 'MAX' fill line (1.5L) to prevent overflow during boiling.
5. **Insert Infuser (Optional):** If preparing tea, place your desired loose leaf tea or tea bags into the stainless steel infuser. Secure the infuser lid and carefully lower it into the kettle.
6. **Secure Lid:** Place the kettle lid firmly onto the glass kettle.

7. **Connect Power:** Plug the power cord into a standard electrical outlet.

OPERATING INSTRUCTIONS

Using the Control Panel

The kettle features an intuitive control panel on the power base. Rotate the MENU knob to select your desired function. The display will show the current temperature or selected program.



Image: The control panel displaying various temperature presets for different beverages.

Temperature Presets

The kettle offers precise temperature control with several preset options:

- **Baby Drink:** 115°F (46°C)
- **Green/White Tea:** 185°F (85°C)
- **Oolong Tea:** 195°F (90°C)
- **Coffee:** 205°F (96°C)
- **Boil:** 212°F (100°C)



Image: The control panel displaying various food preparation functions such as Milk, Noodles, Soup, Boiled Egg, and Disinfection.

Additional Functions

Beyond beverages, the kettle includes functions for:

- Milk
- Noodles
- Soup
- Boiled Egg (using the included egg holder)
- Disinfection
- Keep Warm (maintains temperature for extended periods)

Step-by-Step Operation

1. Fill the kettle with water and add ingredients (tea, herbs, etc.) if desired.
2. Place the kettle securely on the power base.
3. Rotate the MENU knob to select your desired function (e.g., Green Tea, Coffee, Boil).
4. The kettle will automatically begin heating to the preset temperature for the selected function.
5. Once the process is complete, the kettle will typically beep to indicate readiness.

6. Carefully remove the kettle from the base and pour your beverage.

Video Demonstration: ICOOKPOT Quick Boil Kettle

Your browser does not support the video tag.

Video: A demonstration of the ICOOKPOT kettle's quick boiling function and various settings.

Video Demonstration: Amazing Electric Tea Kettle!

Your browser does not support the video tag.

Video: An overview highlighting the features and benefits of the ICOOKPOT electric tea kettle.

MAINTENANCE

Cleaning

Regular cleaning ensures optimal performance and longevity of your kettle.

- **Hand Wash:** The glass kettle and tea infuser should be hand washed with warm, soapy water. Rinse thoroughly.
- **Wipe Clean:** The exterior of the power base should be wiped clean with a damp cloth. Do not immerse the power base in water.
- **Avoid Abrasive Scrubbers:** Do not use abrasive scrubbers or harsh chemicals, as these can damage the surfaces.
- **Descaling:** If mineral stains appear on the bottom of the kettle, these are not rust. Clean with citric acid or vinegar solution. Fill the kettle with water, add a tablespoon of citric acid or vinegar, boil, and let it sit for a few minutes before rinsing.
- **Storage:** Keep the kettle empty and dry when not in use.

For Maximum Longevity

- ① Big Opening makes it easy to clean.
- ② Suggest hand washing.
- ③ Avoid using abrasive scrubber.
- ④ Keep empty and dry when not in use.
- ⑤ If there is stain on the bottom after use, it is not product rust, please clean it with citric acid or vinegar.

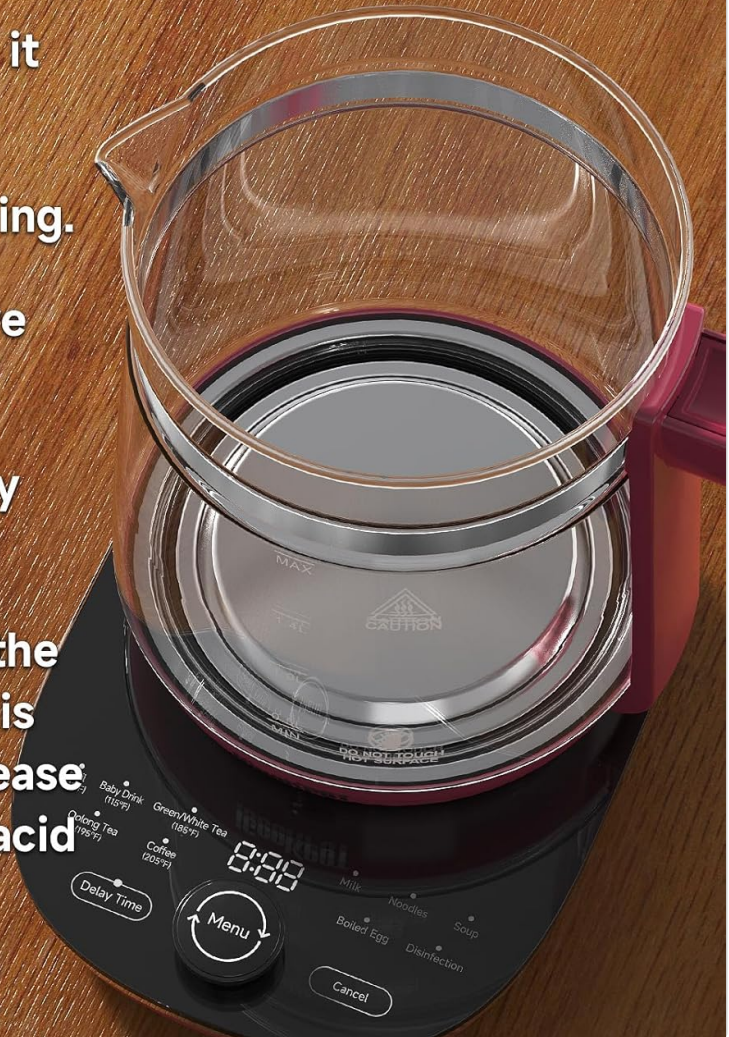


Image: Visual guide for cleaning and maintenance, emphasizing hand washing and descaling.

TROUBLESHOOTING

- **Kettle Not Heating:** Ensure the power base is securely plugged into a working outlet and the kettle is correctly seated on the base. Check if a function has been selected.
- **Error Codes (e.g., E1):** If an error code appears, unplug the kettle, allow it to cool, and then re-seat it on the base. If the error persists, contact customer service.
- **Water Overflowing:** Do not fill the kettle above the 'MAX' line. Boiling water expands and can overflow, especially when using the infuser.
- **Tea Not Brewing Properly:** Ensure the infuser is correctly placed and contains sufficient tea leaves for the water volume. Adjust steeping time or temperature as needed for desired strength.
- **Unusual Noises:** Some noise during heating is normal. If unusual or loud noises occur, ensure the kettle is properly seated and water levels are correct.

SPECIFICATIONS

Feature	Detail
---------	--------

Brand	ICOOKPOT
Model Name	YSH15(55)AJ
Capacity	1.5 Liters
Power	1200W
Material	Borosilicate Glass, 304 Stainless Steel
Special Feature	Programmable, Temperature Control, Tea Infuser
Product Dimensions	11.14"L x 10.3"W x 7.2"H
Item Weight	3.9 pounds
Included Components	Teapot Infuser

WARRANTY AND SUPPORT

ICOOKPOT is committed to providing excellent after-sales service. If you have any questions about the product or encounter any issues, please contact us as soon as possible. We guarantee a reply within 12 hours to assist you with any concerns.