

[Manuals.plus](#) /

> [Whirlpool](#) /

> Whirlpool W7I HF60 TU Dishwasher User Manual

## Whirlpool W7I HF60 TU

# Whirlpool W7I HF60 TU Dishwasher User Manual

Model: W7I HF60 TU

## 1. INTRODUCTION

Thank you for choosing the Whirlpool W7I HF60 TU Fully Integrated Dishwasher. This appliance is designed to provide efficient and thorough cleaning for your dishes, cutlery, and kitchenware. With a capacity of 15 place settings and an Energy Class A rating, it combines performance with energy efficiency. This manual provides essential information for the safe and effective operation, installation, and maintenance of your new dishwasher.

Key features include:

- Fully integrated design (60 cm)
- 15 place settings capacity
- Energy Class A efficiency
- Touch control interface
- Low water consumption (9.5 liters per cycle)
- Power Clean technology for stubborn dirt
- Time remaining projection on the floor

## 2. SAFETY INFORMATION

Please read all safety instructions carefully before using the appliance to prevent risks of fire, electric shock, injury, or damage to the appliance. Keep this manual for future reference.

- **Electrical Safety:** Ensure the appliance is properly grounded. Do not use extension cords or adapters. Disconnect power before any maintenance or cleaning.
- **Water Safety:** Do not operate the dishwasher without the filter in place. Ensure water hoses are securely connected to prevent leaks.
- **Child Safety:** Keep children away from the dishwasher when it is operating. Detergents and rinse aid should be stored out of reach of children.
- **Loading Safety:** Load sharp items (knives, forks) with handles up to prevent injury. Do not overload the dishwasher.
- **Hot Surfaces:** The interior of the dishwasher can be hot immediately after a wash cycle. Allow time for cooling before unloading.

### 3. SETUP AND INSTALLATION

---

The Whirlpool W7I HF60 TU is a fully integrated dishwasher designed to blend seamlessly with your kitchen cabinetry. Professional installation is highly recommended to ensure proper fit and function.

#### 3.1 Unpacking

Carefully remove all packaging materials. Inspect the dishwasher for any shipping damage. Report any damage to your retailer immediately.

#### 3.2 Included Components

Check that all components are present:

- Power cable
- Salt funnel
- Drain hose
- User manual (this document)

#### 3.3 Dimensions and Placement

The dishwasher dimensions are approximately 55.5D x 59.8B x 82H centimeters. Ensure your cabinet opening meets these requirements. The appliance weighs approximately 37.5 kilograms.



**Figure 3.1:** The Whirlpool W7I HF60 TU dishwasher seamlessly integrated into a kitchen setting, demonstrating its built-in design.

#### 3.4 Water and Electrical Connections

Connect the water inlet hose to a cold water supply and the drain hose to a suitable drain. Ensure all connections are tight to

prevent leaks. Connect the power cable to a grounded electrical outlet (2.2E+2 Volts). Refer to local plumbing and electrical codes for specific requirements.


## 4. OPERATING INSTRUCTIONS

---

Your Whirlpool dishwasher features intuitive touch controls for easy operation.

### 4.1 Loading the Dishwasher

Proper loading ensures optimal cleaning performance. Scrape off large food particles before loading. Avoid overcrowding the racks.

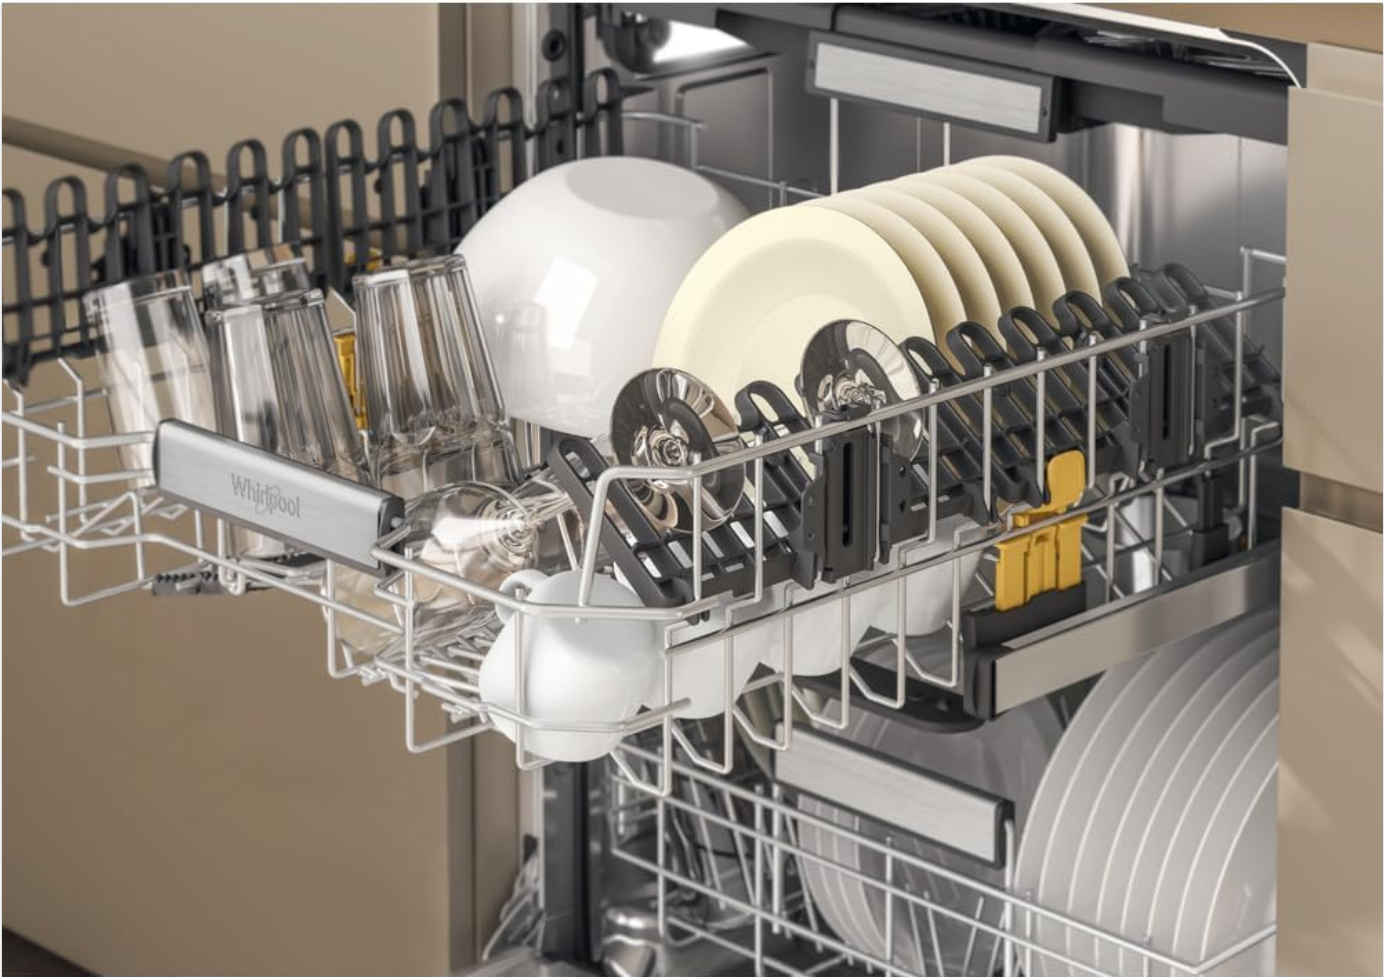

**Figure 4.1:** A view of the dishwasher interior with dishes loaded, demonstrating the capacity and rack configuration.

- **Lower Rack:** Ideal for plates, bowls, pots, and pans.
- **Upper Rack:** Suitable for glasses, cups, and smaller bowls.
- **Cutlery Tray:** Place forks, spoons, and knives in the dedicated cutlery tray at the top. Ensure sharp ends face down for safety.



Figure 4.2: A detailed view of the dishwasher's top cutlery tray, designed for efficient cleaning of utensils.

## 4.2 Adding Detergent and Rinse Aid

Fill the detergent dispenser with the appropriate amount of dishwasher detergent. For improved drying and to prevent water spots, fill the rinse aid dispenser as needed. The dishwasher will indicate when rinse aid or salt levels are low.

## 4.3 Selecting a Wash Cycle

Use the touch control panel to select your desired wash cycle. Common cycles include:

- **Eco (Economy):** Energy-efficient cycle for normally soiled dishes.
- **Intensive:** For heavily soiled pots, pans, and dishes.
- **Daily:** Standard cycle for everyday use.
- **Quick:** For lightly soiled dishes that need a fast wash.
- **Power Clean:** Utilizes specialized jets for stubborn dirt on pots and pans, typically placed in the lower rack.



Figure 4.3: A close-up view of the Power Clean area at the bottom of the dishwasher, highlighting the specialized spray jets for intensive cleaning.

## 4.4 Starting and Monitoring a Cycle

Press the Start button to begin the cycle. The dishwasher features a time remaining projection on the floor, allowing you to easily monitor the cycle progress without opening the door.

## 5. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

### 5.1 Cleaning the Filters

The filter system should be cleaned regularly to prevent food particles from recirculating and affecting wash performance. Refer to the diagram in your full manual for filter removal and cleaning instructions.

### 5.2 Cleaning the Spray Arms

Check the spray arm nozzles periodically for blockages. Remove any debris to ensure water sprays effectively.

### 5.3 Exterior and Interior Cleaning

Wipe the exterior with a soft, damp cloth. For the interior, run a dishwasher cleaner cycle periodically or use a mixture of vinegar and baking soda to remove mineral buildup and odors.

### 5.4 Salt and Rinse Aid Refill

Monitor the salt and rinse aid indicators on the control panel. Refill as necessary to ensure optimal washing and drying results, especially in hard water areas.

## 6. TROUBLESHOOTING

Before contacting service, try the following solutions for common issues:

Problem	Possible Cause	Solution
Dishwasher does not start	Door not closed properly; Power supply issue; Cycle not selected.	Ensure door is latched; Check power connection/breaker; Select a cycle and press Start.
Dishes not clean	Improper loading; Clogged spray arms/filters; Insufficient detergent/rinse aid.	Reload dishes correctly; Clean spray arms and filters; Add more detergent/rinse aid.
Water not draining	Clogged drain hose/filter; Air gap blockage.	Clear drain hose and filter; Check air gap for blockages.
Excessive noise	Dishes rattling; Foreign object in pump; Installation issue.	Rearrange dishes; Check pump area; Ensure dishwasher is level.

## 7. SPECIFICATIONS

Feature	Detail
Brand	Whirlpool
Model Name	W71 HF60 TU
Form Factor	Built-in (Fully Integrated)
Dimensions (DxWxH)	55.5D x 59.8B x 82H centimeters

Feature	Detail
Item Weight	37.5 Kilograms
Capacity (Place Settings)	15
Water Consumption	9.5 Liters (per cycle)
Energy Efficiency Class	A
Voltage	2.2E+2 Volts
Control Type	Touch Control
Material	Stainless Steel
Included Components	Power cable, Salt funnel, Drain hose
First Available Date	March 13, 2024

## 8. WARRANTY AND SUPPORT

---

Whirlpool appliances come with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including warranty duration and coverage details.

### 8.1 Customer Support

For technical assistance, spare parts, or to schedule a service appointment, please contact Whirlpool Customer Service. Contact information can typically be found on the Whirlpool official website or in your product registration materials.

When contacting support, please have your model number (W71 HF60 TU) and serial number ready. The serial number is usually located on a label inside the dishwasher door.