

[Manuals.plus](#) /

› [ALLIMITY](#) /

› ALLIMITY KT1946 Voice Replaced Remote Control User Manual for WALTON TV

ALLIMITY KT1946

ALLIMITY KT1946 Voice Replaced Remote Control User Manual

For WALTON TV Models: WE55RUG, WE-MX43G, W43D210G, WD32D120HG, W32D120G, C5020G4K, C6520RTS4K, L32AHE19, and others.

INTRODUCTION

This manual provides instructions for the ALLIMITY KT1946 Voice Replaced Remote Control. This remote is designed to be compatible with various WALTON TV models, offering convenient control including dedicated buttons for popular streaming services and voice command functionality. No complex setup or programming is required for basic operation; simply install batteries to begin.

SETUP

1. Battery Installation

The remote control requires two (2) AAA Alkaline batteries (not included). Ensure correct polarity when inserting the batteries.





Image: Back of the remote control with the battery compartment open. Insert two AAA batteries, observing the polarity markings.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two AAA Alkaline batteries, matching the positive (+) and negative (-) terminals as indicated inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

2. Initial Pairing for Voice Function

For basic remote functions (channel, volume, power), no pairing is required after battery installation. However, to utilize the voice control feature, the remote must be paired with your WALTON TV. Please refer to your specific WALTON TV's user manual for detailed instructions on how to pair a Bluetooth or voice-enabled remote control, as the pairing process can vary between TV models. If you encounter difficulties with pairing, please contact the seller for assistance.

OPERATING INSTRUCTIONS

Once batteries are installed, the remote is ready for use with compatible WALTON TV models. Point the remote directly at your TV's infrared receiver for optimal performance.



Image: Front view of the ALLIMITY KT1946 remote control.

Button Functions Overview

- **Power Button** (): Turns the TV on or off.
- **Voice Control Button** (): Activates the voice assistant for commands (requires pairing).
- **Number Pad (0-9)**: Direct channel selection or input.
- **INFO**: Displays information about the current program.
- **GUIDE**: Accesses the electronic program guide.

- **NETFLIX:** Direct access to the Netflix application.
- **YouTube:** Direct access to the YouTube application.
- **Google Play:** Direct access to the Google Play Store.
- **Prime Video:** Direct access to the Amazon Prime Video application.
- **HOME:** Returns to the TV's home screen or main menu.
- **MENU:** Opens the TV's settings or options menu.
- **Navigation Buttons (Up, Down, Left, Right):** Navigates through menus and options.
- **OK:** Confirms selections.
- **BACK:** Returns to the previous screen or menu.
- **Settings (⚙):** Accesses quick settings or system options.
- **Volume Up/Down (VOL +/-):** Adjusts the TV volume.
- **Mute ():** Mutes or unmutes the TV audio.
- **SOURCE:** Changes the input source (HDMI, AV, etc.).
- **Channel Up/Down (CH +/-):** Changes TV channels.
- **Media Playback Controls (, ,):** Rewind, Play/Pause, Fast Forward for media content.
- **Colored Buttons (Red, Green, Yellow, Blue):** Functionality varies by TV model and application.
- **TEXT:** Accesses teletext or digital text services.
- **SUBT:** Toggles subtitles on or off.
- **AUDIO:** Selects audio tracks or modes.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Avoid using liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the right polarity.
 - Replace old batteries with new AAA Alkaline batteries.
 - Ensure there are no obstructions between the remote control and the TV's infrared receiver.
 - Make sure you are within the effective range of the TV.
- **Voice function not working:**
 - Confirm that the remote control has been successfully paired with your WALTON TV. Refer to your TV's manual for pairing instructions.
 - Check your TV's settings to ensure voice control is enabled.
 - If pairing issues persist, contact the seller for further assistance.
- **Specific app buttons (Netflix, YouTube, etc.) not working:**
 - Ensure your TV is connected to the internet.

- Check if the applications are installed and updated on your TV.

SPECIFICATIONS



Image: Dimensions of the ALLIMITY KT1946 remote control.

Brand	ALLIMITY
Model	KT1946
Package Dimensions	5.9 x 1.9 x 0.5 inches (15 x 4.8 x 1.3 cm)
Item Weight	2.89 ounces (81.9 grams)
Special Feature	Ergonomic design
Color	Black
Max Number of Supported Devices	1 (Television)
Compatible Devices	Television (specifically WALTON TV models: WE55RUG, WE-MX43G, W43D210G, WD-TS43G, WD32D120HG, W32D120G, A322BVSRC, C2420G, C3220G, C4020G, C5020G, C5020G4K, C6520RTS4K, L32AHE19, L43AFE20, RS32F3-UK, RS43F3-UK, RS0U2-EU, RS65U2-EU, ZG0204, ZG0205, ZG0234, ZG0256, ZK4-G0205)

WARRANTY AND SUPPORT

Warranty Information

Specific warranty details for this product are not provided in this manual. Please refer to the product packaging or contact your retailer for information regarding warranty coverage and terms.

Customer Support

For any questions, technical assistance, or issues with pairing the remote control, please contact the seller directly through the platform where the purchase was made. They can provide specific guidance and support for your product.