

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [WIITHINK](#) /

› [WIITHINK Portable CD Player Boombox WTB-791 Instruction Manual](#)

## WIITHINK WTB-791

# WIITHINK Portable CD Player Boombox WTB-791 Instruction Manual

Model: WTB-791 | Brand: WIITHINK

## INTRODUCTION

Thank you for purchasing the WIITHINK Portable CD Player Boombox WTB-791. This manual provides essential information for the safe and efficient operation of your new device. Please read it thoroughly before use and retain it for future reference.

## WHAT'S IN THE Box

Upon unpacking, please ensure all items listed below are present and in good condition:

- 1 x WTB-791 Portable CD Radio Boombox (Batteries Not Included)
- 1 x Remote Control (Batteries Not Included)
- 1 x Power Cable
- 1 x AUX Line
- 1 x User Manual
- 1 x Packing Box

# PACKAGE DETAILS



**Figure 1: Package Contents.** The image displays the WIITHINK WTB-791 Portable CD Radio Boombox, its remote control, power cable, AUX cable, and user manual, all neatly arranged as they would appear upon unboxing.

## SETUP

### 1. Powering the Device

The WTB-791 Boombox can be powered by either AC power or batteries.

- **AC Power:** Connect the provided power cable to the AC IN jack located at the back of the unit and then plug it into a standard wall outlet (100-240V~).
- **Battery Power:** For portable use, open the battery compartment on the bottom of the unit. Insert 4 x UM2-C 1.5V batteries (not included), ensuring correct polarity. Close the battery compartment securely.

# Portable Classic & Retro CD Player

Compact Size, AC or DC Supply



**Figure 2: Power Options.** This image illustrates the rear of the boombox, highlighting the AC IN jack for power cable connection and the battery bay for portable operation with 4 C-size batteries.

## 2. Remote Control Setup

The remote control requires 2 x AAA batteries (not included). Open the battery compartment on the back of the remote, insert the batteries with correct polarity, and close the cover.

## 3. Antenna for FM Radio

For optimal FM radio reception, extend the telescopic antenna located at the back of the unit. Adjust its position for the best signal.

## OPERATING INSTRUCTIONS

### 1. Basic Controls

- **Power On/Off:** Press the **POWER** button on the unit or remote control.
- **Volume Control:** Rotate the **VOLUME** knob on the unit or use the **VOL+/-** buttons on the remote.
- **Mode Selection:** Press the **MODE** button on the unit or remote to switch between CD, FM Radio, Bluetooth, USB, and AUX modes.
- **EQ Modes:** Press the **EQ/FUN** button on the unit or the EQ buttons on the remote to cycle through ROCK,

POP, FLAT, CLASS, and JAZZ sound modes.



**Figure 3: Unit Controls.** This image provides an overview of the boombox's top panel, detailing the location of the power, volume, mode, and EQ buttons, along with the remote control for convenient operation.

 
## 2. CD Player Operation

The top-loading CD player is compatible with CD, CD-R/RW, MP3 CDs, and audiobook CDs.

1. Open the CD compartment cover by gently lifting it.
2. Place a CD with the label side facing up onto the spindle.
3. Close the CD compartment cover.
4. Switch to **CD** mode using the **MODE** button. The display will show "CD" and begin reading the disc.
5. Use the **PLAY/PAUSE, STOP, SKIP/SEARCH** (forward/backward), and **REPEAT** buttons on the unit or remote to control playback.
6. The **PROG** button allows you to program a custom playback order for tracks.



FOR KIDS



Study, listen to songs or stories



**Figure 4: CD Player.** This image shows the top-loading CD player with its cover open and a disc placed inside, ready for playback.

### 3. FM Radio Operation

Enjoy FM radio with digital tuning and up to 30 station presets.

1. Extend the telescopic antenna for better reception.
2. Switch to **FM Radio** mode using the **MODE** button. The display will show the current frequency.
3. **Auto Scan:** Press and hold the **SCAN** button (often combined with Play/Pause or Repeat) to automatically scan and save available stations. The unit can store up to 30 stations.
4. **Manual Tuning:** Use the **TUNING** knob on the unit or the **CH+/-** buttons on the remote to manually tune to a specific frequency.
5. **Recall Presets:** Use the **PROG** button on the remote to cycle through saved preset stations.

### 4. Bluetooth Connectivity

Wirelessly stream music from your Bluetooth-enabled devices.

1. Switch to **Bluetooth** mode using the **MODE** button. The display will show "BT" and flash, indicating it's ready for pairing.
2. On your mobile device, enable Bluetooth and search for "WTB-791" in the list of available devices.

3. Select "WTB-791" to pair. Once connected, the "BT" indicator will stop flashing, and you can start playing music from your device.



**Figure 5: Bluetooth Connection.** This diagram illustrates how the boombox can connect wirelessly to various Bluetooth-enabled devices, expanding your audio playback options.

## 5. USB Playback

Play MP3/WMA audio files directly from a USB flash drive (up to 128GB, FAT32 format only).

1. Insert your USB flash drive into the **USB** port on the front of the unit.
2. Switch to **USB** mode using the **MODE** button. The unit will automatically detect and play compatible audio files.
3. Use the playback controls (Play/Pause, Skip/Search) to navigate your music.

## 6. AUX Input

Connect external audio devices using the 3.5mm AUX cable.

1. Connect one end of the provided AUX cable to the **AUX IN** jack on the front of the boombox.
2. Connect the other end to the headphone jack or audio output of your external device.
3. Switch to **AUX** mode using the **MODE** button.
4. Control playback and volume from your external device.

## 7. Headphone Jack

For private listening, plug any standard 3.5mm headphones into the **HEADPHONE** jack on the front of the unit. The speakers will automatically mute.

## MAINTENANCE

- Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use abrasive cleaners or solvents.
- CD Care:** Handle CDs by their edges. Clean discs with a soft, lint-free cloth, wiping from the center outwards.
- Storage:** When not in use for extended periods, remove batteries and store the unit in a cool, dry place away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable not connected; Batteries depleted or incorrectly inserted.	Ensure power cable is securely connected to unit and outlet. Replace batteries or check polarity.
CD not playing / "NO DISC" error	CD inserted incorrectly; Disc is dirty or scratched; Incompatible disc format.	Insert CD with label side up. Clean or replace disc. Ensure disc is compatible (CD, CD-R/RW, MP3 CD).
Poor FM radio reception	Antenna not extended or positioned correctly; Weak signal area.	Fully extend and adjust the telescopic antenna. Try moving the unit to a different location.
Bluetooth not connecting	Device not in pairing mode; "WTB-791" not selected; Device too far.	Ensure boombox is in Bluetooth mode and flashing. Select "WTB-791" on your device. Keep devices within 10 meters.
USB not playing	USB drive not inserted correctly; Incompatible file format; USB drive not FAT32.	Ensure USB is fully inserted. Check if files are MP3/WMA. Format USB drive to FAT32 if necessary.

## SPECIFICATIONS

Feature	Detail
Model Number	WTB-791
Product Dimensions (L x W x H)	7 x 10 x 5 inches
Item Weight	3.91 pounds
Connectivity Technology	Auxiliary, Bluetooth, USB
Speaker Type	Built-In
Power Output	2 x 2W RMS
FM Radio Frequency	87.5-108Mhz

Feature	Detail
USB Support	MP3/WMA, up to 128GB (FAT32 format only)
Power Source	AC 100-240V~ / 4 x C batteries (not included)

## WARRANTY AND SUPPORT

WIITHINK is committed to customer satisfaction. Your WTB-791 Portable CD Player Boombox comes with the following support:

- **18-Month Replacement:** For missing parts or defective products.
- **Lifetime Technical Support:** Assistance with product usage and issues.
- **7/24 Amazon Buyer-Seller Messaging:** For any inquiries or support needs.

For further assistance, please contact WIITHINK Direct through your Amazon Orders page.

## OFFICIAL PRODUCT OVERVIEW VIDEO



**Video 1: CD Radio Portable CD Player Boombox with Bluetooth.** This official video from WIITHINK Direct provides a concise overview of the boombox's key features and functionalities, including CD playback, radio, and Bluetooth connectivity.