

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [WIITHINK](#) /

› [WIITHINK WCD-9949 Portable CD Player Boombox User Manual](#)

## WIITHINK WCD-9949

# WIITHINK WCD-9949 Portable CD Player Boombox User Manual

Model: WCD-9949

## INTRODUCTION

---

Thank you for purchasing the WIITHINK WCD-9949 Portable CD Player Boombox. This device offers versatile audio playback options including CD, FM radio, Bluetooth, USB, and AUX input. Designed for ease of use and portability, it provides a rich audio experience for various settings. Please read this manual carefully to ensure proper operation and maintenance of your new boombox.

## SAFETY INFORMATION

---

- Do not expose the unit to rain or moisture to prevent fire or shock hazards.
- Do not block ventilation openings. Ensure adequate space around the unit for proper airflow.
- Use only attachments/accessories specified by the manufacturer.
- Unplug the unit during lightning storms or when unused for long periods.
- Do not open the unit casing. Refer all servicing to qualified service personnel.
- Dispose of batteries properly. Do not expose batteries to excessive heat.

## PACKAGE CONTENTS

---

Verify that all items are present in the package:

- 1 x WIITHINK WTB791 Portable CD Radio Boombox (Batteries Not Included)
- 1 x Remote Control (Batteries Not Included)
- 1 x Power Cable
- 1 x AUX Line
- 1 x User Manual
- 1 x Packing Box

# PACKAGE DETAILS



Remote Control (Batteries not included)



US AC Power Cable



AUX Cable



User Manual



WTB-791 Portable CD Player  
(Batteries not included)

Image: Contents of the WIITHINK WCD-9949 Boombox package, showing the boombox, remote control, power cable, AUX cable, and user manual.

## PRODUCT OVERVIEW

Familiarize yourself with the main components of your boombox.



Image: Front view of the WIITHINK WCD-9949 Boombox, highlighting key features such as CD player, Bluetooth, USB port, AUX input, headphone jack, LCD display, FM radio, and power options.

- **Top-Loading CD Player:** For playing CDs, CD-R/RW, MP3 CDs, and audiobook CDs.
- **FM Radio Tuner:** For listening to FM radio stations.
- **Bluetooth:** For wireless audio streaming from compatible devices.
- **USB Input:** For playing MP3/WMA music files from USB flash drives (FAT32 format, up to 128GB).
- **AUX Input (3.5mm):** For connecting external audio devices.
- **Headphone Jack (3.5mm):** For private listening.
- **LCD Display:** Shows current mode, track number, and radio frequency.
- **Control Buttons:** Power, Mode, Play/Pause, Skip/Search, Repeat, Scan, EQ/Function.
- **Volume Knobs:** Adjust audio output level.
- **Tuning Knob:** Adjusts FM radio frequency.
- **Telescopic Antenna:** For improved FM radio reception.
- **Carrying Handle:** For easy portability.

## SETUP

### Powering the Boombox

Your boombox can be powered by AC power or batteries.

### AC Power (Wall Outlet)

1. Ensure the boombox is turned off.
2. Insert one end of the provided AC power cable into the AC IN jack on the back of the boombox.
3. Plug the other end of the AC power cable into a standard wall outlet.



Image: Rear view of the boombox, indicating the AC IN jack for power connection and the battery compartment.

### Battery Power (Portable Use)

1. Ensure the boombox is turned off and disconnected from AC power.
2. Locate the battery compartment on the bottom of the unit.
3. Open the battery compartment cover.
4. Insert 4 x UM2-C 1.5V batteries (not included), ensuring correct polarity (+/-).
5. Close the battery compartment cover securely.

**Note:** Remove batteries if the unit will not be used for an extended period to prevent leakage and damage.

## OPERATING INSTRUCTIONS

---

## General Operation

1. **Power On/Off:** Press the **POWER** button to turn the unit on or off.
2. **Select Mode:** Press the **MODE** button repeatedly to cycle through available modes: CD, FM, Bluetooth (BT), USB, AUX. The selected mode will be displayed on the LCD screen.
3. **Adjust Volume:** Rotate the **VOLUME** knob clockwise to increase volume and counter-clockwise to decrease volume.
4. **EQ Modes:** Press the **EQ/FUN** button to select different equalizer presets: ROCK / POP / FLAT / CLASS / JAZZ.



## Remote Control

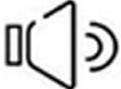
**Simple & Clear & Comfortable Hold  
Easy to Operate**

Image: Overview of the boombox's multiple playback modes and features.

## CD Playback

1. Press the **MODE** button to select CD mode. "CD" will appear on the display.
2. Open the CD compartment cover by gently lifting it.
3. Place a CD (CD, CD-R/RW, MP3 CD, audiobook CD) onto the spindle with the label side facing up.
4. Close the CD compartment cover. The CD will begin playing automatically.
5. **Play/Pause:** Press the **PLAY/PAUSE** button to pause or resume playback.
6. **Skip Tracks:** Press the **SKIP FORWARD** or **SKIP BACKWARD** buttons to skip to the next or previous track.
7. **Repeat:** Press the **RPT** button to repeat the current track (Repeat 1) or all tracks (Repeat All).
8. **Program Play:** Refer to the detailed user manual for programming specific track orders.



**FOR KIDS** 

**Study, listen to songs or stories**



Image: Close-up of the top-loading CD player with a disc inside, ready for playback.

## FM Radio Operation

1. Press the **MODE** button to select FM radio mode. The FM frequency will appear on the display.
2. Extend the telescopic antenna for optimal reception.
3. **Auto Scan:** Press and hold the **SCAN** button to automatically scan and save available FM stations (up to 30 presets).
4. **Manual Tuning:** Rotate the **TUNING** knob to manually adjust the frequency.
5. **Select Preset:** Use the **PRESET +/-** buttons on the remote control to navigate through saved stations.



Image: Visual representation of the FM radio feature, showing the frequency range and preset capabilities.

## Bluetooth Pairing

1. Press the **MODE** button to select Bluetooth mode. "BT" will flash on the display, indicating it's ready for pairing.
2. On your Bluetooth-enabled device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "WTB-791" from the list of devices.

4. Once paired, "BT" will stop flashing and remain solid. You can now stream audio wirelessly.
5. Control playback (Play/Pause, Skip) using the boombox buttons or your connected device.



Image: The boombox displaying "BT" for Bluetooth mode, connected to a smartphone for wireless music streaming.

## USB Playback

1. Insert a USB flash drive (FAT32 format, up to 128GB) containing MP3/WMA audio files into the USB port on the front of the boombox.
2. Press the **MODE** button to select USB mode. "USB" will appear on the display.
3. Playback will start automatically. Use the Play/Pause and Skip buttons to control playback.

## AUX Input

1. Connect an external audio device (e.g., MP3 player, laptop) to the AUX IN jack on the front of the boombox using the provided 3.5mm AUX cable.
2. Press the **MODE** button to select AUX mode. "AUX" will appear on the display.
3. Control playback from your external device. Adjust volume using the boombox's volume knob.

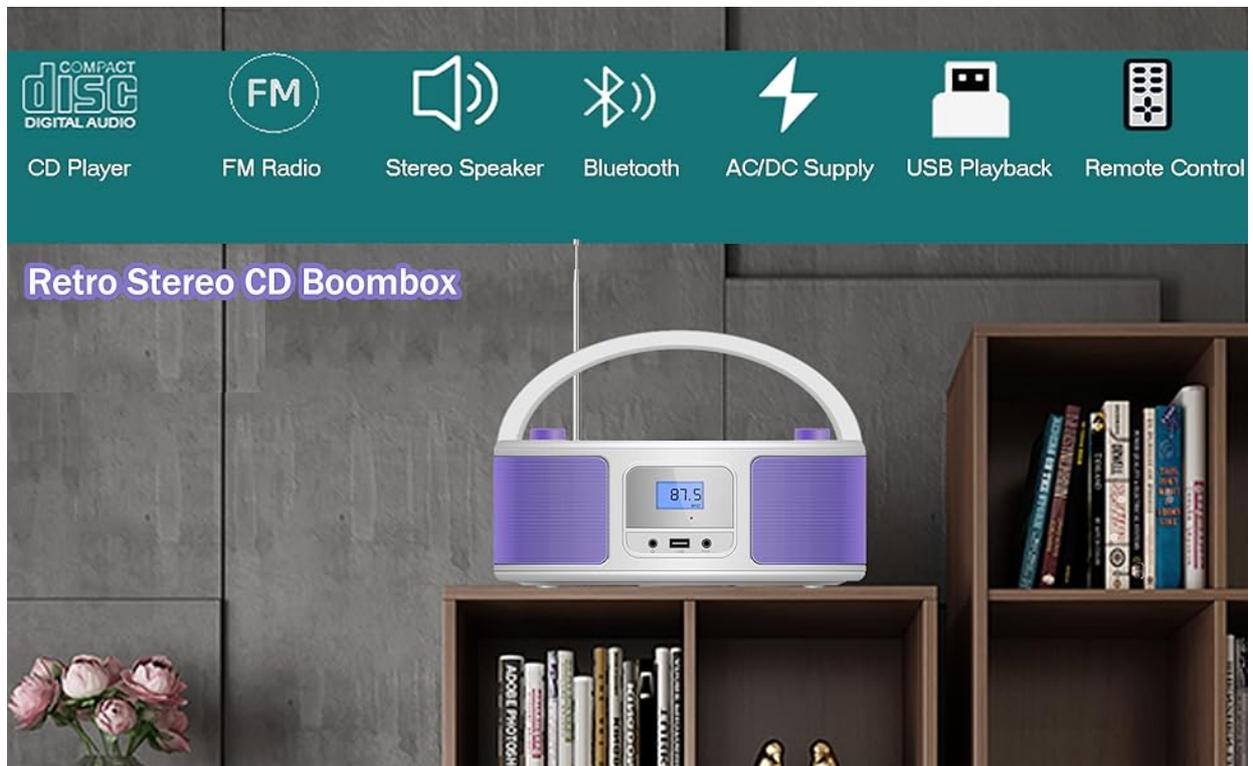


Image: The boombox connected to multiple external devices via AUX input, demonstrating its versatility.

## Headphone Use

For private listening, plug 3.5mm headphones (not included) into the HEADPHONE jack on the front of the boombox. The speakers will automatically mute.

## Remote Control

The included remote control allows you to operate the boombox from a distance. Ensure batteries are inserted correctly (2 x AAA, not included). Functions include Power, Mode selection, Volume, Mute, Play/Pause, Skip/Search, Repeat, Scan, and EQ modes.



# Remote Control

Simple & Clear & Comfortable Hold  
Easy to Operate

Image: The boombox and its remote control, highlighting the convenience of remote operation.

## MAINTENANCE

- Clean the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Keep the CD compartment clean and free of dust. Use a CD lens cleaner if necessary.
- Store the unit in a cool, dry place away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

Problem	Solution
No power	Check if the AC power cable is securely connected. If using batteries, ensure they are inserted correctly and not depleted.
CD not playing	Ensure the CD is clean and free of scratches. Verify the CD is inserted correctly with the label side up. Close the CD compartment completely. Ensure CD mode is selected.

Problem	Solution
Poor FM radio reception	Extend and adjust the telescopic antenna. Try repositioning the unit.
Bluetooth not pairing	Ensure the boombox is in Bluetooth mode and "BT" is flashing. Make sure your device's Bluetooth is enabled and within range. Forget previous pairings on your device and try again.
USB playback issues	Ensure the USB drive is formatted to FAT32 and contains compatible MP3/WMA files. The maximum capacity supported is 128GB.

## SPECIFICATIONS

Feature	Detail
Model Number	WCD-9949
Product Dimensions (L x W x H)	7 x 10 x 5 inches
Item Weight	3.91 pounds
Connectivity Technology	Auxiliary, Bluetooth, USB
Speaker Type	Built-In
Power Output	2x2W RMS
FM Radio Frequency	87.5-108Mhz
Power Source	AC 100-240V~ / 4 x C batteries (not included)
USB Capacity	Up to 128GB (FAT32 format only)

## WARRANTY & SUPPORT

WIITHINK is committed to customer satisfaction. Your product comes with:

- **18-Month Replacement:** For missing parts or defective products.
- **Lifetime Technical Support:** Assistance with any product inquiries.
- **Amazon Buyer-Seller Messaging:** Available 7/24 for support.

For any inquiries, please go to Your Orders, find your order in the list, and click on "WIITHINK" to contact us.



Image: Details on WIITHINK's customer support, including replacement policy and technical assistance.

## OFFICIAL PRODUCT VIDEOS

---

### WIITHINK Direct - CD Radio Portable CD Player Boombox with Bluetooth

Your browser does not support the video tag.

Video: An official product video from WIITHINK Direct showcasing the features and functionality of the CD Radio Portable CD Player Boombox with Bluetooth.