

Topyond Instant Pop-Up Camping Tent

Topyond Instant Pop-Up Camping Tent Instruction Manual

Model: Instant Pop-Up Camping Tent

1. INTRODUCTION

Thank you for choosing the Topyond Instant Pop-Up Camping Tent. This manual provides essential information for the safe and efficient setup, operation, and maintenance of your tent. Please read these instructions thoroughly before using the product and retain them for future reference.

2. PRODUCT OVERVIEW

Key Features:

- **Instant Setup:** Designed for quick and easy deployment, similar to opening an umbrella.
- **Spacious Design:** Accommodates 3 to 4 people comfortably.
- **Weatherproof Material:** Constructed with silver adhesive fabric for effective rain protection.
- **Double-Layer Construction:** Enhances thermal insulation and wind resistance.
- **Integrated Mesh:** Mesh cover on the inner tent top and mesh layer on the door for insect protection and ventilation.

Package Contents:

Verify that all components are present in your package:

- 1 x Camping Tent
- 8 x Ground Pegs
- 4 x Ropes
- 1 x Ties
- 1 x Storage Bag



Image: The Topyond Instant Pop-Up Camping Tent shown with its included accessories: ground pegs, ropes, and a storage bag.

3. SETUP INSTRUCTIONS

The Topyond Instant Pop-Up Camping Tent is designed for rapid deployment. Follow these steps for quick and secure setup:

1. **Choose a Location:** Select a flat, clear area free from sharp objects and debris.
2. **Unpack the Tent:** Remove the tent from its storage bag and lay it flat on the ground.
3. **Deploy the Tent:** Grasp the top center hub of the tent frame. With a gentle upward pull, the tent's poles will automatically extend and lock into place, similar to opening an umbrella. Ensure all poles are fully extended and locked.



Opens in just a few seconds
Self ejecting
Push down on the top hydraulic bracket to ensure full opening

Image: A detailed view of the tent's top hub, illustrating the self-ejecting mechanism that facilitates quick setup.

- 4. Secure the Tent:** Once the tent is upright, use the provided ground pegs to secure the tent's corners and guy ropes to the ground. This is crucial for stability, especially in windy conditions.
- 5. Adjust Ventilation:** Open or close the tent door and any mesh windows as needed for airflow.



Image: The Topyond Instant Pop-Up Camping Tent fully erected, showcasing its structure and main entrance.

4. OPERATING INSTRUCTIONS

Ventilation:

The tent features a mesh cover on the top of the inner tent and a mesh layer on the door. These can be used to prevent insect bites while allowing air circulation. Keep mesh areas clear for optimal airflow.

Outer Tent Functionality:

The outer tent layer can be used independently as a fishing or beach shelter canopy by detaching it from the inner tent and using additional poles (not included) or ropes to support it.



Mesh cover on top of inner tent and mesh layer on door

Prevent insect bites

Outer tent can be used separately as a fishing or beach shelter canopy



Image: The tent highlighting its mesh ventilation and the versatility of the outer layer for separate use.

5. MAINTENANCE

Cleaning:

- Clean the tent with a soft brush or sponge and mild soap.
- Rinse thoroughly with water.
- Do not use harsh detergents, bleach, or washing machines, as these can damage the waterproof coating.

Drying:

Always ensure the tent is completely dry before packing it away to prevent mold and mildew growth. Air dry in a shaded area, avoiding direct sunlight for prolonged periods.

Storage:

Fold the tent neatly and place it back into its storage bag. Store in a cool, dry place away from extreme temperatures and direct sunlight.

6. TROUBLESHOOTING

Tent Not Opening Fully:

Ensure that the central hub mechanism is fully engaged and all pole joints are locked. Gently push down on the top hydraulic bracket to ensure full opening if resistance is met.

Tent Instability in Wind:

Always use all provided ground pegs and ropes to secure the tent firmly to the ground. Position the tent with the narrowest side facing the wind if possible. In very strong winds, consider alternative shelter.

Water Leakage:

Ensure all zippers are fully closed. Check for any visible damage to the fabric or seams. The tent is made with waterproof silver adhesive fabric, but extreme weather conditions may test its limits. Re-apply seam sealer if necessary (not included).

7. SPECIFICATIONS

Feature	Detail
Applicable Capacity	3-4 People
Inner Diameter Size	Approx. 1.95 x 1.95 x 1.2 m (6.4 x 6.4 x 3.9 ft)
Outside Diameter Size	Approx. 2.05 x 2.05 x 1.3 m (6.7 x 6.7 x 4.3 ft)
Tent Material	Silver Adhesive Fabric
Tent Base Material	Oxford Cloth
Tent Pole Material	Fibreglass
Item Weight	Approx. 2.55 kg (5.61 pounds)



Image: The tent with its key external dimensions indicated for reference.

8. WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available documentation. For any questions regarding warranty coverage, product support, or replacement parts, please contact the manufacturer directly through their official channels or the retailer from whom the product was purchased.