

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Dirt Devil](#) /

› [Dirt Devil Self-Standing Cordless Stick Vacuum Cleaner User Manual](#)

Dirt Devil BD57000V

Dirt Devil Self-Standing Cordless Stick Vacuum Cleaner

Model: BD57000V

INTRODUCTION

Thank you for choosing the Dirt Devil Self-Standing Cordless Stick Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read it thoroughly before first use and retain it for future reference.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using an electrical appliance to reduce the risk of fire, electric shock, or injury. This appliance is for household use only.

- Do not leave the vacuum cleaner unattended when plugged in.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.

WHAT'S IN THE BOX



The complete Dirt Devil Self-Standing Cordless Stick Vacuum Cleaner with all included accessories.



CORDLESS STANDING STICK VAC

WHAT'S IN THE BOX



2-IN-1 CREVICE TOOL & DUSTING BRUSH



UPHOLSTERY TOOL



CHARGER

Diagram illustrating the main vacuum unit, 2-in-1 Crevice Tool & Dusting Brush, Upholstery Tool, and Charger.

Your Dirt Devil Self-Standing Cordless Stick Vacuum Cleaner package includes:

- Cordless Stick Vacuum Unit
- 2-in-1 Crevice Tool & Dusting Brush
- Upholstery Tool
- Charger

SETUP

Assembly

Your vacuum cleaner requires minimal assembly. Ensure all components are present before beginning.

1. Carefully remove all parts from the packaging.
2. Connect the main vacuum body to the extension wand until it clicks securely into place.
3. Attach the floor nozzle to the bottom of the extension wand, ensuring it clicks firmly.

Charging the Battery

The vacuum is powered by a Lithium-Ion battery. Fully charge the battery before first use for optimal performance.

- Locate the charging port on the main vacuum body.
- Insert the charger plug into the charging port.
- Plug the charger into a standard electrical outlet.
- The battery indicator lights will illuminate to show charging status. A full charge typically takes over two hours.
- Unplug the charger once the battery is fully charged.

OPERATING INSTRUCTIONS

Powering On/Off

Press the power button located on the handle to turn the vacuum on or off.

Self-Standing Design



The vacuum's self-standing feature allows it to remain upright when not in use or during pauses in cleaning.

The unique self-standing design allows the vacuum to remain upright on its own, providing convenience when you need to pause cleaning, move obstacles, or empty the dirt cup. Simply push the vacuum head forward until it locks into the upright position.

Converting to Hand Vacuum



The main unit detaches to become a portable hand vacuum for versatile cleaning.

For cleaning furniture, stairs, car interiors, or other tight spaces, the main unit easily detaches to convert into a portable hand vacuum. Press the release button near the top of the extension wand to separate the hand vacuum unit.

Using Attachments

The included attachments enhance the vacuum's versatility:

- **2-in-1 Crevice Tool & Dusting Brush:** Ideal for cleaning tight corners, edges, and delicate surfaces. The brush can be extended or retracted as needed.
- **Upholstery Tool:** Designed for effective cleaning of fabric surfaces like sofas, chairs, and car seats.

LED Headlights



LOW PROFILE DESIGN

Integrated LED headlights illuminate hidden dirt and debris on the floor.

The integrated LED headlights on the floor nozzle illuminate dark areas, making it easier to spot dust and debris under furniture or in dimly lit spaces.

Boost Mode



SELF STANDING SIMPLICITY*

*Vacuum locks into upright position and is not meant to be left unattended.

Activate Boost Mode for increased suction power on stubborn messes.

For tougher messes or deeper cleaning, activate the Boost Mode by pressing the dedicated button on the handle. This provides increased suction power for a short duration.

Cleaning Different Surfaces

CORDLESS FREEDOM



The vacuum is designed for effective cleaning on both carpet and hard floors.

The Dirt Devil Cordless Stick Vacuum is designed to effectively clean both carpeted and hard floor surfaces. The powerful suction and brush roll adapt to different floor types for optimal performance.

Low Profile Design

— WHAT'S IN THE BOX —



CORDLESS STANDING STICK VAC



2-IN-1 CREVICE TOOL & DUSTING BRUSH



UPHOLSTERY TOOL



CHARGER

The low-profile design allows the vacuum to reach under furniture with ease.

The slim and low-profile design of the floor nozzle allows you to easily maneuver the vacuum under furniture and into tight spaces, ensuring thorough cleaning throughout your home.

MAINTENANCE

Emptying the Dirt Cup



The dirt cup features a one-touch release for easy and hygienic emptying.

For optimal performance, empty the dirt cup regularly, especially when debris reaches the MAX fill line. The dirt cup features a one-touch release mechanism for easy and hygienic disposal of collected dirt and debris.

Cleaning the Foam Filter

The vacuum uses a foam filter. To maintain suction power, it is important to clean the filter periodically.

1. Remove the dirt cup from the vacuum.
2. Carefully remove the foam filter from the dirt cup assembly.
3. Tap the filter gently over a trash can to remove loose dirt and dust.
4. If necessary, rinse the foam filter under cool running water until the water runs clear.
5. Allow the filter to air dry completely for at least 24 hours before reinserting it into the vacuum. Do not use the vacuum with a wet filter.

TROUBLESHOOTING

If you experience issues with your vacuum cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged Power button not pressed correctly	Charge the battery fully Ensure the power button is pressed firmly
Reduced suction power	Dirt cup is full Filter is clogged Hose or nozzle is blocked	Empty the dirt cup Clean or replace the filter Check for and remove any blockages
Brush roll not spinning	Obstruction in brush roll Brush roll is off	Remove any hair or debris wrapped around the brush roll Ensure brush roll is engaged (if applicable)
Vacuum falls over when standing	Not locked into upright position Uneven surface	Ensure the vacuum head is pushed forward until it clicks into the self-standing position Place on a flat, stable surface

SPECIFICATIONS

Feature	Detail
Brand	Dirt Devil
Model Name	Self-Standing Cordless Stick Vacuum Cleaner
Model Number	BD57000V
Special Feature	Converts to a Hand Vacuum, Cordless, Self-Standing
Filter Type	Foam
Included Components	2-in-1 Crevice & Dusting Brush, Charger, Upholstery Tool
Is Cordless?	Yes
Capacity	0.48 Liters
Wattage	150 watts
Form Factor	Stick
Color	Black
Product Dimensions	10.5" L x 10" W x 46" H
Battery Description	Lithium-Ion
Noise Level	80 dB
Item Weight	7 pounds
UPC	046034904778

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official Dirt Devil website. You can also contact customer service using the information provided on the product packaging.

Please have your model number (BD57000V) and purchase date available when contacting support.

© 2024 Dirt Devil. All rights reserved.