

[manuals.plus](#) /

› [Weber](#) /

› **Weber Searwood XL 600 Pellet Grill Instruction Manual**

Weber XL 600

Weber Searwood XL 600 Pellet Grill Instruction Manual

Model: XL 600 | Brand: Weber

1. INTRODUCTION

Welcome to the world of precision outdoor cooking with your new Weber Searwood XL 600 Pellet Grill. This manual provides essential information for the safe and efficient operation, maintenance, and care of your grill. Please read it thoroughly before assembly and first use.



Figure 1: Front view of the Weber Searwood XL 600 Pellet Grill.

2. SETUP AND ASSEMBLY

Your Weber Searwood XL 600 Pellet Grill requires assembly. Follow the detailed instructions provided in the separate assembly guide included with your product. Ensure all components are present and undamaged before beginning assembly.

2.1 Key Assembly Steps

- 1. Unboxing and Component Identification:** Carefully unpack all parts and identify them using the parts list in your assembly guide.
- 2. Base and Frame Assembly:** Securely attach the legs and bottom shelf to form the grill's stable base.
- 3. Hopper and Fire Pot Installation:** Install the pellet hopper and ensure the fire pot assembly is correctly seated.
- 4. Grill Grates and Heat Deflectors:** Place the heat deflector and cooking grates into position.
- 5. Handle and Control Panel Attachment:** Secure the lid handle and attach the digital control panel.

6. **Power Connection:** Connect the power cord to the grill and a grounded electrical outlet.



Figure 2: Front view of the grill, showcasing the main cooking chamber and control panel.



Figure 3: Side view of the grill, highlighting its robust construction.



Figure 4: Rear view of the grill.

3. OPERATING INSTRUCTIONS

The Weber Searwood XL 600 offers a versatile cooking experience, from low-and-slow smoking to high-heat searing.

3.1 Temperature Control and Range

The grill features a full temperature range from 180°F to 600°F, allowing you to smoke, sear, and roast on the same grill. The Rapid React PID controller heats the grill to the set temperature in 15 minutes or less under optimal conditions, ensuring quick recovery after the lid is opened and consistent temperature in cold weather.

3.2 DirectFlame™ Cooking

Experience flavorful searing, browning, and crisping with DirectFlame™ cooking. Without a large sheet diffuser blocking the flame, you can achieve deep sear marks, golden browning, and crispy bark on your food. The full grate sear zone ensures even heating across the entire cooking surface.



Figure 5: Ribs being smoked on the Weber Searwood XL 600 Pellet Grill.

3.3 SmokeBoost Setting

Utilize the SmokeBoost setting to maintain a temperature of 180°F, optimizing smoke absorption into the food and intensifying flavor for authentic barbecue results.

3.4 WEBER CONNECT App Integration

Monitor and control your grill remotely using the WEBER CONNECT app via WiFi and Bluetooth connectivity. The app provides live graphs of your cook, readiness alerts, and access to recipes, enhancing your grilling experience.

3.5 Accessories

Expand your cooking capabilities with optional accessories such as a rotisserie or griddle insert, each sold separately.

4. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your grill.

4.1 Grease and Ash Management

The grill features a convenient pull-and-clean grease and ash management system located at the front. This design allows for quick and easy cleanup after each use.



Figure 6: The pull-and-clean grease and ash management system.



Figure 7: Easy removal of the ash tray for cleaning.

4.2 Grate Cleaning

Allow grates to cool slightly after cooking. Use a grill brush to remove any food residue. For deeper cleaning, grates can be removed and washed with warm, soapy water.

5. TROUBLESHOOTING

If you encounter any issues with your Weber Searwood XL 600 Pellet Grill, please refer to the following general guidelines. For detailed troubleshooting, consult the comprehensive manual or contact customer support.

- **Grill Not Heating:** Ensure the power cord is securely plugged in and the circuit breaker has not tripped. Check the pellet hopper for sufficient fuel.
- **Inconsistent Temperature:** Verify that the lid is properly closed and sealed. Ensure the grill grates and heat deflector are clean and free of excessive grease buildup.

- **Excessive Smoke:** A small amount of smoke is normal during startup and cooking. If smoke is excessive and persistent, check for proper pellet feed and ensure the fire pot is not overfilled.
- **App Connectivity Issues:** Ensure your grill's Wi-Fi and Bluetooth are enabled and within range of your smart device. Restart both the grill and the app if connection problems persist.

6. SPECIFICATIONS

Feature	Detail
Brand	Weber
Model Name	Weber Searwood XL 600 Pellet Grill
Product Dimensions	23"D x 50.5"W x 45.75"H
Item Weight	193.6 pounds
Color	Black
Fuel Type	Pellet
Material	Stainless Steel, Alloy Steel
Finish Type	Porcelain Enamel
Voltage	120 Volts
Wattage	1500 watts
Special Feature	Superior Heat Retention
Assembly Required	Yes
Number of Racks	1 (main cooking grate)
Heating Elements	3
Country of Origin	China
Item Model Number	1500121
UPC	077924991547



Figure 8: Key dimensions of the Weber Searwood XL 600 Pellet Grill.

7. WARRANTY INFORMATION

The Weber Searwood XL 600 Pellet Grill comes with a **5-Year Limited Warranty**. Please refer to the official Weber warranty documentation included with your product for full terms and conditions, including coverage details and limitations.

8. SUPPORT AND CONTACT

For further assistance, technical support, or to inquire about accessories, please utilize the following resources:

- **WEBER CONNECT App:** Use the integrated app for real-time monitoring, control, and access to recipes and tips.
- **Online Resources:** Visit the official Weber website for FAQs, product registration, and additional support


materials.

- **Customer Service:** Contact Weber customer service directly for personalized assistance. Refer to your product packaging or the Weber website for current contact information.

© 2024 Weber-Stephen Products LLC. All rights reserved.

Related Documents - XL 600

	<p><u>Weber Searwood 600/XL 600 Owner's Manual: Safety, Operation, and Maintenance</u></p> <p>Comprehensive owner's manual for the Weber Searwood 600 and Searwood XL 600 pellet grills. Covers safety precautions, detailed operating instructions, maintenance guidelines, troubleshooting tips, and warranty information.</p>
	<p><u>Weber Searwood 600 Pellet Barbecue Quick Start Guide</u></p> <p>A quick start guide for the Weber Searwood 600 Pellet Barbecue, covering setup, cooking methods (direct and indirect), controller functions, and maintenance. Includes temperature settings and accessory recommendations.</p>
	<p><u>Searwood XL 600 Pellet Barbecue Quick Start Guide - Weber</u></p> <p>Concise guide to setting up and using your Weber Searwood XL 600 Pellet Barbecue. Learn about direct and indirect cooking methods, temperature settings, and essential maintenance.</p>
	<p><u>Weber SmokeFire Wood Pellet Grill Owner's Manual</u></p> <p>Comprehensive owner's manual for the Weber SmokeFire Wood Pellet Grill, covering safety, warranty, cooking system, special features, operation, troubleshooting, maintenance, and replacement parts.</p>
	<p><u>Weber SmokeFire EX4/EX6 Wood Pellet Grill Assembly Guide</u></p> <p>Step-by-step assembly instructions for the Weber SmokeFire EX4 and EX6 wood pellet grills, including parts lists, safety precautions, and required tools. Download the BILT app for 3D assembly guidance.</p>

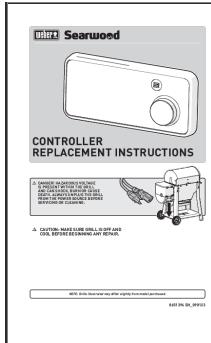

[Weber Searwood Controller Replacement and App Connection Guide](#)

Instructions for replacing the controller on a Weber Searwood grill, including safety warnings, environmental recycling information, and a guide to connecting the grill to the Weber Connect app via Bluetooth or Wi-Fi.