

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [SNOW](#) /

› [SNOW LED Whitening Electric Toothbrush User Manual](#)

SNOW 075-0154

SNOW LED Whitening Electric Toothbrush User Manual

Model: 075-0154

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your SNOW LED Whitening Electric Toothbrush. Please read this manual thoroughly before first use and retain it for future reference.





Image 1.1: SNOW LED Whitening Electric Toothbrush, showing the product and its packaging, highlighting its whitening and cleaning features with 4 modes.

2. SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product:

- For adult use only.
- Keep out of reach of children.
- Do not use near water or while bathing.
- Unplug from outlet when not in use.
- Consult a dentist or physician before use if you have any medical conditions.

3. PRODUCT COMPONENTS

Your SNOW LED Whitening Electric Toothbrush package includes the following items:

- SNOW LED Whitening Electric Toothbrush Handle
- 2 Brush Heads
- Charging Base
- User Manual (this document)



Image 3.1: Components of the SNOW LED Whitening Electric Toothbrush, including the handle, brush heads, and charging base.

4. SETUP

4.1 Initial Charging

1. Place the charging base on a stable, dry surface away from water.
2. Plug the charging base into a suitable power outlet.
3. Place the toothbrush handle onto the charging base. The indicator light on the toothbrush will illuminate to confirm charging has begun.

4. Allow the toothbrush to charge for a minimum of 12 hours before first use to ensure full battery capacity. A full charge provides approximately 14 days of battery life.

4.2 Attaching the Brush Head

1. Align the brush head with the metal shaft on the toothbrush handle.
2. Push the brush head down firmly until it clicks into place. Ensure it is securely attached.

5. OPERATING INSTRUCTIONS

5.1 Brushing Modes

Your SNOW LED Whitening Electric Toothbrush features 4 unique brushing modes:

- **Clean:** Standard mode for daily plaque removal.
- **Whiten:** Designed for teeth whitening with LED blue light activation.
- **Polish:** For polishing tooth surfaces to enhance brightness.
- **Sensitive:** Gentle cleaning for sensitive teeth and gums.



Image 5.1: Close-up of the toothbrush handle showing the four brushing modes: Clean, Whiten, Polish, and Sensitive.

5.2 How to Brush

1. Wet the brush head and apply a small amount of toothpaste.
2. Place the brush head against your teeth at a slight angle towards the gumline.
3. Press the power button to turn on the toothbrush. Press repeatedly to cycle through the modes.
4. Gently move the brush head slowly across each tooth surface. Do not scrub.
5. The built-in smart timer will pulse every 30 seconds to indicate when to move to a different quadrant of your mouth, and automatically stop after 2 minutes.
6. After brushing, rinse your mouth and the brush head thoroughly.



Effortlessly and automatically whitens your teeth while you brush using blue-light LED.

Image 5.2: A person demonstrating the use of the SNOW LED Whitening Electric Toothbrush, showing the blue LED light in action during brushing.

Your browser does not support the video tag.

Video 5.3: A short preview video demonstrating the gentle sonic vibrations of the SNOW LED Whitening Electric Toothbrush.

6. MAINTENANCE

6.1 Cleaning the Toothbrush

1. After each use, rinse the brush head thoroughly under running water.
2. Wipe the toothbrush handle with a damp cloth. Do not submerge the handle in water.
3. Clean the charging base periodically with a dry cloth.

6.2 Replacing Brush Heads

For optimal performance and hygiene, it is recommended to replace the brush head every 3 months, or sooner if the

bristles become frayed.

1. Grip the brush head firmly and pull it straight off the handle.
2. Align the new brush head with the metal shaft and push it down until it clicks into place.



Image 6.1: Packaging for SNOW LED Whitening Electric Toothbrush replacement heads, indicating they are designed for plaque removal.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Toothbrush does not turn on.	Battery is depleted.	Place the toothbrush on the charging base and ensure it charges for at least 12 hours.
Toothbrush does not charge.	Charging base not plugged in or faulty outlet.	Ensure the charging base is securely plugged into a working outlet. Try a different outlet.
Reduced brushing performance.	Worn brush head.	Replace the brush head.
Bristles falling out.	Defective brush head or excessive pressure during brushing.	Replace the brush head. If problem persists, contact customer support.

8. SPECIFICATIONS

- **Model Number:** 075-0154
- **Product Dimensions:** 2.63 x 4 x 10.88 inches
- **Weight:** 14.56 ounces
- **Power Source:** Battery Powered (1 Lithium Ion battery included)
- **Brushing Modes:** Clean, Whiten, Polish, Sensitive
- **Sonic Vibrations:** Up to 39,000 per minute
- **Battery Life:** Approximately 14 days (based on 2 minutes of brushing, twice daily)
- **Special Features:** LED Blue Light Whitening, Smart Timer (2-minute with 30-second quadrant pacer)

9. WARRANTY AND SUPPORT

Your SNOW LED Whitening Electric Toothbrush comes with a **2-year warranty**. SNOW also offers a **60-day money-back guarantee**.

For customer support, warranty claims, or to purchase replacement parts, please visit the official SNOW website or contact their customer service department.

Manufacturer: Snow

Date First Available: March 13, 2024

© 2025 SNOW. All rights reserved.