

Genérico BC-AU-BE-142-BL

BICONIC True Wireless In-Ear Sport Earbuds User Manual

Model: BC-AU-BE-142-BL

1. PRODUCT OVERVIEW

1.1 Introduction

Welcome to your BICONIC True Wireless In-Ear Sport Earbuds. These earbuds are designed for an active lifestyle, offering true wireless freedom, a secure fit, and clear audio. This manual will guide you through the setup, operation, and maintenance of your new earbuds.

1.2 Key Features

- True Wireless Stereo (TWS) Connection
- Rechargeable Battery for extended use
- Portable Charging Case for on-the-go power and protection
- In-Ear Earphone Design for a comfortable and secure fit
- Automatic Pairing for quick and easy connection

1.3 Package Contents

- BICONIC True Wireless Earbuds (Left & Right)
- Charging Case
- USB Charging Cable
- User Manual

1.4 Product Diagram



This image displays the BICONIC True Wireless In-Ear Sport Earbuds, colored in blue, securely placed within their transparent charging case. The case features a digital display showing "95", indicating the battery percentage, along with "L" and "R" indicators for the left and right earbuds.

2. SETUP

2.1 Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case to ensure optimal performance.

1. Place the earbuds into the charging case, ensuring they are correctly seated in their respective slots.
2. Connect the USB charging cable to the charging port on the case and the other end to a USB power source (e.g., computer, wall adapter).
3. The digital display on the case will show the charging status. A full charge is indicated when the display shows "100" or stops blinking.

2.2 Pairing with Your Device

The earbuds feature automatic pairing for convenience, making connection to your device seamless.

1. Ensure the earbuds are charged and placed inside the charging case.
2. Open the charging case. The earbuds will automatically power on and enter pairing mode.
3. On your device (smartphone, tablet, etc.), enable Bluetooth.
4. Search for "BICONIC" or a similar name in the list of available Bluetooth devices.
5. Select "BICONIC" to connect. Once connected, you will hear a confirmation tone from the earbuds.
6. If pairing fails, turn off Bluetooth on your device, place earbuds back in case, close and reopen, then try again.

3. OPERATING INSTRUCTIONS

3.1 Power On/Off

- **Power On:** Open the charging case, or long-press the touch area on both earbuds for 3 seconds.

- **Power Off:** Place the earbuds back into the charging case and close the lid, or long-press the touch area on both earbuds for 5 seconds.

3.2 Music Playback

Function	Action
Play/Pause	Single tap on either earbud.
Next Track	Double tap on the Right earbud.
Previous Track	Double tap on the Left earbud.
Volume Up	Triple tap on the Right earbud.
Volume Down	Triple tap on the Left earbud.

3.3 Call Management

Function	Action
Answer/End Call	Single tap on either earbud.
Reject Call	Long press on either earbud for 2 seconds.

3.4 Voice Assistant

Activate your device's voice assistant (Siri, Google Assistant, etc.) by long-pressing on either earbud for 3 seconds.

4. MAINTENANCE AND CARE

4.1 Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Do not use harsh chemicals, cleaning solvents, or strong detergents, as these may damage the product.
- Keep charging contacts clean and free of debris to ensure proper charging.

4.2 Storage

- Store the earbuds in their charging case when not in use to protect them from damage and keep them charged.
- Avoid storing in extreme temperatures (hot or cold) or high humidity, as this can affect battery life and product longevity.

4.3 Battery Life

- To preserve battery life, charge the earbuds and case regularly, even if not in frequent use.
- Avoid fully discharging the battery for extended periods, as this can reduce its overall lifespan.

5. TROUBLESHOOTING

5.1 Common Issues and Solutions

Earbuds not pairing or connecting

- Ensure both earbuds are sufficiently charged.
- Turn off and then turn on Bluetooth on your device.
- Forget "BICONIC" from your device's Bluetooth list and attempt to re-pair.
- Place earbuds back in the case, close the lid, wait a few seconds, then open again to reset their connection.

Only one earbud working

- Ensure both earbuds are charged.
- Place both earbuds back in the charging case, close the lid, and then take them out together to re-sync.
- If the issue persists, try resetting the earbuds (refer to specific reset instructions if available, otherwise, a full re-pairing usually resolves this).

Low volume or poor sound quality

- Adjust the volume on both your connected device and the earbuds.
- Clean any earwax or debris from the earbud mesh.
- Ensure a secure and proper fit of the earbuds in your ears.
- Move closer to your connected device to avoid signal interference.

6. SPECIFICATIONS

6.1 Technical Specifications

Feature	Detail
Brand	Genérico
Model Name	BC-AU-BE-142-BL
Form Factor	True Wireless In-Ear
Connectivity Technology	Wireless
Color	Blue
Special Features	Rechargeable Battery
Included Components	Cable
Age Range (Description)	Adult
Manufacturer	Genérico
Product Model Number	BC-AU-BE-142-BL
ASIN	B0CXZW845P

7. WARRANTY AND SUPPORT

7.1 Warranty Information

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. Keep your purchase receipt as proof of purchase for any warranty claims.

7.2 Customer Support

For any questions, technical support, or warranty claims, please contact your retailer or the manufacturer's customer service. For more information, you can also visit the product page on Amazon.com.mx:

<https://www.amazon.com.mx/dp/B0CXZW845P>

© 2024 Genérico. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question