

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [VIANIS](#) /
- › [VIANIS Outdoor Wall Light Fixtures \(Model V81242BK\) Instruction Manual](#)

## VIANIS V81242BK

# VIANIS Outdoor Wall Light Fixtures (Model V81242BK) Instruction Manual

[Visit the VIANIS Store](#)

## 1. PRODUCT OVERVIEW

---

The VIANIS Outdoor Wall Light Fixtures (Model V81242BK) are designed for exterior lighting applications, featuring a modern aesthetic and practical functionality. These fixtures are equipped with a built-in photocell sensor for automatic dusk-to-dawn operation, enhancing convenience and energy efficiency. Constructed from durable, anti-rust aluminum with tempered glass, they are built to withstand various outdoor weather conditions.

# Dusk To Dawn Sensor

Day and night automatic switch, free your hands



Image 1.1: Front view of the VIANIS Outdoor Wall Light Fixture.

## 2. SAFETY INFORMATION

- **Electrical Safety:** Always turn off power at the circuit breaker before installation, maintenance, or bulb replacement. Consult a qualified electrician if you are unsure about wiring procedures.
- **Grounding:** Ensure the fixture is properly grounded to avoid electrical shock.
- **Bulb Compatibility:** Use only E26 base bulbs with a maximum wattage of 100W. Refer to the specifications for recommended bulb types.
- **Outdoor Use:** This fixture is designed for outdoor, wet location use. Ensure all connections are sealed and waterproofed during installation.
- **Handling:** Handle glass components with care to prevent breakage.

### 3. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- VIANIS Outdoor Wall Light Fixture(s)
- Mounting Hardware (screws, wire nuts, mounting plate)
- Shade (pre-assembled)
- *Bulb Not Included*

### 4. SPECIFICATIONS

<b>Brand</b>	VIANIS
<b>Model Number</b>	V81242BK
<b>Color</b>	Black
<b>Material</b>	Aluminum, Glass
<b>Product Dimensions</b>	7.09"L x 5.91"W x 12.6"H
<b>Power Source</b>	Corded Electric (120 Volts AC)
<b>Bulb Base</b>	E26
<b>Max Wattage</b>	100 watts
<b>Special Features</b>	Anti-Rust, Dusk to Dawn Sensor, Tempered Glass, Waterproof
<b>Installation Type</b>	Semi Flush Mount
<b>Certification</b>	ETL Listed



Image 4.1: Product dimensions and key features.

### 5. SETUP AND INSTALLATION

The VIANIS Outdoor Wall Light Fixtures are designed for straightforward installation. No complex assembly

is required as the lampshade is integrated.

## 5.1 Pre-Installation

1. **Turn off Power:** Locate the circuit breaker controlling the outdoor lighting circuit and turn off the power. Verify power is off using a voltage tester.
2. **Unpack Contents:** Carefully remove the fixture and all components from the packaging. Inspect for any damage.

## 5.2 Mounting the Fixture

3. **Attach Mounting Plate:** Secure the mounting plate to your junction box using the provided screws. Ensure it is firmly attached and level.
4. **Wire Connections:** Connect the fixture's wires to your household wiring according to standard electrical codes:
  - Connect the **black** fixture wire to the **black** (live) household wire.
  - Connect the **white** fixture wire to the **white** (neutral) household wire.
  - Connect the **green** or **bare copper** fixture wire to the **green** or **bare copper** (ground) household wire.

Use the provided wire nuts to secure all connections.

5. **Secure Fixture:** Carefully tuck the wires into the junction box. Align the fixture with the mounting plate and secure it using the provided screws or nuts.

## 5.3 Bulb Installation

6. **Insert Bulb:** Screw an E26 base bulb (not included) into the socket at the bottom of the fixture. Do not overtighten.

## 5.4 Post-Installation

7. **Restore Power:** Turn the power back on at the circuit breaker.
8. **Test Functionality:** The light should turn on automatically at dusk and off at dawn due to the built-in sensor.

# 6. OPERATING INSTRUCTIONS

---

The VIANIS Outdoor Wall Light Fixtures feature an integrated photocell sensor for automatic operation.

## 6.1 Dusk to Dawn Sensor

- The built-in photocell sensor detects ambient light levels.
- The fixture will automatically turn **ON** when it gets dark (dusk).
- The fixture will automatically turn **OFF** when it gets light (dawn).
- No manual switching is required for daily operation.

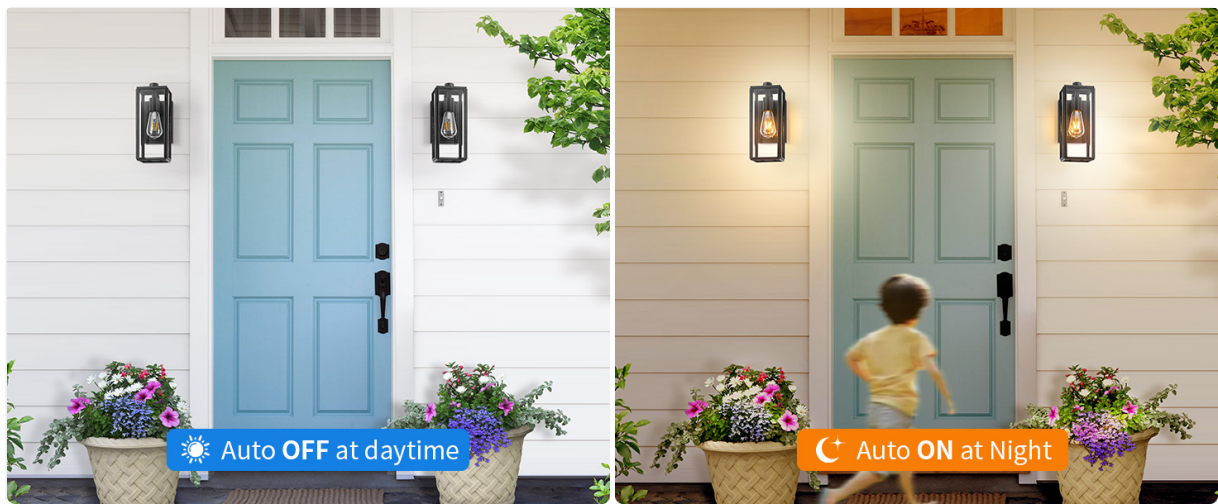 


Image 6.1: Dusk to Dawn sensor automatic operation.

## 6.2 Bulb Compatibility

The fixture is compatible with any E26 base bulb, allowing for various lighting options. Ensure the bulb's wattage does not exceed 100W.

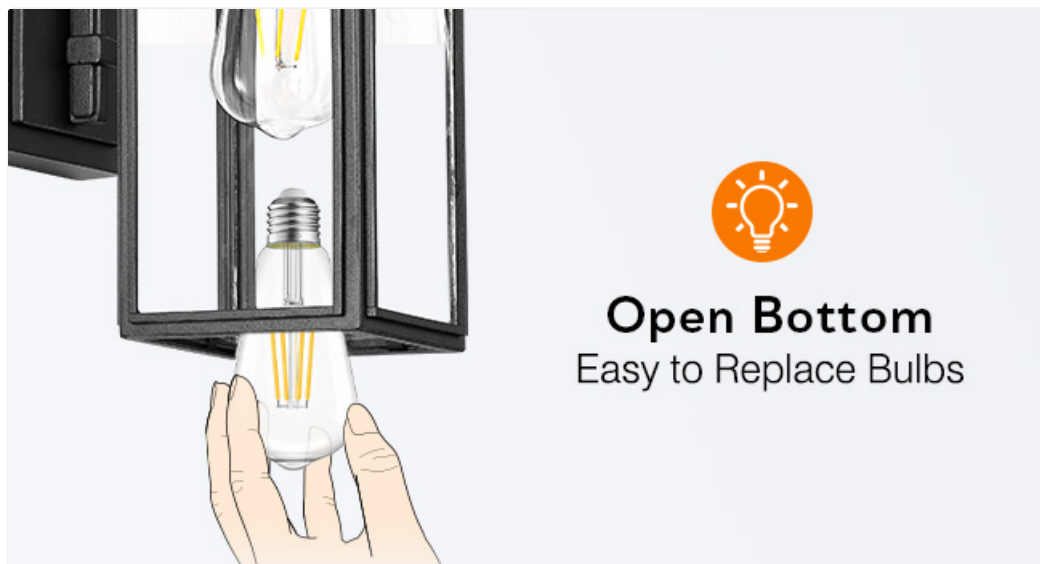 


Image 6.2: Examples of compatible E26 base bulbs.

## 7. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your outdoor wall light fixtures.

### 7.1 Cleaning

- **Power Off:** Always turn off power at the circuit breaker before cleaning.
- **Exterior:** Wipe the fixture's exterior with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish or glass.
- **Glass Panels:** Clean glass panels gently to remove dirt or water spots.

### 7.2 Bulb Replacement

The fixture features an open bottom design for easy bulb replacement without tools.

1. **Power Off:** Turn off power at the circuit breaker.

2. **Remove Old Bulb:** Unscrew the old E26 bulb from the socket.
3. **Install New Bulb:** Screw in a new E26 bulb (max 100W).
4. **Restore Power:** Turn power back on at the circuit breaker.



Image 7.1: Easy bulb replacement via the open bottom design.

### 7.3 Durability and Weather Resistance

These fixtures are constructed from anti-rust aluminum and feature a high waterproof rating, making them suitable for various outdoor conditions including rain, sun, snow, and wind.



Image 7.2: Weather resistance features of the fixture.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on at dusk.	<ol style="list-style-type: none"> <li>1. Power is off.</li> <li>2. Bulb is faulty or loose.</li> <li>3. Sensor is obstructed or receiving too much light.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check circuit breaker.</li> <li>2. Replace bulb or ensure it is screwed in tightly.</li> <li>3. Ensure sensor is clear and not exposed to other light sources (e.g., streetlights, other fixtures).</li> </ol>
Light stays on during the day.	<ol style="list-style-type: none"> <li>1. Sensor is obstructed or dirty.</li> <li>2. Sensor is faulty.</li> </ol>	<ol style="list-style-type: none"> <li>1. Clean the sensor area. Ensure no objects are blocking light from reaching the sensor.</li> <li>2. Contact customer support if the issue persists after cleaning and checking for obstructions.</li> </ol>

Light flickers.	<ol style="list-style-type: none"><li>1. Loose bulb.</li><li>2. Loose wiring connection.</li><li>3. Incompatible bulb type.</li></ol>	<ol style="list-style-type: none"><li>1. Tighten the bulb.</li><li>2. Turn off power and check wire connections. Re-secure if loose.</li><li>3. Ensure bulb is E26 base and compatible with the fixture.</li></ol>
-----------------	---	--

## 9. WARRANTY AND SUPPORT

VIANIS provides a quality guarantee and warranty for this product.

### 9.1 Warranty Information

- This product comes with a **3-year warranty** from the date of purchase.
- A 60-day free return policy is also available.

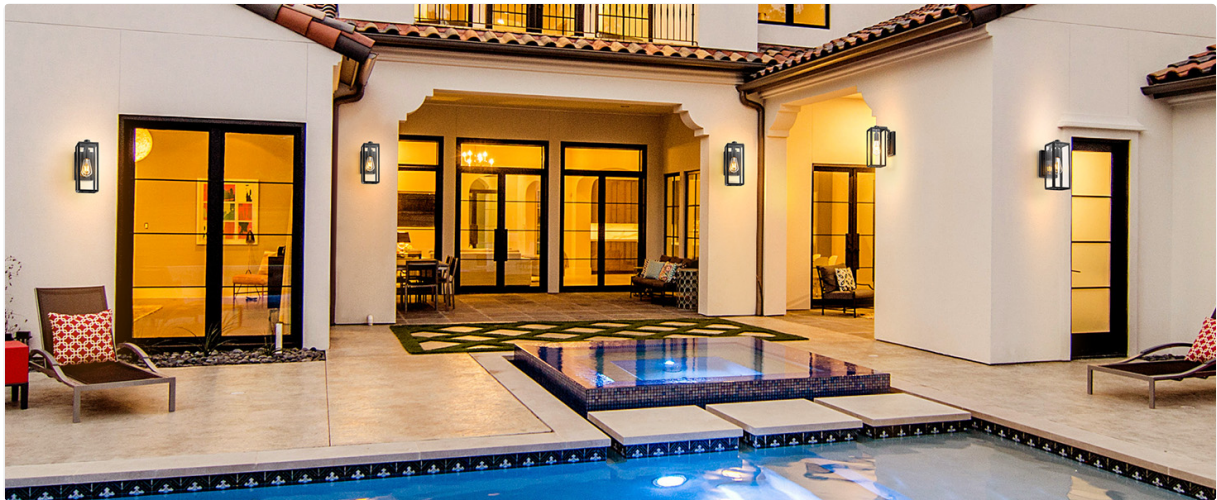 


Image 9.1: 3-Year Warranty Guaranteed.

### 9.2 Customer Support

For any questions, concerns, or warranty claims, please contact VIANIS customer service. Our team aims to respond within 24 hours.

You can find contact information and more products by visiting the official VIANIS store:

[VIANIS Official Store](#)