



Manuals.plus /

› YAMAHA /

› Yamaha PSR-E383 Portable Keyboard User Manual

## YAMAHA PSR-E383

# Yamaha PSR-E383 Portable Keyboard User Manual

Model: PSR-E383 | Brand: YAMAHA

## INTRODUCTION

---

The Yamaha PSR-E383 is a versatile 61-key portable keyboard designed for beginners and aspiring musicians. It features velocity-sensitive keys, a wide array of 650 authentic instrument sounds, and 260 automatic accompaniment styles, allowing for dynamic and expressive performances. With built-in lesson functions and a lightweight, portable design, the PSR-E383 makes learning and creating music both fun and accessible, whether at home or on the go.



Figure 1: Yamaha PSR-E383 Portable Keyboard

## SETUP

---

### Unpacking and Initial Inspection

Carefully remove all components from the packaging. Ensure all bundled items are present:

- Yamaha PSR-E383 Portable Keyboard
- Music Stand
- Yamaha PA-130 AC Adapter
- Free Download Song Book (digital)
- Owner's Manual (this document)

# Connectivity

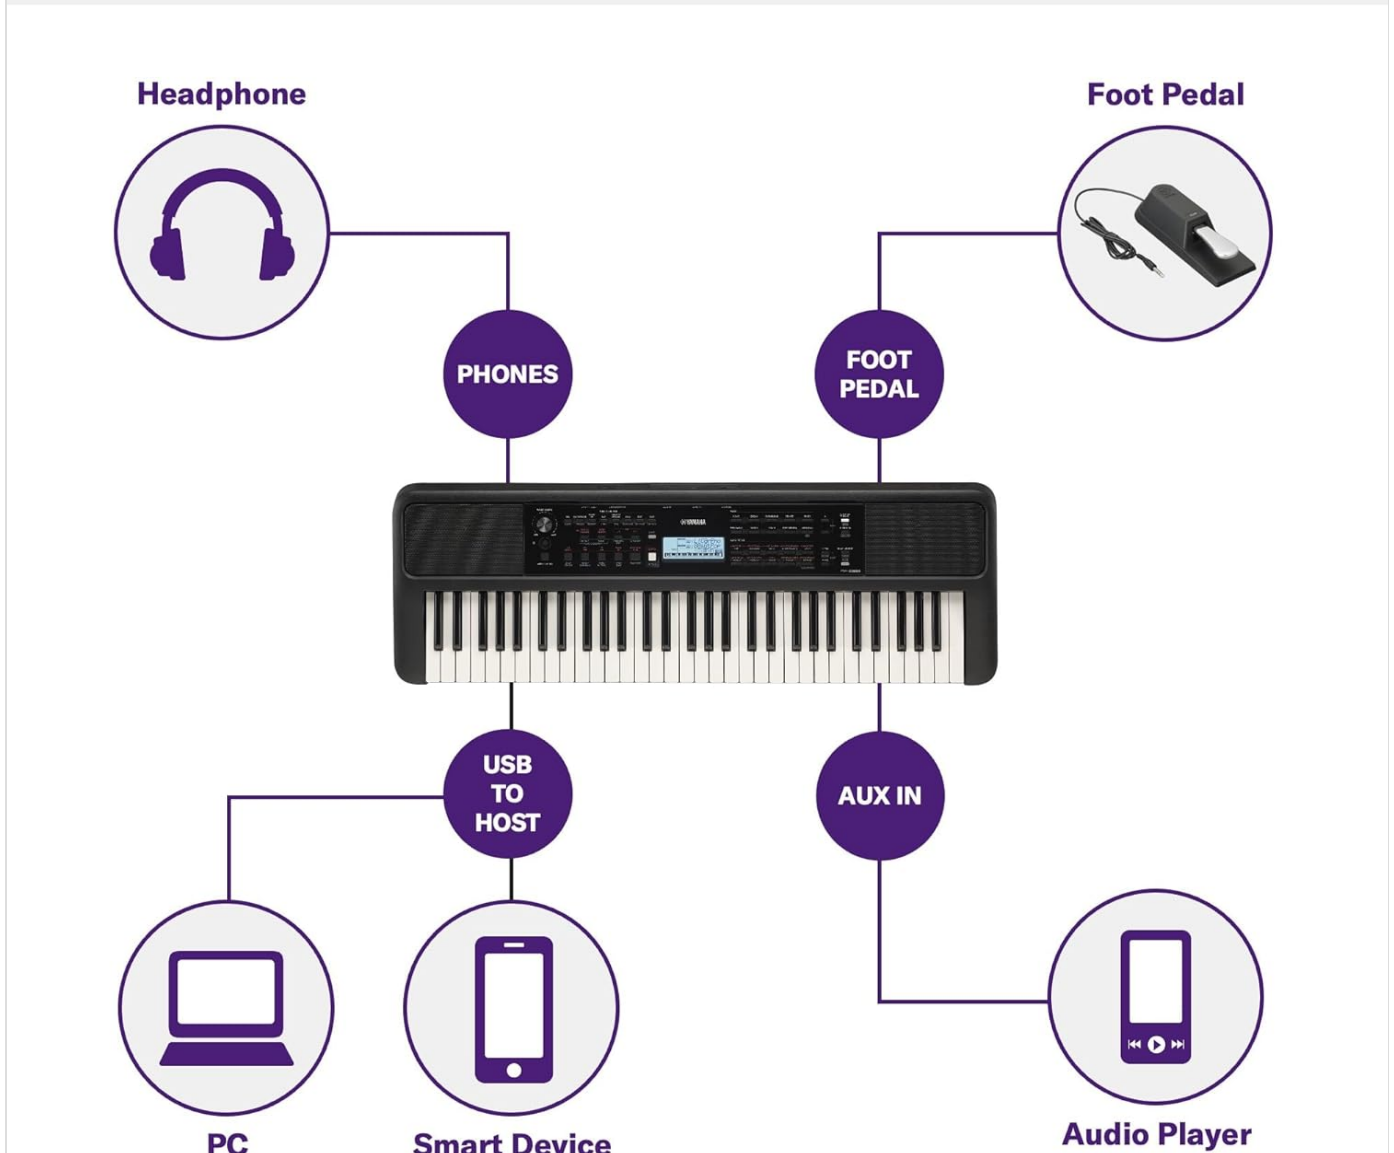


Figure 2: Bundled Items

## Power Connection

1. Connect the supplied Yamaha PA-130 AC Adapter to the DC IN jack on the rear of the keyboard.
2. Plug the AC adapter into a standard wall outlet.
3. Alternatively, the keyboard can be powered by six "AA" size alkaline (LR6) or rechargeable nickel-metal hydride (Ni-MH) batteries.

## Connecting Peripherals

The PSR-E383 offers various connectivity options:

- **Headphone Jack (3.5mm):** For private practice.
- **Foot Pedal Jack (6.35mm):** For connecting an optional sustain pedal (FC4A or FC5 recommended).
- **USB TO HOST Terminal:** Connect to a PC or smart device for MIDI communication.
- **AUX IN Jack:** Connect an audio player to play along with your favorite songs.

# Optional Items Sold Separately



**L-2C  
Keyboard Stand**



**FC4A**



**FC5**

**Foot Pedal**

*Figure 3: Connectivity Overview*

## OPERATING INSTRUCTIONS

### Basic Operation

Press the POWER button to turn on the keyboard. Adjust the MASTER VOLUME knob to a comfortable listening level.

# Panel Layout



Figure 4: Keyboard Panel Layout

## Exploring Voices (Instrument Sounds)

The PSR-E383 boasts 650 high-quality instrument voices. Use the VOICE category buttons and the dial/number pad to select different sounds like pianos, guitars, strings, and more. The velocity-sensitive keys allow for expressive playing, where the volume and timbre change based on how hard you strike the keys.

# Expressive playing pleasure

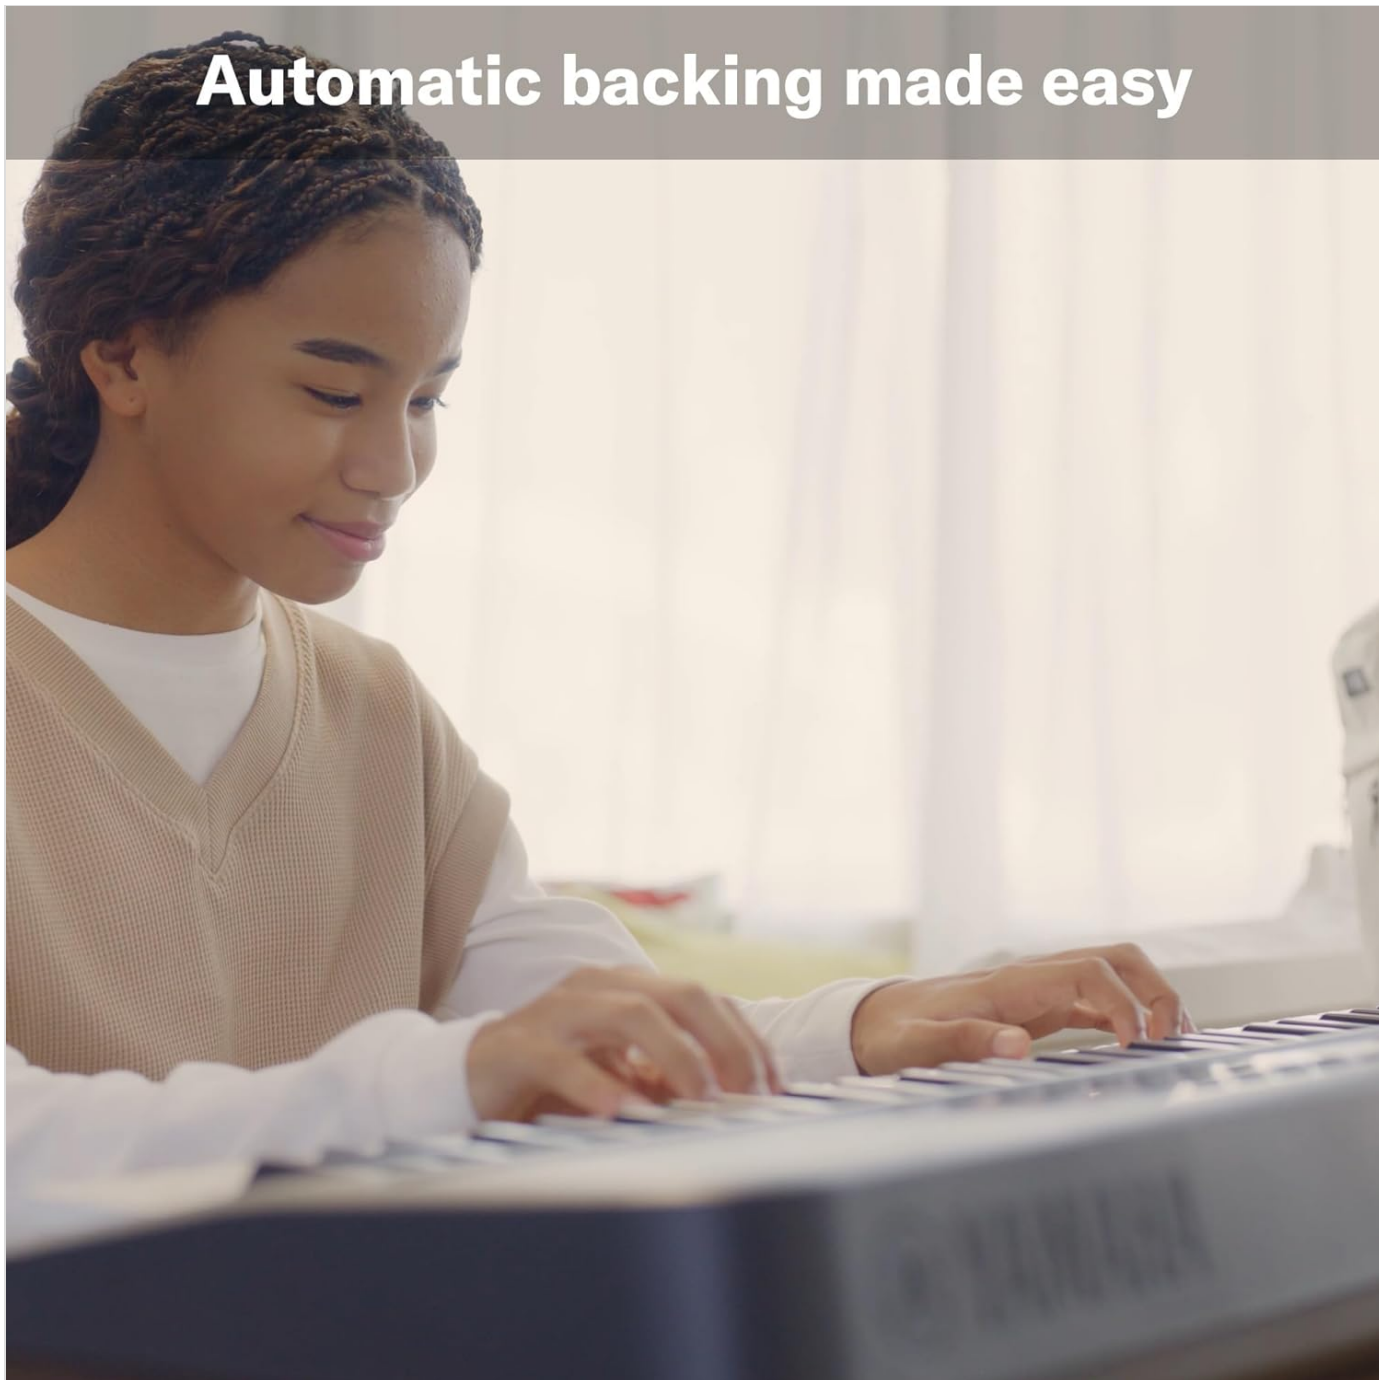


*Figure 5: Expressive Playing with Touch Sensitivity*

## **Using Styles (Automatic Accompaniment)**

With 260 automatic accompaniment styles, you can enjoy a full band experience. Select a STYLE category and then a specific style. Use the Auto Chord Play and Smart Chord functions to generate appropriate chords and backing tracks as you play.

# Automatic backing made easy

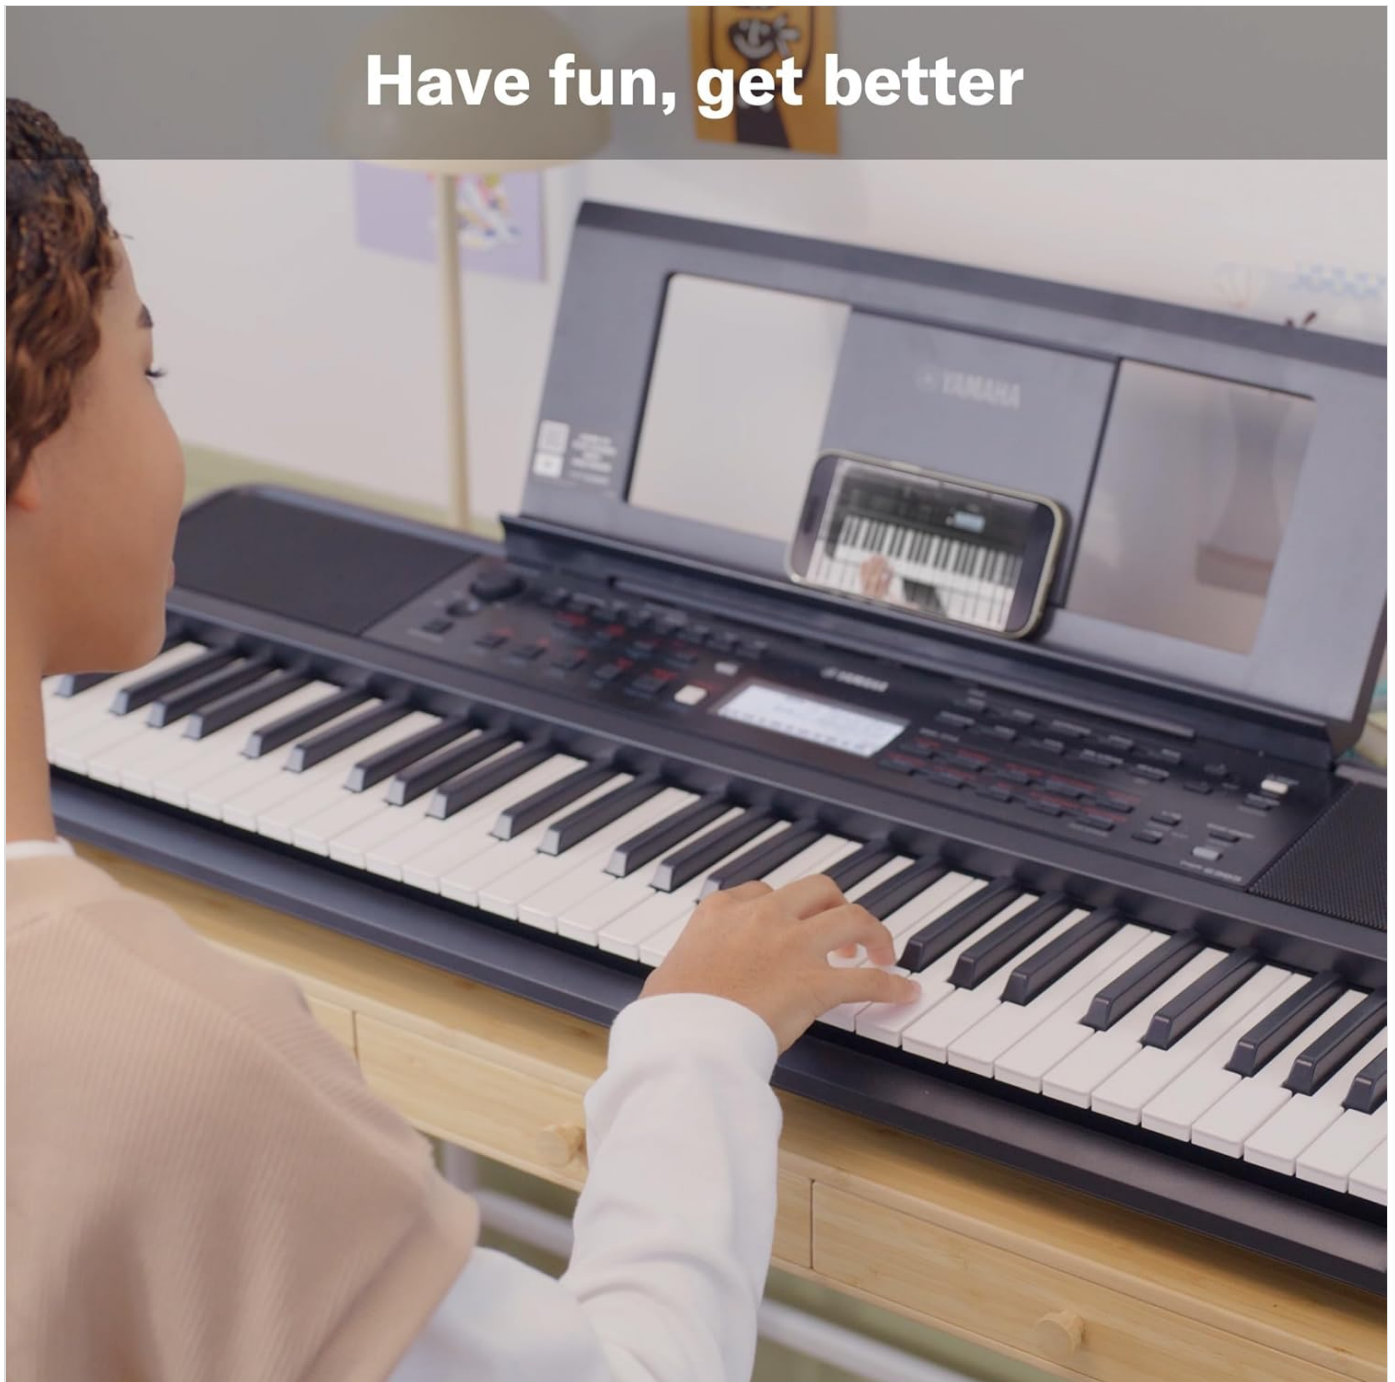


*Figure 6: Automatic Backing Made Easy*

## **Interactive Learning Features**

The keyboard includes 125 built-in songs and engaging 3-step lessons to help you improve your skills. The "Keys To Success" feature provides effective practice methods. A free-to-download songbook is also available to complement your learning.

**Have fun, get better**



*Figure 7: Learning with the PSR-E383*

- ✓ **650 high quality Voices, 260 auto accompaniment Styles**
- ✓ **Touch-sensitive keyboard with 48-note polyphony**
- ✓ **125 onboard Songs with various lesson functions**



Figure 8: Key Features Overview

## MAINTENANCE

---

- **Cleaning:** Wipe the keyboard surface with a soft, dry cloth. For stubborn dirt, use a slightly damp cloth and then dry thoroughly. Avoid abrasive cleaners or solvents.
- **Storage:** Store the keyboard in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Handling:** Always handle the keyboard carefully. Avoid dropping it or subjecting it to strong impacts.
- **Power Off:** Always turn off the power when the keyboard is not in use or before disconnecting the AC adapter.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
No sound	Volume too low; headphones connected; power issue.	Increase MASTER VOLUME. Disconnect headphones. Check power connection/batteries.
Keys not responding	Keyboard in demo mode; internal malfunction.	Exit demo mode. Try restarting the keyboard. If issue persists, contact support.
Distorted sound	Volume too high; incorrect audio cable.	Lower MASTER VOLUME. Ensure correct audio cables are used for external devices.

For more complex issues, please refer to the detailed troubleshooting section in the full Owner's Manual (digital download) or contact Yamaha support.

## SPECIFICATIONS

Feature	Detail
Model Name	PSR-E383
Number of Keys	61
Key Type	Velocity-Sensitive
Voices	650 Authentic Sounds
Accompaniment Styles	260
Polyphony	48-Tone
Built-in Songs	125
Connectivity	USB, 6.35mm Jack (Foot Pedal), 3.5mm Jack (Headphones), AUX IN
Power Source	AC Adapter (PA-130) or 6 "AA" Batteries
Dimensions (W x D x H)	39.37 x 15.75 x 7.87 inches (approx.)
Weight	11.11 pounds (5.05 kg)
Color	Black
Skill Level	Beginner

# Weight and Dimensions



Figure 9: Weight and Dimensions

## WARRANTY AND SUPPORT

### Warranty Information

This Yamaha PSR-E383 Portable Keyboard comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging or visit the official Yamaha website for detailed terms and conditions regarding warranty coverage and duration.

### Customer Support

For technical assistance, product inquiries, or service requests, please contact Yamaha customer support through their official website or the contact information provided in your product documentation. Online resources, FAQs, and additional support materials may also be available.

**Online Resources:** [www.yamaha.com](http://www.yamaha.com)

