

ECONTROLLY RM-C3363

ECONTROLLY RM-C3363 Voice Remote Control User Manual

For JVC Android Smart TVs

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your ECONTROLLY RM-C3363 Voice Remote Control. This remote is specifically designed for use with various JVC Android Smart TV models, offering enhanced control and voice command capabilities.

Please read this manual carefully before using the remote control to ensure proper functionality and to maximize your viewing experience.

2. SAFETY INFORMATION

- Keep the remote control out of reach of children.
- Do not expose the remote control to direct sunlight, heat, or moisture.
- Avoid dropping or subjecting the remote control to strong impacts.
- Do not attempt to disassemble or modify the remote control.

3. PACKAGE CONTENTS

The package includes:

- 1 x ECONTROLLY RM-C3363 Voice Remote Control

Note: AAA ALKALINE batteries are required for operation and are not included in the package. Rechargeable batteries are not recommended.

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two (2) new AAA ALKALINE batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the cover back into place until it clicks securely.

Important: Use only AAA ALKALINE batteries. Do not use rechargeable batteries, as they may not provide sufficient power or could damage the remote.

4.2 Pairing the Remote Control

This voice remote control requires pairing with your JVC Android Smart TV before its voice functions can be used. Follow these steps to pair the remote:

1. Ensure your JVC Android Smart TV is powered on.
2. Point the remote control towards your TV.
3. Press and hold the **LEFT** button and the **MENU** button simultaneously for approximately 5 seconds.
4. Release the buttons when an on-screen message indicates that the pairing process has begun or is complete.
5. If pairing is successful, you should be able to use the voice control feature. If not, repeat the steps.





Image 1: Front view of the ECONTROLLY RM-C3363 Voice Remote Control, showing all buttons and layout.

5. OPERATING THE REMOTE CONTROL

The RM-C3363 remote control provides intuitive access to your JVC Android Smart TV's functions. Below is a guide to its primary buttons:

- **Power Button (Red Circle with Line)**: Turns the TV on or off.
- **INPUT Button**: Selects the input source (HDMI, AV, etc.).
- **NETFLIX Button**: Direct access to the Netflix application.
- **YouTube Button**: Direct access to the YouTube application.
- **Media Control Buttons (Record, Play, Pause, Stop, Rewind, Fast Forward)**: Control media playback.
- **S.MODE / GUIDE / P.MODE Buttons**: Access specific TV modes or the electronic program guide.
- **Navigation Pad (Up, Down, Left, Right, OK)**: Navigates menus and confirms selections.
- **Back Button (Curved Arrow)**: Returns to the previous screen or menu.
- **Home Button (House Icon)**: Returns to the TV's home screen.
- **Menu Button (Three Horizontal Lines)**: Opens the TV's main menu or settings.

- **VOL +/- Buttons:** Adjusts the volume level.
- **Voice Control Button (Microphone Icon):** Activates the voice command feature (requires pairing).
- **CH +/- Buttons:** Changes TV channels.
- **Number Pad (0-9):** Directly enters channel numbers or other numerical inputs.
- **INFO Button:** Displays information about the current program or content.
- **Colored Buttons (Red, Green, Yellow, Blue):** Functionality varies depending on the TV application or menu.



Image 2: A user operating the ECONTROLLY RM-C3363 remote control with a JVC Android Smart TV setup.

6. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

7. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new AAA ALKALINE batteries.
 - Ensure there are no obstructions between the remote and the TV's IR receiver.
- **Voice control not working:**
 - Ensure the remote control is properly paired with your JVC Android Smart TV (refer to Section 4.2).
 - Check your TV's network connection, as voice commands often require internet access.
- **Specific buttons not working:**
 - Some buttons may have specific functions depending on the TV's current mode or application.
 - If multiple buttons are unresponsive, try replacing the batteries.

8. SPECIFICATIONS

Feature	Detail
Model Number	RM-C3363
Compatible Devices	JVC Android Smart TVs (e.g., LT-50KB608, LT-42KB408, LT-39KB195, LT-32KB208, LT-58KB618, LT-40M690, LT-43M690, LLT-55MU508, LT-32KB202, LT-42M690, T-58N7115A, RC-N2409)
Special Feature	Voice Search
Color	Black
Power Source	2 x AAA ALKALINE Batteries (not included)
Product Dimensions	3.94 x 1.57 x 0.59 inches
Item Weight	1.76 ounces



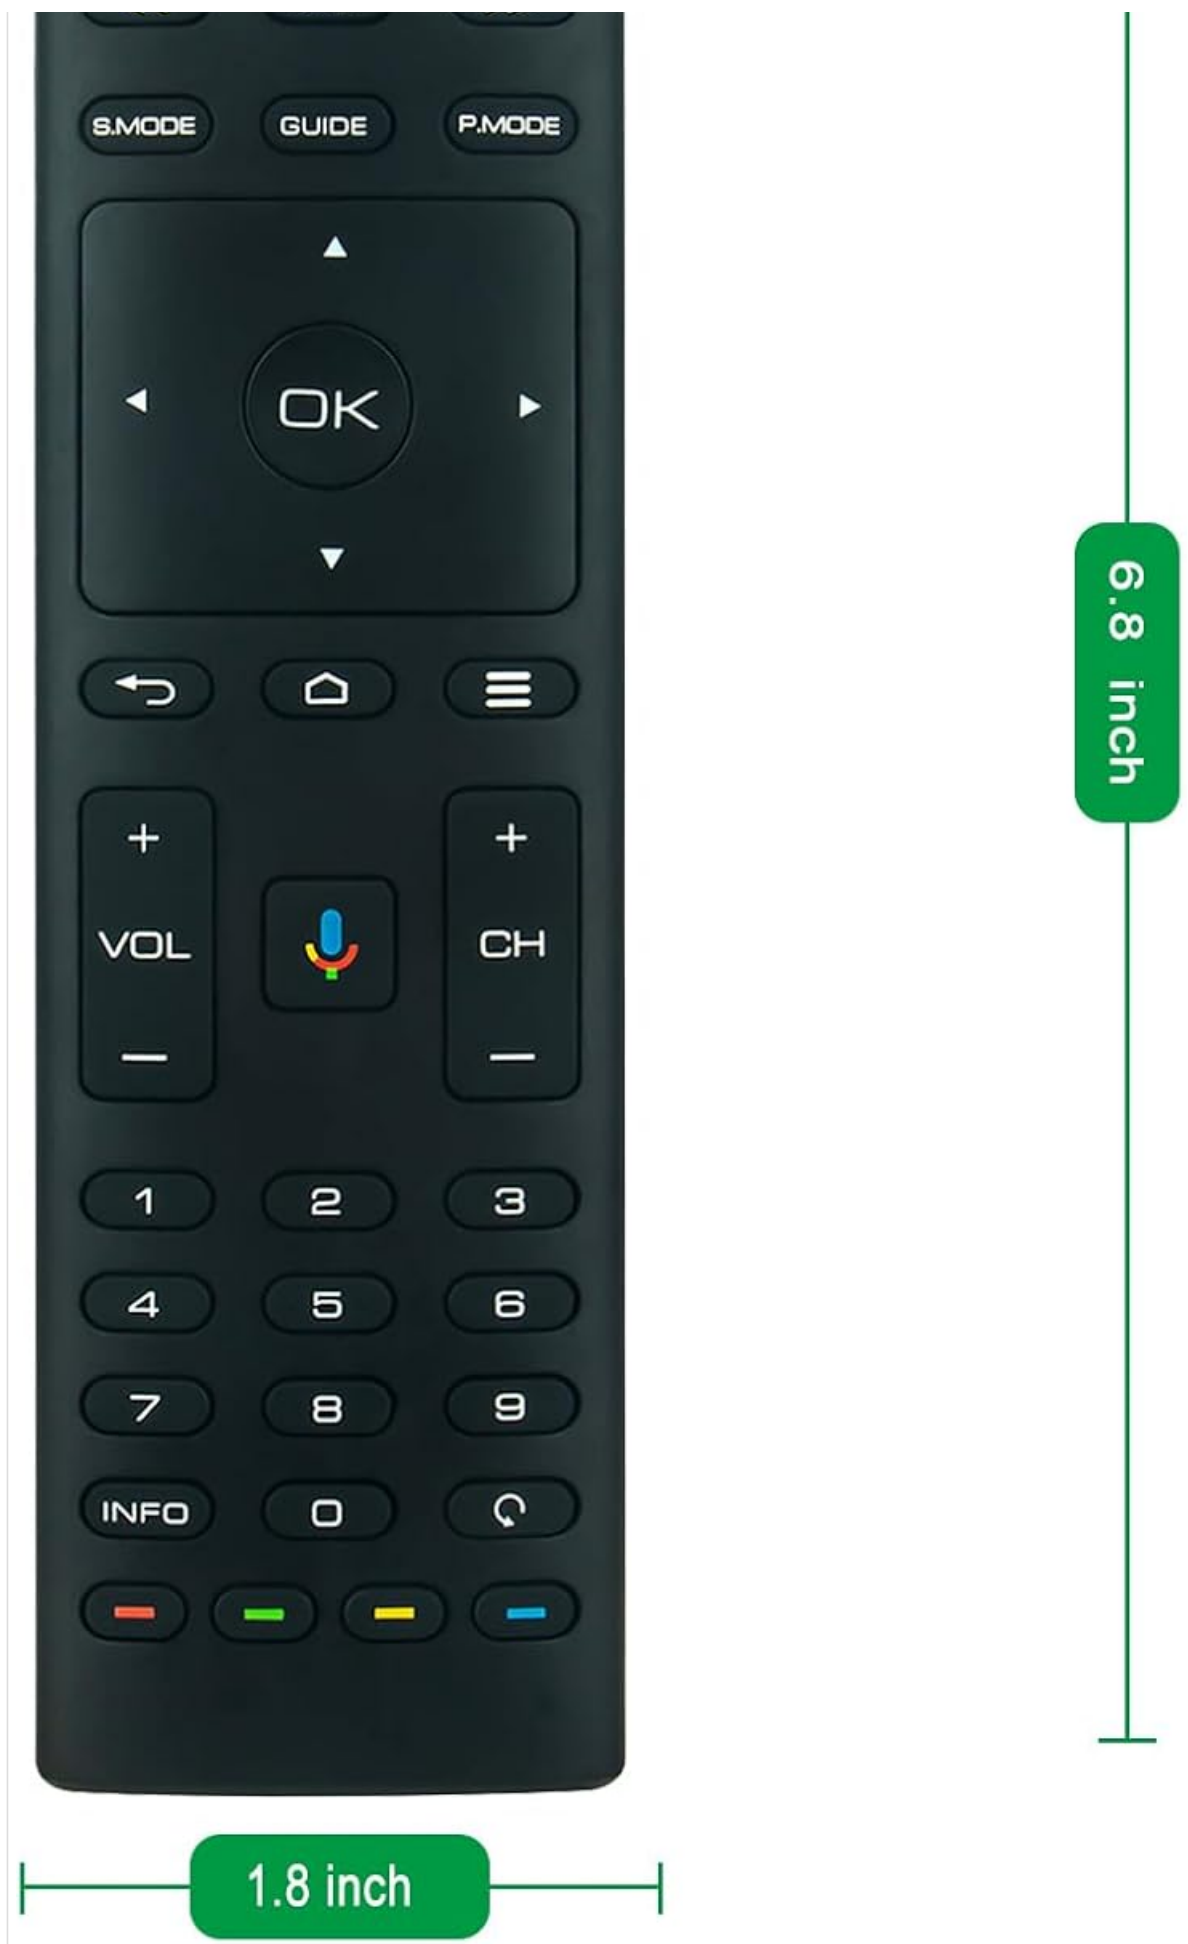


Image 3: The ECONTROLLY RM-C3363 remote control displaying its approximate dimensions.

9. WARRANTY AND SUPPORT

For any questions, technical assistance, or support regarding your ECONTROLLY RM-C3363 Voice Remote Control, please refer to the seller's contact information provided at the point of purchase. Please retain your proof of purchase for any warranty claims.

This product is designed to be a replacement remote control. Ensure compatibility with your specific JVC Android Smart TV model before seeking advanced support.