

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Hyper](#) /

› [Barbie 24V Retro Scooter User Manual](#)

### Hyper Barbie 24V Retro Scooter

# Barbie 24V Retro Scooter User Manual

Model: Barbie 24V Retro Scooter (ASIN: B0CQS2H24X)

Brand: Hyper

## INTRODUCTION

This manual provides essential information for the safe operation, assembly, maintenance, and troubleshooting of your Barbie 24V Retro Scooter. Please read this manual thoroughly before initial use to ensure proper function and safety.

The Barbie 24V Retro Scooter is a vintage-inspired electric scooter designed for riders aged 13 and up, with a maximum weight capacity of 170 lbs (77 kg). It features a 24-volt lead-acid battery, an easy twist throttle, and a hand-operated brake, allowing for speeds up to 14 MPH. A convenient secret storage compartment is located under the seat.

## SAFETY INFORMATION

**WARNING:** Failure to follow these safety instructions may result in serious injury or death.

- Always wear a helmet and appropriate safety gear (knee pads, elbow pads) when riding.
- Do not exceed the maximum weight limit of 170 lbs (77 kg).
- Recommended for riders aged 13 and up. Adult supervision is recommended for younger riders within this age range.
- Operate the scooter only in safe, open areas away from traffic, pedestrians, and obstacles.
- Avoid riding on wet surfaces, loose gravel, or uneven terrain.
- Do not ride at night or in low visibility conditions.
- Keep fingers and other body parts away from moving parts, such as wheels and the motor.
- Never allow more than one rider on the scooter at a time.
- Always use the charger provided with the scooter.
- Do not modify the scooter or its components.

## WHAT'S IN THE Box

---

Upon opening the package, please ensure all components are present and undamaged:

- Barbie 24V Retro Scooter (Main Unit)
- Charger
- User Manual (this document)
- Any included assembly tools (if applicable)

## SETUP

---

### Assembly

Your Barbie 24V Retro Scooter may require minor assembly upon unboxing. Please follow the specific instructions provided in the separate assembly guide (if included) or refer to the diagrams below for common assembly points.

Typical assembly steps may include attaching the handlebars, front wheel, or seat. Ensure all bolts and fasteners are securely tightened before use.



Figure 1: Fully assembled Barbie 24V Retro Scooter, showcasing its pink color and retro design.





Figure 2: Front view of the scooter, highlighting the headlight and handlebar setup.

## Initial Charging

Before the first ride, the scooter's 24V lead-acid battery requires a full charge. This initial charge is crucial for battery longevity and performance.

1. Locate the charging port on the scooter.
2. Ensure the scooter is turned OFF.
3. Connect the charger to the scooter's charging port.
4. Plug the charger into a standard wall outlet.
5. Allow the scooter to charge for approximately **12 hours** for the first charge. Subsequent charges may take less time, typically 8-10 hours, or until the charger's indicator light signals a full charge (refer to charger instructions).
6. Do not overcharge the battery. Disconnect the charger once charging is complete.

## OPERATING INSTRUCTIONS

---

### Starting the Scooter

1. Ensure the scooter is fully charged.
2. Turn the power switch to the "ON" position.
3. Place one foot on the scooter deck and push off with the other foot to gain initial momentum.
4. Once moving, slowly twist the throttle grip on the handlebar to accelerate.



Figure 3: Side view of the scooter, showing the overall profile and wheel placement.

### Braking

The scooter is equipped with a hand-operated brake for controlled stopping.

- To slow down or stop, gently squeeze the brake lever located on the handlebar.

- Apply the brake smoothly to avoid sudden stops, which can lead to loss of balance.
- Release the throttle when braking.

## Secret Storage Compartment

The scooter features a secret storage compartment located under the seat. This can be used to carry small personal items.

- To access, lift the seat.
- Ensure the compartment is securely closed before riding.





Figure 4: Rear view of the scooter, showing the seat and potential access to the storage compartment.

## MAINTENANCE

---

Regular maintenance ensures the longevity and safe operation of your scooter.

### Battery Care

- Charge the battery after each use, even if only for a short period.
- If storing the scooter for an extended period, charge the battery fully once a month to prevent deep discharge.
- Only use the provided charger.
- Do not store the scooter in extreme temperatures (hot or cold).

### Cleaning

- Wipe the scooter clean with a damp cloth after each use.
- Do not use harsh chemicals or abrasive cleaners.
- Do not spray water directly onto electrical components.

### General Inspection

- Before each ride, check that all bolts and fasteners are tight.
- Inspect tires for wear and proper inflation (if applicable, solid wheels are listed in specs).
- Test the brake functionality.
- Check for any visible damage to the frame, wheels, or electrical components.



Figure 5: Close-up view of the front wheel and fender, important for routine inspection.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Scooter does not turn on.	Battery is not charged. Power switch is OFF. Loose electrical connection.	Charge the battery fully. Turn the power switch to ON. Check all connections; consult support if issue persists.

Problem	Possible Cause	Solution
Scooter runs slowly or loses power quickly.	Battery is low or not holding a charge. Overweight rider. Riding uphill or on rough terrain.	Recharge the battery. If battery life is consistently short, it may need replacement. Ensure rider weight is within limits. Ride on flat, smooth surfaces for optimal performance.
Brake is not effective.	Brake cable needs adjustment. Worn brake pads.	Adjust the brake cable tension. Inspect brake pads for wear and replace if necessary.
Unusual noises during operation.	Loose components. Debris in wheels or motor.	Inspect all parts for looseness and tighten as needed. Clear any debris from wheels and motor area.

## SPECIFICATIONS

Feature	Detail
Brand	Hyper
Model Name	Barbie 24V Retro Scooter
ASIN	B0CQS2H24X
UPC	690995990396
Color	Light Pink
Age Range (Recommended)	13 years and up (Manufacturer recommended: 8 years and up, but product description states 13+)
Weight Limit	170 Pounds (77 kg)
Product Dimensions (L x W x H)	45.5" x 12.5" x 22.5"
Number of Wheels	2
Frame Material	Alloy Steel or Aluminum
Wheel Type	Solid
Brake Style	Rear Braking (Hand-operated)
Motor	Single-speed electric motor
Max Speed	Up to 14 mph



Figure 6: Scooter dimensions: 45.5" L x 12.5" W x 22.5" H.

## WARRANTY AND SUPPORT

Specific warranty details for the Barbie 24V Retro Scooter are typically provided with the product packaging or on the manufacturer's official website. Please refer to the documentation included with your purchase for precise warranty terms and conditions.

For technical support, replacement parts, or further assistance, please contact Hyper customer service. Contact information can usually be found on the product packaging, the manufacturer's website, or through your retailer.

**Manufacturer:** Hyper

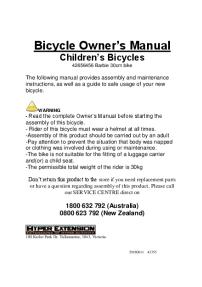
**Brand Store:** [Visit the Hyper Store on Amazon](#)

© 2024 Hyper. All rights reserved. Barbie is a registered trademark.

This manual is for informational purposes only and is subject to change without notice.

## Related Documents - Barbie 24V Retro Scooter

	<a href="#">Startfun X3 Pro Electric Scooter User Manual</a> Comprehensive user manual for the Startfun X3 Pro electric scooter for kids, covering specifications, assembly, riding instructions, safety tips, and warranty information.
--	---

	<p><b>21st Scooter User Manual: Assembly, Safety, and Care Guide for 3-in-1 Kids Scooters</b></p> <p>Comprehensive user manual for the 21st Scooter, detailing safety instructions, assembly steps for the 3-in-1 Seat, O-bar, and T-bar configurations, servicing, warranty information, and usage guidelines for children's scooters.</p>
 <p><b>Barbie 30cm Children's Bicycle Owner's Manual</b></p> <p>Owner's manual for the Barbie 30cm children's bicycle by Hyper Extension, covering assembly, safety guidelines, maintenance, and troubleshooting for safe operation.</p>	
 <p><b>SUOTU KIDS SCOOTER</b> Foldable Kids Scooter Faltbarer Kinder Roller</p> <p><b>DE - Gebrauchsanweisung</b></p> <p>DE: Thank you for purchasing this product. For your safety and to prevent damage, please read the User Manual before use and familiarise yourself with the contents. It is important that you read and understand the contents of the User Manual before use.</p> <p>EN: Thank you for purchasing this product. Please read the User Manual before use. It is important that you read and understand the contents of the User Manual before use.</p>	<p><b>SUOTU Kids Scooter Foldable User Manual</b></p> <p>User manual for the SUOTU Foldable Kids Scooter, providing safety instructions, technical data, usage guidelines, and maintenance information in English and German.</p>
 <p><b>EMMO</b> CARRY YOUR LIFE <b>USER'S MANUAL</b></p> <p><b>EMMO</b> <b>Vovo</b></p>	<p><b>EMMO Vovo Electric Scooter User Manual</b></p> <p>Comprehensive user manual for the EMMO Vovo electric scooter, covering safety, operation, parts, maintenance, and charging instructions.</p>
 <p><b>GOTRAX</b> <b>NEBULA</b> ELECTRIC SCOOTER <b>USER'S MANUAL</b></p>	<p><b>GOTRAX Nebula Electric Scooter User Manual</b></p> <p>Comprehensive user manual for the GOTRAX Nebula electric scooter, covering assembly, charging, operation, maintenance, safety guidelines, and warranty information for safe and optimal use.</p>