

7MAGIC D36

7MAGIC D36 Sonic Electric Toothbrush User Manual

Model: D36

[Contents](#) [Setup](#) [Operation](#) [Overview](#) [Safety Information](#) [Package](#)
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. PRODUCT OVERVIEW

The 7MAGIC D36 Sonic Electric Toothbrush is designed to provide an effective and personalized oral cleaning experience. It features advanced sonic technology, multiple brushing modes, and adjustable intensity levels to cater to various oral care needs. The integrated smart timer and long-lasting battery enhance convenience and ensure optimal brushing habits.



Image: Overview of the 7MAGIC Sonic Electric Toothbrush highlighting its key features.

Key Features:

- **Sonic Technology:** Delivers up to 40,000 VPM (Vibrations Per Minute) for efficient plaque removal.
- **5 Brushing Modes:** Clean, Whitening, Polish, Gum Care, and Sensitive for personalized oral care.
- **3 Intensity Levels:** Adjustable vibration intensity (Gentle, Standard, Strong) for comfort and effectiveness.
- **Smart Timer:** A 2-minute timer with 30-second interval pauses to ensure thorough brushing of all mouth quadrants.

- **Long Battery Life:** Up to 90 days of use on a single 10-hour charge.
- **IPX7 Waterproof:** Suitable for use in the shower and easy to clean under running water.
- **High-Quality Brush Heads:** Includes standard and deep cleaning brush heads with Dupont soft bristles.

2. SAFETY INFORMATION

Please read all instructions carefully before using the 7MAGIC D36 Sonic Electric Toothbrush and retain this manual for future reference. Failure to follow these safety guidelines may result in injury or damage to the product.

WARNING: To prevent electric shock, do not submerge the toothbrush in water or use it while bathing. Keep the toothbrush and charger dry at all times. Do not use the toothbrush for purposes other than oral hygiene. This product is intended for adult use only. Keep out of reach of young children to prevent choking hazards. Replace the toothbrush head every 3 months or sooner if the bristles become frayed. Always follow the instructions provided with the product.

Legal Disclaimer: Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 7MAGIC D36 Sonic Electric Toothbrush Handle
- Standard Brush Heads (Quantity may vary, typically 5)
- Deep Cleaning Brush Head (Quantity may vary, typically 1)
- Charging Base
- USB Charging Cable
- User Manual

IPX7 Waterproof

Suitable for bathroom and shower use



Image: Example of included brush heads.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the toothbrush. A full charge takes approximately 10 hours and provides up to 90 days of usage.

1. Connect the USB charging cable to the charging base.
2. Plug the USB cable into a compatible power source (e.g., phone charger, computer, power bank).
3. Place the toothbrush handle onto the charging base. The charging indicator light will illuminate to confirm charging.
4. Ensure the toothbrush and charging base are dry before charging.

3 Switchable Intensity Levels

- ◆ ◆ ◆ **Gentle Mode**
Ideal for sensitive teeth and gums.
- ◆ ◆ ◆ **Standard Mode**
Ideal for most users, and children without major oral concerns.
- ◆ ◆ ◆ **Strong Mode**
Suitable for those in need of more powerful cleaning.



Image: Toothbrush on charging base, illustrating the charging process.

4.2 Attaching a Brush Head

 
Align the brush head with the metal shaft on the toothbrush handle and push it down firmly until it clicks into place. Ensure it is securely attached before use.

Clean Efficiently, Sonic-Powered

Removes up to **10x** more plaque than manual toothbrush

40,000 VPM*

Magnetic Levitation Motor

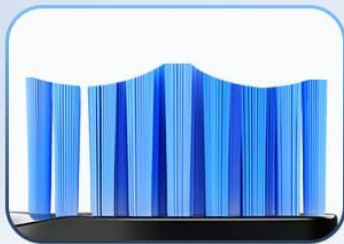

Deep Clean
Brush Head



Image: Close-up of a brush head, showing bristle design.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off and Mode Selection

The toothbrush features 5 distinct brushing modes:

- **Clean:** For thorough daily cleaning.
- **Whitening:** Brightens tooth color and removes surface stains.
- **Polish:** Enhances tooth surface appearance.
- **Gum Care:** Gentle massage for gum health.
- **Sensitive:** Gentle cleaning for sensitive teeth and gums.

1. Press the Power/Mode button once to turn on the toothbrush. It will start in the last used mode.
2. Press the Power/Mode button repeatedly within 5 seconds to cycle through the 5 modes.
3. To turn off the toothbrush, press and hold the Power/Mode button for 2 seconds, or let it complete the 2-minute cycle.

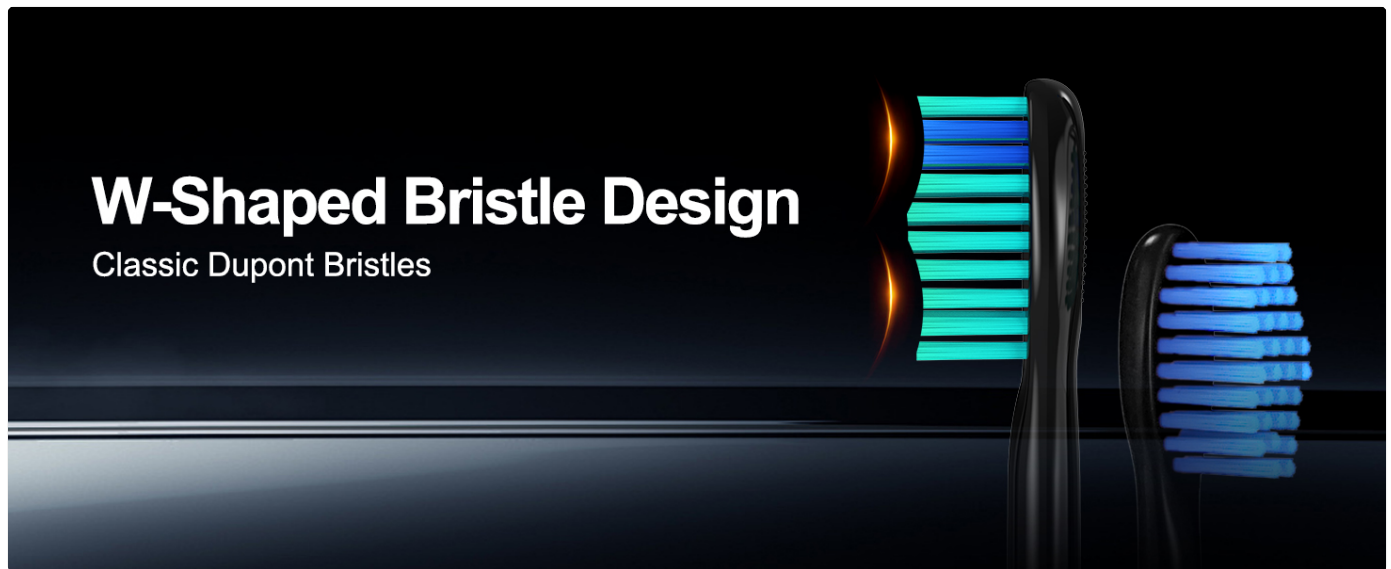


Image: Illustration of the 5 brushing modes and their functions.

5.2 Adjusting Intensity Levels

The toothbrush offers 3 intensity levels for each mode:

- **Gentle Mode:** For sensitive teeth and gums.
- **Standard Mode:** Ideal for most users.
- **Strong Mode:** For a deep cleaning experience, suitable for plaque and tartar removal.

To switch between intensity levels, press and hold the Intensity Adjustment button (usually located below the Power/Mode button) for 1.5 seconds while the toothbrush is operating. The indicator light will change to reflect the selected intensity.



Image: Intensity adjustment design with descriptions for each level.

5.3 Smart Timer and QuadPacer

The built-in 2-minute smart timer ensures you brush for the dentist-recommended duration. The 30-second interval pauses (QuadPacer) remind you to move to a different quadrant of your mouth for an even clean.

1. Divide your mouth into four quadrants: upper right, upper left, lower right, and lower left.
2. Start brushing in one quadrant.
3. After 30 seconds, the toothbrush will briefly pause, signaling you to move to the next quadrant.
4. Continue this process until the 2-minute timer completes, and the toothbrush automatically turns off.

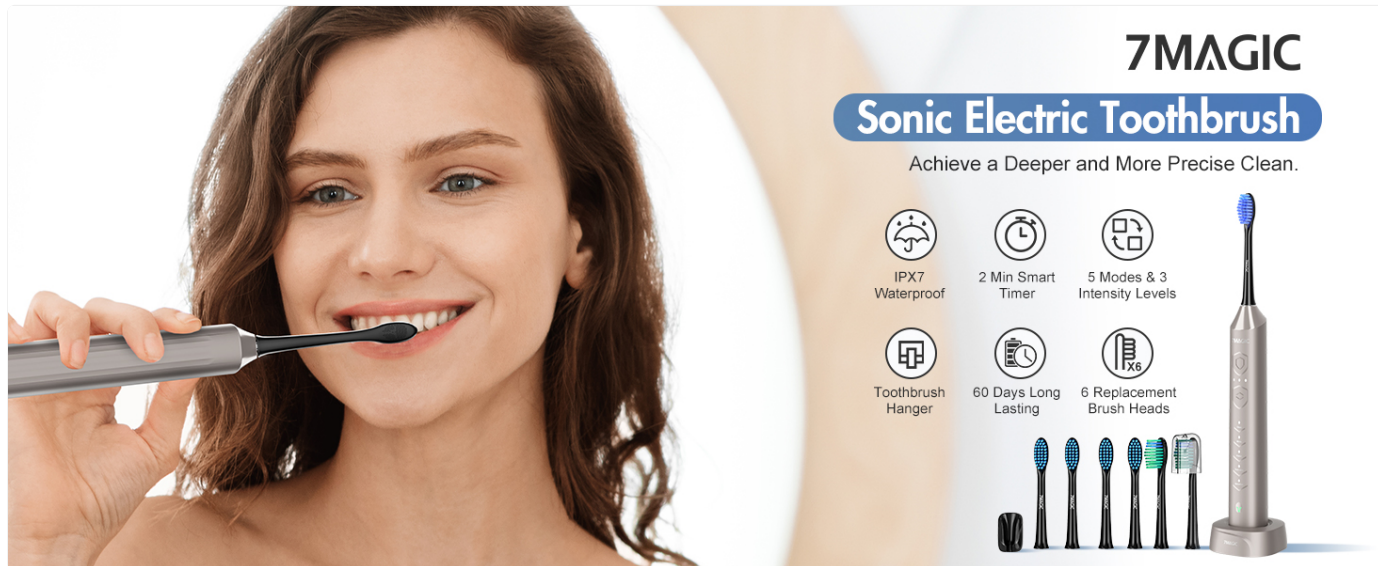


Image: Visual guide for the 2-minute smart timer and 30-second pause reminder.

5.4 Brushing Technique

For optimal results, follow these brushing guidelines:

- Wet the brush head and apply a small amount of toothpaste.
- Place the brush head against your teeth at a slight angle (approximately 45 degrees) towards the gum line.
- Turn on the toothbrush.
- Gently move the brush head slowly across each tooth, allowing the sonic vibrations to do the cleaning. Do not scrub vigorously.

- Brush all surfaces of your teeth: outer, inner, and chewing surfaces.
- Follow the QuadPacer guidance to ensure all quadrants of your mouth are cleaned evenly.
- After brushing, rinse your mouth and the brush head thoroughly.

6. MAINTENANCE AND CARE

6.1 Cleaning the Toothbrush

Regular cleaning helps maintain the performance and longevity of your toothbrush.

- After each use, rinse the brush head thoroughly under running water while the toothbrush is briefly turned on to remove any remaining toothpaste or debris.
- Remove the brush head and rinse the metal shaft area of the handle.
- Wipe the handle with a damp cloth. Do not use abrasive cleaners or harsh chemicals.
- Ensure the charging base is kept dry and clean.



Image: The toothbrush is IPX7 waterproof, allowing for easy cleaning under water.

6.2 Replacing Brush Heads

Dentists recommend replacing your toothbrush head every 3 months, or sooner if the bristles appear frayed or worn. The blue indicator bristles on the brush head will fade by 50% to remind you when it's time for a replacement.

1. Grip the brush head and pull it straight off the handle.
2. Dispose of the old brush head responsibly.
3. Align a new brush head with the metal shaft and push it down firmly until it clicks into place.

IPX7 Waterproof

Suitable for bathroom and shower use



Image: Brush head replacement reminder based on bristle fade, showing multiple brush heads.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Toothbrush does not turn on.	Battery is depleted.	Charge the toothbrush for at least 10 hours.
Toothbrush does not charge.	Charging cable or adapter faulty; poor connection.	Ensure the USB cable is securely connected to both the base and power source. Try a different USB adapter or port. Ensure the toothbrush is correctly seated on the charging base.
Vibration feels weak.	Low battery; incorrect intensity setting.	Recharge the toothbrush. Adjust the intensity level to a stronger setting.
Brush head feels loose.	Brush head not fully seated.	Remove and re-attach the brush head, pushing firmly until it clicks.
Toothbrush stops before 2 minutes.	Battery is critically low.	Charge the toothbrush.

8. SPECIFICATIONS

Feature	Detail
Model Number	D36
Brand	7MAGIC
Technology	Sonic Vibration (up to 40,000 VPM)
Brushing Modes	5 (Clean, Whitening, Polish, Gum Care, Sensitive)
Intensity Levels	3 (Gentle, Standard, Strong)
Smart Timer	2-minute auto-shutoff with 30-second interval reminders
Battery Type	Nonstandard Battery (Rechargeable)
Charging Time	Approx. 10 hours
Battery Life	Up to 90 days (based on 2 minutes, twice daily use)
Waterproof Rating	IPX7
Bristle Material	Dupont Soft Bristles
Power Source	Corded Electric (via USB charging base)
Item Firmness Description	Medium
Age Range (Description)	Adult
Package Dimensions	8.27 x 4.84 x 1.65 inches
Item Weight	9.14 ounces

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official 7MAGIC website. Keep your purchase receipt as proof of purchase for any warranty claims. If you encounter any issues not covered in the troubleshooting section, please contact 7MAGIC customer service for assistance.

© 2024 7MAGIC. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question