

Hikiddo B0CY4YSFM9

Hikiddo 24V Electric Police Car Instruction Manual

Model: B0CY4YSFM9

Brand: Hikiddo

1. INTRODUCTION

This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your Hikiddo 24V Electric Police Car. Please read all instructions carefully before use to ensure proper function and safety for the child operating the vehicle.

The Hikiddo 24V Electric Police Car is a two-seater ride-on toy designed for children aged 3-8 years. It features a 24V 10AH battery, four 200W motors, and a maximum speed of 5 mph. Key features include realistic siren sounds, flashing police lights, a megaphone, Bluetooth connectivity for music, and switchable 2WD/4WD modes.

2. SETUP AND ASSEMBLY

Careful assembly is required. Follow the steps below and refer to the installation video for visual guidance.

2.1 Unboxing and Component Identification

Carefully remove all components from the packaging. Verify that all parts listed in the packing list are present and undamaged.

2.2 Wheel Assembly

Attach the wheels to the axles. Ensure all washers and nuts are securely fastened to prevent the wheels from detaching during operation.



Image: Attaching the wheels and securing the components.

2.3 Steering Wheel Installation

Connect the steering column wires to the dashboard. Secure the steering wheel onto the column, ensuring it is firmly in place and allows for smooth rotation.



Simulated Megaphone

Add more driving fun for kiddos

Image: Installing the steering wheel and connecting electrical components.

2.4 Battery Connection

Locate the battery compartment, typically under the seat. Connect the battery terminals according to the polarity markings (red to red, black to black). Ensure a secure connection.

2.5 Final Checks

Before first use, confirm all screws are tightened, all electrical connections are secure, and the vehicle's body parts are properly aligned.

2.6 Installation Video

Your browser does not support the video tag.

Video: Detailed installation guide for the Hikiddo Police Car ride-on toy.

3. OPERATING INSTRUCTIONS

3.1 Starting the Vehicle

Press the 'Start/Stop' button on the dashboard to power on the vehicle. The dashboard display will illuminate.

3.2 Driving Controls

- **Forward/Reverse Pedal:** Press the foot pedal to move forward or backward.
- **Steering Wheel:** Turn the steering wheel to control direction.
- **Speed Selection:** Use the speed switch on the dashboard to select between different speed modes (up to 5 mph).
- **2WD/4WD Switch:** Engage 2WD or 4WD mode as needed for different terrains.

3.3 Parental Remote Control

The vehicle can be controlled by a 2.4 GHz remote control. This allows parents to guide the vehicle, especially for younger children or for safety purposes. The remote control has buttons for forward, reverse, left, right, and speed selection.



Parent Remote Control

Join your kid's playtime

Image: Parental remote control in use.

3.4 Interactive Features

- **Siren Sounds & Flashing Lights:** Activate realistic siren sounds and flashing police lights via buttons on the dashboard for an immersive experience.
- **Megaphone:** Use the integrated megaphone to amplify your voice.

- **Bluetooth Music:** Connect your Bluetooth-enabled device to the vehicle's multifunctional dashboard to play music.



Storage Trunk

Provide extra space for more toys

Image: Bluetooth music function on the dashboard.

3.5 Operational Videos

Your browser does not support the video tag.

Video: Overview of the Hikiddo Police Car's features and fun.

Your browser does not support the video tag.

Video: Demonstrating the 2-seater capacity of the Hikiddo Police Car.

Your browser does not support the video tag.

Video: Showcasing the lights, sirens, and action features of the Hikiddo Police Car.

4. MAINTENANCE

4.1 Charging the Battery

Charge the 24V 10AH battery fully before first use and after each play session. Use only the charger provided with the vehicle. Do not overcharge the battery. A full charge typically takes 8-12 hours.

Single Purchase For Double Fun



One Kiddo:
3-8 Years old



Two Kiddos:
Total Ages ≤ 8 Years Old



Image: Connecting the charger to the vehicle.

4.2 Cleaning

Wipe the vehicle with a soft, damp cloth. Avoid using abrasive cleaners or solvents that could damage the plastic or decals. Do not spray water directly onto electrical components.

4.3 Storage

Store the vehicle in a dry, cool place away from direct sunlight and moisture. If storing for an extended period, ensure the battery is fully charged and disconnect it to prolong its lifespan.

5. TROUBLESHOOTING

If the vehicle is not operating correctly, refer to the following common issues and solutions:

- **Vehicle does not start:** Check battery connections, ensure the battery is charged, and verify the power switch is in the 'ON' position.
- **Vehicle runs slowly:** The battery may be low on charge, or the vehicle might be overloaded (exceeding maximum weight capacity).

- **Remote control not working:** Ensure the remote control batteries are fresh and properly inserted. Re-pair the remote control with the vehicle if necessary (refer to the remote control's specific instructions).
- **Lights or sounds not working:** Check for loose wire connections to the specific components.

If issues persist, contact Hikiddo customer support for further assistance.

6. SPECIFICATIONS

Feature	Detail
Product Dimensions	47.24 x 30.7 x 27.55 inches
Battery	24V 10AH Lead-Acid
Motors	4 x 200W
Max Speed	5 mph
Recommended Age	3 - 8 years
Seating Capacity	2 Seater
Drive Modes	2WD / 4WD Switchable

7. WARRANTY AND SUPPORT

For any product inquiries, technical support, or warranty claims, please contact Hikiddo Direct. The product is typically covered by a 30-day return policy. Please retain your proof of purchase for warranty purposes.

Manufacturer: Hikiddo

Seller: Hikiddo Direct

For further assistance, visit the [Hikiddo Store on Amazon](#).