

nobo NTL4T 20

NOBO NTL4T 20 2000W Electric Heater User Manual

Model: NTL4T 20 (82440620)

[Introduction](#) [Safety](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty](#)

1. INTRODUCTION

Thank you for choosing the NOBO NTL4T 20 2000W Electric Heater. This manual provides essential information for the safe and efficient installation, operation, and maintenance of your new electric heater. Please read this manual thoroughly before using the appliance and retain it for future reference.

The NOBO NTL4T 20 is a 2000W flat panel electric heater featuring an electronic thermostat and a top air outlet for effective heating. It is designed for silent operation and includes an electronic room sensor for precise temperature control.



Image 1.1: The NOBO NTL4T 20 Electric Heater seamlessly integrated into a living room environment, mounted on a wall beneath a window.

2. IMPORTANT SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury, always follow these basic precautions:

- Read all instructions before using this heater.
- Do not use this heater outdoors.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 1 meter (3 feet) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect heater, turn controls to off, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable vapors or liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer

may cause fire, electric shock, or injury to persons.

- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).

3. PACKAGE CONTENTS

Upon unpacking your NOBO NTL4T 20 Electric Heater, please ensure all components are present and undamaged. If any items are missing or damaged, contact your retailer immediately.

- NOBO NTL4T 20 2000W Electric Heater Unit
- Wall Mounting Bracket(s)
- Mounting Screws and Wall Plugs
- User Manual (this document)

4. INSTALLATION AND SETUP

The NOBO NTL4T 20 heater is designed for wall mounting. Ensure the installation location complies with all safety regulations and provides adequate clearance from combustible materials.

4.1 Choosing a Location

- Select a wall location that is firm and can support the weight of the heater (approximately 8 kg).
- Ensure there is a suitable power outlet nearby.
- Maintain a minimum distance of 1 meter (3 feet) from curtains, furniture, and other flammable objects.
- Avoid installing directly below an electrical outlet.

4.2 Wall Mounting Steps

1. Carefully remove the heater from its packaging.
2. Attach the wall mounting bracket(s) to the rear of the heater according to the instructions provided with the bracket.
3. Hold the heater with the attached bracket against the wall at the desired height and mark the drilling points. Use a spirit level to ensure it is straight.
4. Drill holes at the marked points using an appropriate drill bit for your wall type. Insert wall plugs if necessary.
5. Secure the heater to the wall using the provided screws, ensuring it is firmly attached and level.
6. Once mounted, plug the heater into a grounded electrical outlet.



Image 4.1: The NOBO NTL4T 20 Electric Heater installed on a wall, demonstrating its compact and unobtrusive design.

5. OPERATING INSTRUCTIONS

The NOBO NTL4T 20 features an electronic thermostat for precise temperature control and silent operation.

5.1 Control Panel Overview



Image 5.1: A detailed view of the heater's electronic control panel, showing the digital display and control buttons.

The control panel typically includes:

- **Digital Display:** Shows the current temperature, set temperature, or operating mode.
- **Power Button:** Turns the heater on or off.
- **Temperature Adjustment Buttons (+/-):** Used to increase or decrease the desired room temperature.

- **Mode Button:** Cycles through different operating modes (if available, e.g., Comfort, Eco, Frost Protection).

5.2 Setting the Temperature

1. Ensure the heater is plugged in and the power is on.
2. Press the Power button to activate the heater. The display will show the current room temperature.
3. Use the + or - buttons to adjust the desired temperature. The display will show the set temperature as you adjust it.
4. The heater will automatically maintain the set temperature using its electronic room sensor. It will cycle on and off as needed to achieve and maintain the desired warmth.

5.3 Advanced Features (if applicable)

Your heater may include additional features such as:

- **Programmable Timer:** Allows you to set specific heating schedules. Refer to the detailed instructions for programming.
- **Open Window Detection:** Automatically reduces heating if a sudden drop in temperature (e.g., open window) is detected.
- **Child Lock:** Prevents accidental changes to settings.

Consult the specific instructions provided with your heater for details on these advanced functions.

6. MAINTENANCE

Regular maintenance ensures the longevity and efficient operation of your NOBO NTL4T 20 Electric Heater.

6.1 Cleaning

- Always unplug the heater and allow it to cool completely before cleaning.
- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish.
- Do not immerse the heater in water or allow water to drip into the interior.
- Periodically vacuum the air intake and outlet grilles to remove dust and lint buildup.

6.2 Storage

If storing the heater for an extended period, unplug it, clean it thoroughly, and store it in a cool, dry place, preferably in its original packaging.

7. TROUBLESHOOTING

If you experience issues with your NOBO NTL4T 20 heater, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Heater does not turn on.	No power supply. Power button not pressed.	Check if the heater is properly plugged into a working outlet. Check circuit breaker. Press the power button on the control panel.

Problem	Possible Cause	Solution
Heater is on but not heating.	Set temperature is lower than room temperature. Overheat protection activated.	Increase the set temperature using the '+' button. Unplug the heater, allow it to cool for 30 minutes, and check for any obstructions around air inlets/outlets. Plug back in.
Heater makes unusual noises.	Dust buildup. Loose components.	Unplug and clean the air grilles. If noise persists or is loud, discontinue use and contact customer support.
Display shows an error code.	Internal malfunction.	Note the error code and contact customer support for assistance.

If the problem persists after attempting these solutions, please contact NOBO customer support.

8. PRODUCT SPECIFICATIONS

Key technical specifications for the NOBO NTL4T 20 2000W Electric Heater:

Feature	Specification
Brand	Nobo
Model Number	82440620
Power Output	2000W
Color	White
Product Dimensions (D x W x H)	40D x 102W x 6H cm (approximate, based on 40D x 6G x 102Y cm)
Weight	8 Kilograms
Thermostat Type	Electronic, Changeable
Special Features	Silent operation, Electronic room sensor, Top air outlet

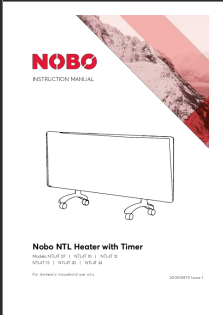
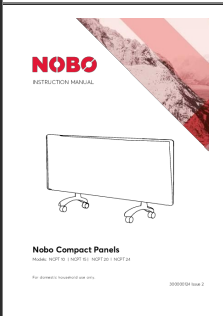
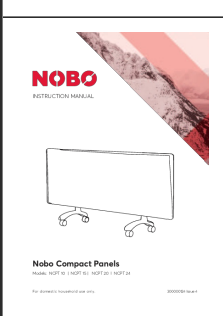
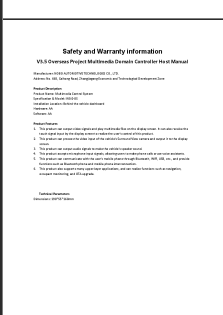
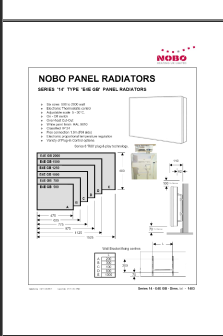
9. WARRANTY AND SUPPORT


Your NOBO NTL4T 20 Electric Heater comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical support, service, or warranty claims, please contact your retailer or the NOBO customer service department. Ensure you have your proof of purchase and the product model number (NTL4T 20 or 82440620) ready when contacting support.

Manufacturer: KA İNŞ.MÜH.BİLG.DİŞ TİC.İTH.İHR.SAN.VE TİC.LTD.ŞTİ.

Related Documents - NTL4T 20


 The cover of the Nobo NTL Heater with Timer instruction manual. It features the Nobo logo at the top left, a red diagonal stripe, and a line drawing of the heater unit. The text on the cover includes 'Nobo NTL Heater with Timer', 'Models: NTL4T 10 - NTL4T 15 - NTL4T 20', and 'Nobos AS - Norway'.	Nobo NTL Heater with Timer Instruction Manual: Safety, Installation, and Operation Guide Official instruction manual for the Nobo NTL Heater with Timer series (NTL4T models). Covers essential safety warnings, installation procedures (wall-mounted and portable), timer programming, adaptive start features, cleaning, storage, and maintenance. Essential reading for safe and efficient operation.
 The cover of the Nobo Compact Panels instruction manual. It features the Nobo logo at the top left, a red diagonal stripe, and a line drawing of the heater unit. The text on the cover includes 'Nobo Compact Panels', 'Models: NCPT 10 - NCPT 15 - NCPT 20 - NCPT 24', and 'Nobos AS - Norway'.	Nobo Compact Panels Instruction Manual Comprehensive instruction manual for Nobo Compact Panels (NCPT 10, NCPT 15, NCPT 20, NCPT 24), covering safety, installation, operation, timer settings, and maintenance.
 The cover of the NOBO Electric Radiators product guide. It features the Nobo logo at the top left, a red diagonal stripe, and a photograph of a white radiator in a room. The text on the cover includes 'NOBO Electric Radiators', 'Product Guide, Features, and Installation', and 'Nobos AS - Norway'.	NOBO Electric Radiators: Product Guide, Features, and Installation Comprehensive guide to NOBO Norwegian electric radiators by Dimplex. Learn about their technology, energy efficiency, models, technical specifications, installation, accessories, and warranty. Features low consumption, modern design, and remote control options.
 The cover of the Nobo Compact Panels instruction manual. It features the Nobo logo at the top left, a red diagonal stripe, and a line drawing of the heater unit. The text on the cover includes 'Nobo Compact Panels', 'Models: NCPT 10 - NCPT 15 - NCPT 20 - NCPT 24', and 'Nobos AS - Norway'.	Nobo Compact Panels Instruction Manual: Installation, Operation, and Safety Guide Comprehensive instruction manual for Nobo Compact Panels (NCPT 10, 15, 20, 24). Covers safety advice, installation (wall-mounted and portable), timer settings, adaptive start, programming, cleaning, maintenance, and recycling information.
 The cover of the Safety and Warranty Information document. It features the Nobo logo at the top left, a red diagonal stripe, and a line drawing of the heater unit. The text on the cover includes 'Safety and Warranty Information', 'VLS 9.0 Overview Project Multimedia Control System Manual', and 'Nobos AS - Norway'.	NOBO IN9.0-OS Multimedia Control System: Safety, Warranty, and Technical Information Comprehensive guide to the NOBO IN9.0-OS Multimedia Control System, covering product features, technical specifications, installation details, safety warnings, and FCC compliance. Includes information on connectivity and operational parameters.
 The cover of the NOBO PANEL RADIATORS product overview. It features the Nobo logo at the top left, a red diagonal stripe, and a photograph of a white radiator. The text on the cover includes 'NOBO PANEL RADIATORS', 'Series '14' Type 'E4E GB' and Series 8 'R80'', and 'Nobos AS - Norway'.	Nobo Panel Radiators Series '14' & Series 8 'R80' - Product Overview and Specifications Discover Nobo's efficient electric panel radiators, including the Series '14' (Type 'E4E GB') and Series 8 'R80' with plug & play technology. Learn about features, specifications, and installation.

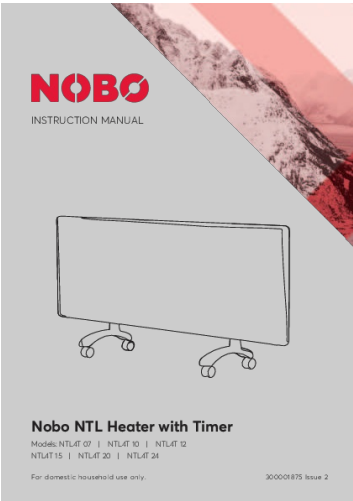

[pdf] User Manual Instructions Warranty

Nobo NTL Heater with Timer Instruction Manual NOBO w v2 nobo au sites g files emiaan366 2022 08 ||| INSTRUCTION MANUAL Nobo NTL Heater with Timer Models: NTL4T 07 NTL4T 10 NTL4T 12 NTL4T 15 **NTL4T 20** NTL4T 24 For domestic household use only. 300001875 Issue 2 IMPORTANT SAFETY ADVICE THESE INSTRUCTIONS SHOULD BE READ CAREFULLY AND RETAINED FOR FUTURE REFERENCE. Note also the information ...

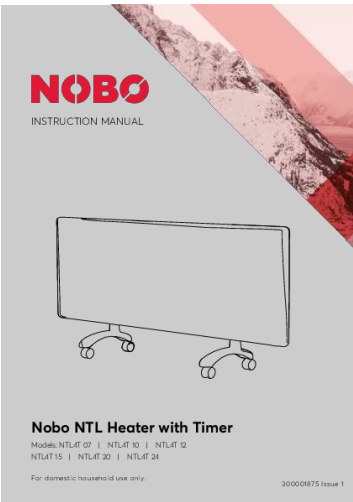 lang:en score:51 filesize: 2.29 M page_count: 16 document date: 2022-08-24



[Nobo NTL Heater with Timer Instruction Manual: Safety, Installation, and Operation Guide](#)

Official instruction manual for the Nobo NTL Heater with Timer series (NTL4T models). Covers essential safety warnings, installation procedures (wall-mounted and portable), timer programming, adaptive start features, cleaning, storage, and maintenance. Essential reading for safe and efficient operation.

lang:en score:44 filesize: 1.14 M page_count: 16 document date: 2021-12-16



[pdf]

A0017203 0cbde180 1c55 4b94 b540 d99983bd042a 2067 TechnicalData NL 344 KB DIMPLEX Top Ntl4T 20 2000W Bali f622702697bebf1173818c51ca40fc17 gigatek be assets shared filestore ||| NOBO TOP **NTL4T 20** 2000W BALI VASTE CONVECTOREN A0017203 TECHNISCHE KENMERKEN ADVIESPRIJS: 285,02 EUR Incl. BTW Excl. Recupel/Bebat Afmetingen Netto gewicht Vermogen Spanning Thermostaat Type Vorstbeveiligingsstand J/N Overhittings beveiliging J/N Kleur Beschermingsgraad Bediening Timer/prog...

lang:nl score:28 filesize: 344.48 K page_count: 1 document date: 2022-10-15



[\[pdf\]](#) Dimension Guide

TOP NTL4T 20 2000W BALI PRIX CONSEILLÉ 285 02 EUR GigatekNOBO CONVECTEURS FIXE
A0017203 TVA incl Recupel Bebat excl CARACTÉRISTIQUES TECHNIQUES

Dimensions3d0d9ce248e763ae5d64c620dabc1579assets gigatek be product


3d0d9ce248e763ae5d64c620dabc1579 ||

NOBO TOP **NTL4T 20** 2000W BALI CONVECTEURS FIXE A0017203

CARACTÉRISTIQUES TECHNIQUES Dimensions Poids Puissance Tension

Thermostat Type Protection antigel O/N Scurit de surchauffage Couleur Degr de protection Commande Minuterie/programmation Interrupteur de position Cordon avec/sans fiche PRIX CONS...

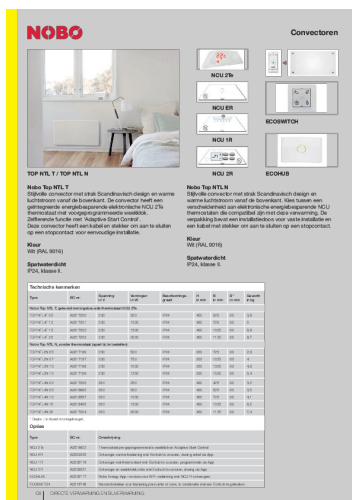 lang:de score:28 filesize: 337.07 K page count: 1 document date: 2022-10-15



[\[pdf\]](#)

Productfiche Convector Nobo vast TOP NTL2N 10 1000W ZONDER thermostaat h200xb1325xd90

T0PNTL2N10 DIMPLEX Cebeo e shop 5827757 w3 cebeo eu nl |||

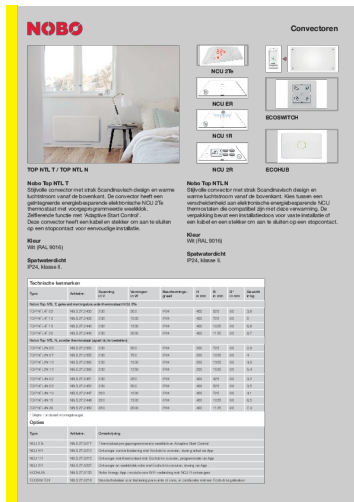 
Convectoren NCU 2Te NCU ER NCU 1R ECOSWITCH TOP NTL T / TOP NTL N

Nobo Top NTL T Stijlvolle conve ... T 05 A0017200 230 500 TOP NTL4T 10

A0017201 230 1000 TOP NTL4T 15 A0017202 230 1500 TOP **NTL4T 20** A0017203

230 2000 Nobo Top NTL N, zonder thermostaat apart bij te bestellen TOP NTL2...

lang:nl score:25 filesize: 99.37 K page count: 1 document date: 2022-07-14



lang:af score:20 filesize: 408.13 K page_count: 1 document date: 2018-08-23

lang:af score:20 filesize: 408.12 K page_count: 1 document date: 2018-08-23

lang:af score:19 filesize: 574.76 K page_count: 2 document date: 2018-08-28

Convectoren

NOBO Top NTL T
Stijlvolle convectoren met een Scandinavisch ontwerp en een modern uiterlijk. De convectoren hebben een geïntegreerde afstandsbediening en zijn uitgerust met een automatische ontvoering van de lucht. De convectoren zijn uitgerust met een automatische ontvoering van de lucht. De convectoren zijn uitgerust met een automatische ontvoering van de lucht.

NOBO Top NTL N
Stijlvolle convectoren met een Scandinavisch ontwerp en een modern uiterlijk. De convectoren hebben een geïntegreerde afstandsbediening en zijn uitgerust met een automatische ontvoering van de lucht. De convectoren zijn uitgerust met een automatische ontvoering van de lucht. De convectoren zijn uitgerust met een automatische ontvoering van de lucht.

ECOSWITCH
Stijlvolle convectoren met een Scandinavisch ontwerp en een modern uiterlijk. De convectoren hebben een geïntegreerde afstandsbediening en zijn uitgerust met een automatische ontvoering van de lucht. De convectoren zijn uitgerust met een automatische ontvoering van de lucht. De convectoren zijn uitgerust met een automatische ontvoering van de lucht.

Type	Model	Levensduur	Levensduur	Levensduur	Levensduur	Levensduur	Levensduur	Levensduur	Levensduur
NOBO Top NTL T	NOBO Top NTL T	NOBO Top NTL T	NOBO Top NTL T	NOBO Top NTL T	NOBO Top NTL T	NOBO Top NTL T	NOBO Top NTL T	NOBO Top NTL T	NOBO Top NTL T
NOBO Top NTL N	NOBO Top NTL N	NOBO Top NTL N	NOBO Top NTL N	NOBO Top NTL N	NOBO Top NTL N	NOBO Top NTL N	NOBO Top NTL N	NOBO Top NTL N	NOBO Top NTL N
ECOSWITCH	ECOSWITCH	ECOSWITCH	ECOSWITCH	ECOSWITCH	ECOSWITCH	ECOSWITCH	ECOSWITCH	ECOSWITCH	ECOSWITCH

[pdf]

A0018749 d3b8cbba cbae 4741 be35 29fd07ddffa8 LFT NB5279218 575 KB DIMPLEX Ecoswitch Sw4

45589a4a0a72c32820e92a9502506038 gigatek be assets shared filestore |||

Convectoren NOCU 2Te NOCU ER NOCU 1R ECOSWITCH TOP NTL T / TOP NTL N

Nobo Top NTL T Stijlvolle conve ... 5.27.2430 230 500 TOP NTL4T 10 NB.5.27.2435

230 1000 TOP NTL4T 15 NB.5.27.2440 230 1500 TOP **NTL4T 20** NB.5.27.2445 230

2000 Nobo Top NTL N, zonder thermostaat apart bij te bestellen TOP N...

lang:af **score:19** filesize: 574.78 K page_count: 2 document date: 2018-08-28

GUIDE CLIMAT 2021 - 2022

Durabilité et énergie

Version 202104

Aquaalex DEVI AC Dimplex FAIRCO DE'innova KAYSUN

LG NOBO CILIMATIA SPINNOCK THERMOR Xpelair

[pdf] Guide

GUIDE CLIMAT Engels Group 2021 07 01 — Il n y a pas d autre solution que le passage conséquent aux

énergies renouvelables aujourd'hui plus de 30 % l'électricité produite provient ores et 2 Thermo Comfort

Klimaatgids 2022 ZP FR opt engels be CataTC |||

GUIDE CLIMAT 2021 - 2022 Durabilit et nergie Version 202104 Marc Engels

Directeur, Thermo Comfort ... 5.27.2430 230 500 TOP NTL4T 10 NB.5.27.2435 230

1000 TOP NTL4T 15 NB.5.27.2440 230 1500 TOP **NTL4T 20** NB.5.27.2445 230 2000

Nobo Top NTL N, sans thermostat commander sparment TOP NTL2N 0...

lang:fr **score:17** filesize: 12.5 M page_count: 100 document date: 2021-04-02