

## Digihome PTDR55UHDS7

# Digihome SMART 4K LED TV User Manual

**MODEL: PTDR55UHDS7**

55" Ultra HD HDR Freeview Play

## Introduction

Thank you for choosing the Digihome SMART 4K LED TV. This manual provides essential information for setting up, operating, and maintaining your new television. Featuring a 55-inch 4K Ultra HD display with HDR technology, built-in SMART apps, and Freeview Play, your TV offers a comprehensive entertainment experience. Please read this manual thoroughly before using your TV to ensure proper operation and safety.

## 1. Setup

### 1.1 Unpacking

Carefully remove the TV and all accessories from the packaging. Retain the packaging for future transport or if servicing is required. Ensure all components listed below are present:

- Digihome 55" 4K LED TV
- Remote Control
- Power Cable
- TV Stand Components (if not pre-assembled)
- User Manual (this document)

### 1.2 Stand Assembly (Optional)

If your TV requires stand assembly, follow these steps:

1. Place the TV face down on a soft, flat surface to prevent screen damage.
2. Align the stand components with the mounting holes on the bottom of the TV.
3. Secure the stand using the provided screws. Do not overtighten.

Alternatively, the TV can be wall-mounted using a compatible VESA wall mount (sold separately). Refer to the wall mount's instructions for installation.

### 1.3 Connecting Power

Plug the power cable firmly into the TV's power input, then plug the other end into a suitable wall socket. The TV will enter standby mode.

## 1.4 Connecting External Devices

Your Digihome TV offers multiple connectivity options:

- **HDMI:** For connecting Blu-ray players, game consoles, set-top boxes, etc. Your TV supports multiple HDMI inputs.
- **Antenna/Aerial:** Connect a terrestrial antenna cable for Freeview channels.
- **USB:** For connecting USB storage devices to play media.
- **Ethernet (LAN):** For a wired internet connection.
- **Optical Audio Out:** For connecting to a soundbar or home cinema system.

Ensure all cables are securely connected before powering on the TV.

## 1.5 Initial Setup Wizard

Upon first power-on, the TV will guide you through an initial setup wizard:

1. **Language Selection:** Choose your preferred language.
2. **Region/Country:** Select your region for correct channel tuning.
3. **Network Setup:** Connect to your Wi-Fi network or use a wired Ethernet connection. This is essential for Smart TV features and Freeview Play.
4. **Channel Scan:** The TV will automatically scan for available Freeview channels. This may take several minutes.
5. **Terms & Conditions:** Accept the terms and conditions to proceed with Smart TV features.

# 2. Operating Your TV

---

## 2.1 Remote Control Overview

The included remote control allows full navigation and control of your Digihome TV. Familiarize yourself with the button layout for easy operation.

## 2.2 Basic Functions

- **Power:** Press the power button on the remote to turn the TV on or off (standby mode).
- **Volume:** Use the **VOL +/-** buttons to adjust the volume.
- **Channel:** Use the **CH +/-** buttons to change channels.
- **Mute:** Press the **MUTE** button to temporarily silence the audio.
- **Source/Input:** Press the **SOURCE** button to select input sources (HDMI 1, HDMI 2, TV, etc.).

## 2.3 Smart TV Features and Freeview Play

Your Digihome TV comes equipped with a range of Smart TV applications and Freeview Play functionality. To access these features, ensure your TV is connected to the internet.



Image: The Digihome Smart TV home screen, displaying a user-friendly interface with quick access to popular streaming applications such as Netflix, YouTube, BBC iPlayer, ITV Hub, My5, and Prime Video. A navigation menu is visible on the left side, including options for TV, Settings, Apps, and Sources.

- **Accessing Apps:** Press the **HOME** or **SMART** button on your remote to open the Smart TV portal. Here you can find pre-installed apps like Netflix, YouTube, BBC iPlayer, ITV Hub, My5, and Prime Video.
- **Freeview Play:** Freeview Play combines live TV with catch-up services from BBC iPlayer, ITV Hub, All 4, My5, and UKTV Play. You can scroll back through the TV guide to watch programmes you've missed.
- **Internet Browsing:** A web browser may be available for general internet surfing.

## 2.4 Settings Menu

Press the **MENU** or **SETTINGS** button on your remote to access the TV's settings. Here you can adjust:

- **Picture Settings:** Brightness, Contrast, Colour, Sharpness, Picture Mode (Standard, Dynamic, Movie, etc.), HDR settings.
- **Sound Settings:** Volume, Sound Mode (Standard, Music, Movie, etc.), Equalizer, Digital Audio Out.
- **Channel Settings:** Channel Scan, Channel List, Parental Control.
- **Network Settings:** Wi-Fi connection, Wired connection, Network status.
- **System Settings:** Language, Time, Sleep Timer, Software Update, Factory Reset.

## 3. Maintenance

---

### 3.1 Cleaning Your TV

To maintain the appearance and performance of your TV:

- **Screen:** Gently wipe the screen with a soft, dry, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a screen-specific cleaning solution (do not spray directly onto the screen). Avoid using abrasive cleaners or solvents.

- **TV Body:** Wipe the TV frame and stand with a soft, dry cloth.
- Always unplug the TV from the power outlet before cleaning.

### 3.2 Software Updates

Your TV may receive software updates to improve performance and add new features. It is recommended to keep your TV connected to the internet to receive these updates automatically. You can also check for updates manually via the System Settings menu.

## 4. Troubleshooting

If you encounter issues with your TV, please refer to the following common problems and solutions before contacting support.

Problem	Possible Cause / Solution
No Power	Ensure the power cable is securely plugged into the TV and the wall outlet. Check if the wall outlet is working. Try pressing the power button on the TV itself.
No Picture / No Sound	Check the selected input source (e.g., HDMI 1, TV). Ensure external devices are powered on and connected correctly. For TV channels, perform a channel scan. Check volume levels and mute status.
Poor Picture Quality	Check antenna connection for Freeview. For external devices, ensure high-quality cables are used. Adjust picture settings (brightness, contrast, sharpness).
Smart Features Not Working / No Internet	Check network cable or Wi-Fi connection. Restart your router/modem. Re-enter Wi-Fi password in TV settings. Ensure network settings are correct.
Remote Control Not Responding	Check and replace batteries. Ensure there are no obstructions between the remote and the TV's IR sensor.

If the problem persists after trying these solutions, please refer to the Support section.

## 5. Specifications

Key technical specifications for the Digihome PTDR55UHDS7 55" 4K LED TV:

Model Name	PTDR55UHDS7
Screen Size	55 inches
Display Technology	LED
Resolution	4K Ultra HD (3840 x 2160)
HDR Support	Yes
Supported Internet Services	Freeview Play, SMART apps (Netflix, YouTube, etc.)
Connectivity Technology	HDMI, USB, Ethernet (LAN), Wi-Fi
Aspect Ratio	16:9

Included Components	Remote Control
Product Dimensions (W x D x H)	124 x 24 x 75 cm (with stand)
Manufacturer	Digihome



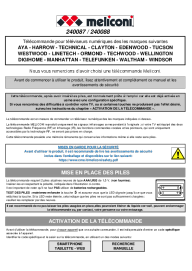
## 6. Warranty and Support



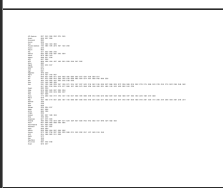
This product is sold as a "Renewed" item. For specific warranty information, please refer to the terms and conditions provided by the seller at the time of purchase. Typically, renewed products come with a limited warranty from the seller or a third-party refurbisher.

For technical support, troubleshooting assistance beyond this manual, or warranty claims, please contact the seller or the Amazon Renewed support channel through which you purchased this product. Have your purchase details and the TV's model number (PTDR55UHDS7) ready when contacting support.

© 2024 Digihome. All rights reserved. Information in this manual is subject to change without notice.

### Related Documents - PTDR55UHDS7

	<p><a href="#">Digihome 43BI23UHDS 43-inch 4K UHD Smart TV Operating Instructions Manual</a></p> <p>Comprehensive user manual for the Digihome 43BI23UHDS 43-inch 4K UHD Smart TV, covering setup, features, operation, connectivity, and troubleshooting.</p>
	<p><a href="#">Digihome 55BI23UHDS 55-inch 4K UHD Smart TV Operating Instructions</a></p> <p>Comprehensive operating instructions and user manual for the Digihome 55BI23UHDS 55-inch 4K UHD Smart TV, covering setup, features, connectivity, settings, and troubleshooting.</p>
	<p><a href="#">Meliconi Remote Control User Manual and Safety Guide</a></p> <p>Comprehensive guide for Meliconi remote controls, covering setup, activation, troubleshooting, and safety information for various TV brands.</p>

	<p><a href="#">Comprehensive TV and STB Remote Control Code Lists</a></p> <p>A detailed list of remote control codes for a wide range of Television (TV) and Set-Top Box (STB) brands, essential for programming universal remote controls.</p>
	<p><a href="#">Bose Universal Remote Device Codes - Europe</a></p> <p>A comprehensive list of device codes for programming Bose universal remotes to control TVs, Cable-Satellite boxes, DVD players, Game consoles, and AUX devices in Europe.</p>
	<p><a href="#">GO Remote TV Codes List: Compatible Brands and Codes</a></p> <p>Comprehensive list of GO remote TV codes for various brands and models, enabling easy setup and compatibility for your entertainment devices.</p>