

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [AUKSKY](#) /

› [AUKSKY Portable Mini Speaker User Manual](#)

## AUKSKY Tiny Speaker

# AUKSKY Portable Mini Speaker User Manual

Model: Tiny Speaker

## INTRODUCTION

---

Thank you for purchasing the AUKSKY Portable Mini Speaker. This manual provides essential information for setting up, operating, and maintaining your new speaker. Please read this manual thoroughly before use to ensure optimal performance and longevity of your device.

## WHAT'S IN THE BOX

---

Upon unboxing, please verify that all the following items are included:

- 2 x AUKSKY Portable Mini Wireless Speakers
- 2 x Hand Straps
- 2 x Short Micro Charging Cables

# What You Got

## Box



## 2 Short Micro Charging Cables



## 2 Hand Straps



## 2 Speakers


Image: The complete package contents, including two mini speakers, two micro USB charging cables, and two hand straps.

## PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your AUKSKY Mini Speaker.

# Easy to Use

Small indicator lights display all working status

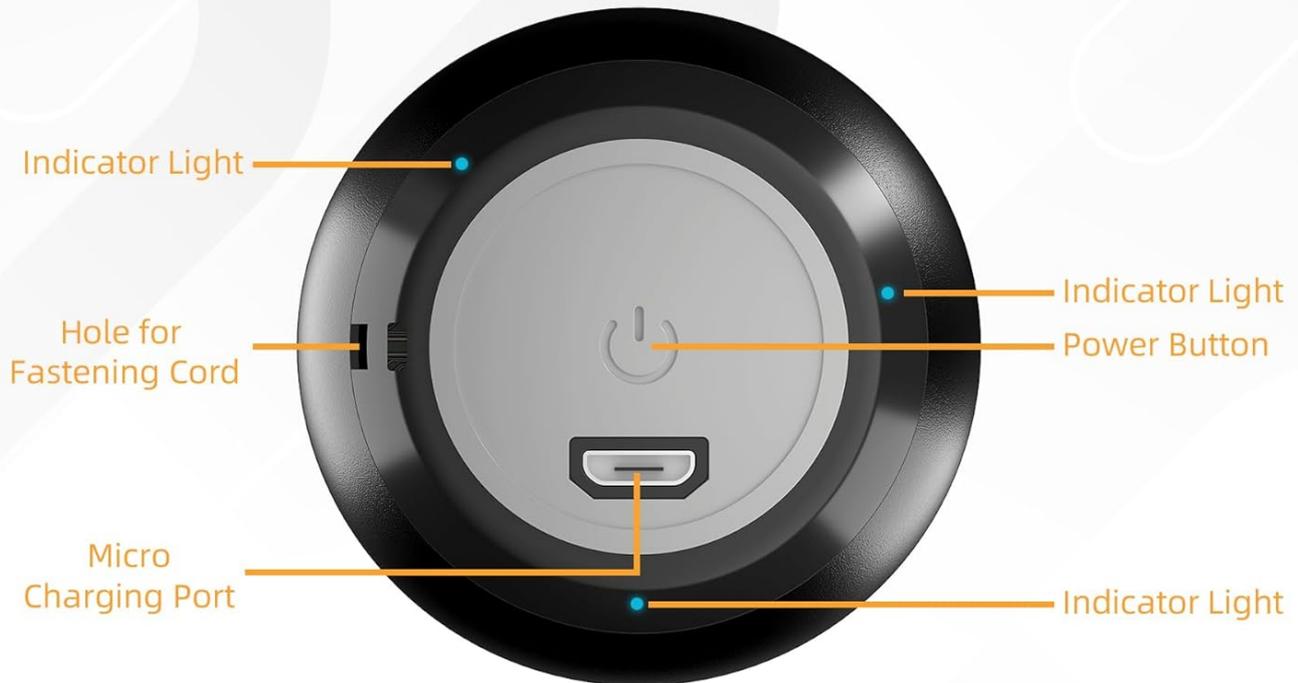

Red ON  
Charging



Red Off Fully  
Charged



Blue Flashing  
Wait for Pair



Blue On  
Paired



Press 4"  
On/Off



Click 1X Play/  
Pause/ Answer Call



Need be  
Charged



Micro USB  
Charging

Image: Detailed view of the speaker's top panel, highlighting the power button, micro charging port, strap attachment point, and indicator lights.

1. **Power Button:** Used for turning the speaker on/off, play/pause, and answering calls.
2. **Micro Charging Port:** For connecting the Micro USB charging cable.
3. **Hole for Fastening Cord:** Point to attach the included hand strap.
4. **Indicator Lights:** Provide status feedback (charging, paired, waiting for pair).

The speaker features a compact design, measuring approximately 1.92 inches in diameter and 1.34 inches in height, weighing about 2.46 ounces. It incorporates a 3W high-performance speaker for clear sound.

# Mini but Strong

Enjoy music by AUKSKY speakers anytime and anywhere

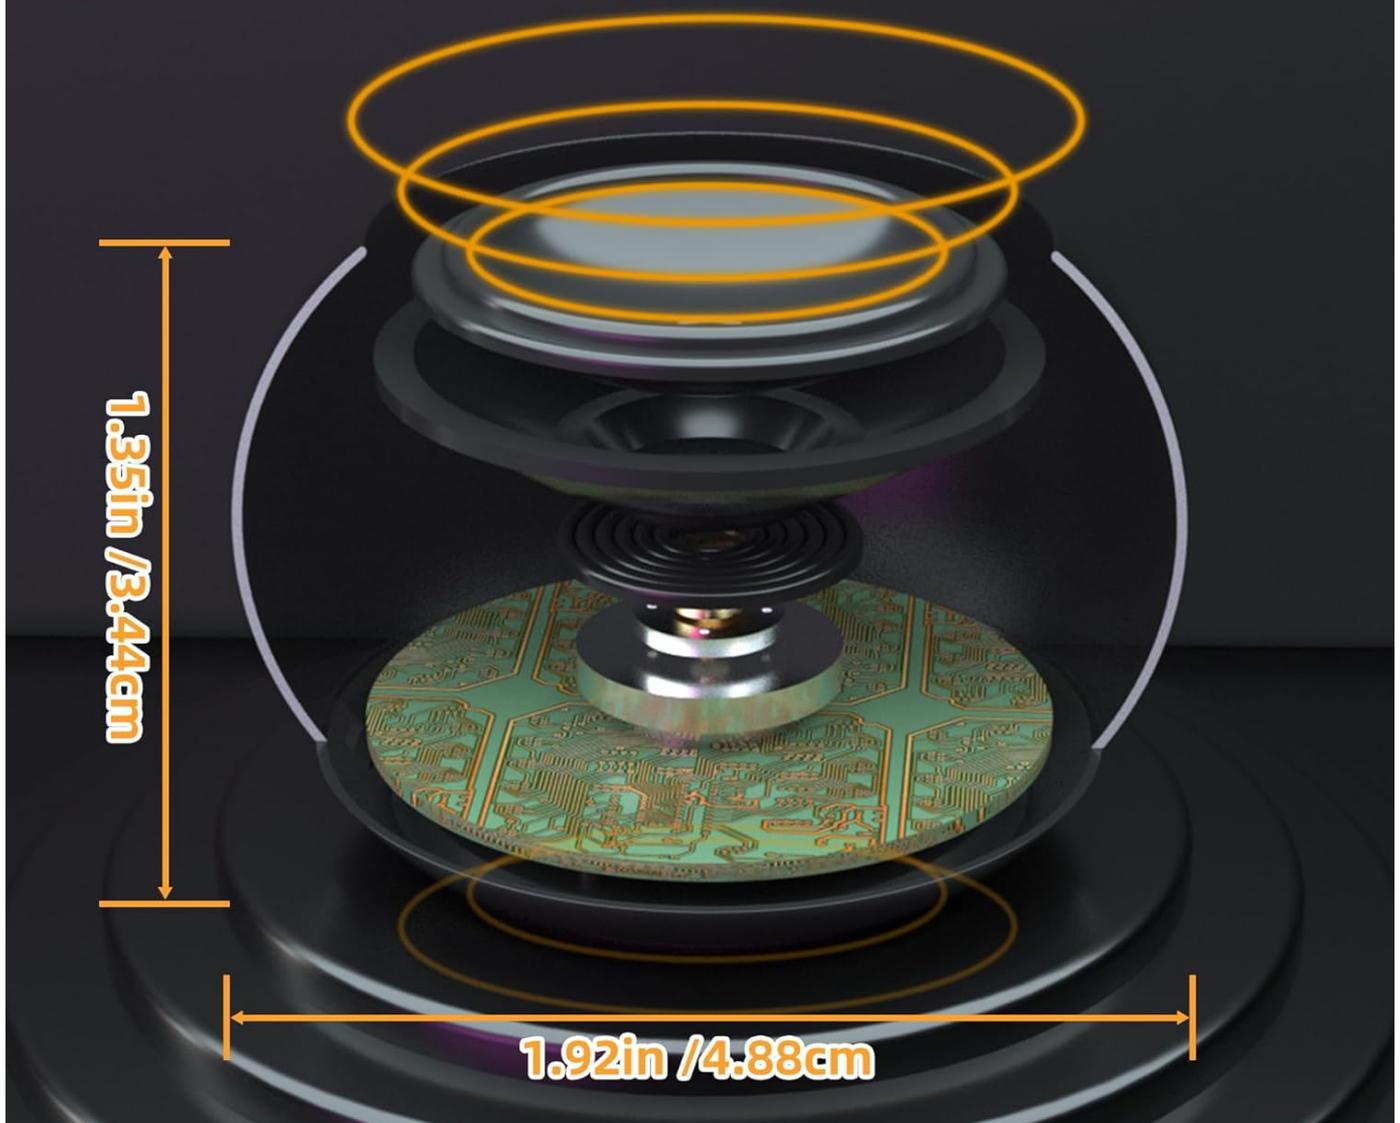


Image: Cross-section view illustrating the speaker's internal structure and compact dimensions.

## SETUP

### Charging the Speaker

Before first use, fully charge your speaker.

1. Connect the provided Micro USB charging cable to the Micro Charging Port on the speaker.
2. Connect the other end of the cable to a USB power source (e.g., computer USB port, USB wall adapter).
3. The indicator light will show **Red ON** during charging.
4. Once fully charged, the indicator light will turn **Red OFF**.

### Power On/Off

- To power on, press and hold the Power Button for approximately 4 seconds.
- To power off, press and hold the Power Button for approximately 4 seconds.

## Bluetooth Pairing

The speaker uses Bluetooth 5.0 for quick and stable connections.

1. Ensure the speaker is charged and powered on. The blue indicator light will be **Blue Flashing**, indicating it's waiting to pair.
2. On your device (phone, PC, tablet), enable Bluetooth and search for available devices.
3. Select "M3" from the list of found devices to connect.
4. Once successfully paired, the blue indicator light will turn **Blue On** (solid).
5. The speaker will automatically reconnect to the last paired device when powered on, if within range.

## Wireless Stereo Pairing (TWS Function)

You can pair two AUKSKY Mini Speakers together for an immersive stereo audio experience.

1. Ensure both speakers are charged and powered off.
2. Power on the first speaker and connect it to your device via Bluetooth as described above.
3. Power on the second speaker.
4. Double-click the Power Button on the second speaker. It will automatically connect to the first speaker.
5. Both speakers' indicator lights will turn solid blue once successfully connected in stereo mode.
6. **Note:** For optimal stereo performance, keep the two speakers within 1 meter (3.2 feet) of each other while playing. To exit stereo mode, turn one speaker off.

# Wireless Stereo Pair

Double the sound to create an immersive atmosphere



Image: Visual representation of two speakers connected for wireless stereo sound, enhancing the audio experience.

## OPERATING THE SPEAKER

### Basic Controls

- **Play/Pause Music:** While music is playing, single-click the Power Button to pause. Single-click again to resume playback.
- **Answer/End Call:** When an incoming call is received, single-click the Power Button to answer. Single-click again to end the call.
- **Reject Call:** To reject an incoming call, press and hold the Power Button for 2 seconds.

### One-Touch Photography

The speaker can also function as a remote shutter for your phone's camera.

1. Ensure the speaker is connected to your phone via Bluetooth.
2. Open your phone's camera application.

3. Quickly double-press the Power Button on the speaker to take a photo.

## Portability and Usage

The AUKSKY Mini Speaker is designed for maximum portability.

- Weighing only 2.46 ounces and being coin-sized, it can easily fit into your pocket.
- Use the included hand strap to attach the speaker to keychains, backpacks, or belt loops for convenient carrying during outdoor activities or travel.



Image: The speaker's ultra-portable design, shown attached to a backpack, with detailed steps on how to secure the hand strap.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly,

even if not in use for extended periods.

- **Water Resistance:** The speaker is waterproof. However, avoid prolonged submersion or exposure to high-pressure water jets. Ensure the charging port cover is securely closed if present.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is low or depleted.	Charge the speaker using the provided Micro USB cable.
Cannot pair with Bluetooth device.	Bluetooth is off on your device; speaker is not in pairing mode; speaker is already connected to another device; too far from device.	Ensure Bluetooth is enabled on your device. Power off and on the speaker to enter pairing mode (blue light flashing). Disconnect from other devices. Ensure speaker is within 32 feet (10 meters) of your device.
No sound or low volume.	Volume on speaker or device is too low; speaker not properly connected; audio source issue.	Increase volume on both the speaker and your connected device. Re-pair the speaker with your device. Try playing audio from a different source.
Stereo pairing not working.	Speakers are too far apart; incorrect pairing sequence.	Ensure speakers are within 1 meter (3.2 feet) of each other. Follow the stereo pairing instructions precisely (power on first, connect to device, then power on second and double-click).

## SPECIFICATIONS

Feature	Detail
Model Name	Portable Mini Speaker (Tiny Speaker)
Brand	AUKSKY
Connectivity Technology	Bluetooth 5.0
Wireless Range	Up to 10 meters (32 feet)
Speaker Output Power	3 Watts
Audio Output Mode	Stereo (with TWS pairing)
Built-in Microphone	Yes (for hands-free calling)
Power Source	Battery Powered (1 Lithium Polymer battery included)
Charging Port	Micro USB
Product Dimensions (D x W x H)	1.92" x 1.92" x 1.34" (4.88cm x 4.88cm x 3.40cm)
Item Weight	2.46 ounces (0.07 kg)
Material	Aluminum

Feature	Detail
Water Resistance Level	Waterproof
Included Components	2 Speakers, 2 Hand Straps, 2 Micro Charging Cables

## WARRANTY AND SUPPORT

---

The AUKSKY Tiny Speaker includes a one-year warranty covering key components from the date of purchase. For any inquiries, technical assistance, or post-purchase concerns, please contact AUKSKY customer support. Our team is available 24/7 to assist you. Please refer to your purchase documentation or the official AUKSKY website for specific contact details.

## IMPORTANT SAFETY INFORMATION

---

- Do not disassemble, repair, or modify the speaker. This may cause damage, electric shock, or fire, and will void the warranty.
- Keep the speaker away from extreme heat sources, direct sunlight, and open flames.
- Do not expose the speaker to corrosive liquids.
- Dispose of the speaker and its battery responsibly according to local regulations. Do not dispose of batteries in fire.
- Avoid listening at high volume levels for extended periods to prevent hearing damage.

