

Miroddi MF38

Miroddi MF38 MagSafe Wallet with Find My Functionality User Manual

Model: MF38

1. PRODUCT OVERVIEW

The Miroddi MF38 MagSafe Wallet is a magnetic card holder designed for iPhone 12, 13, 14, 15, and 16 series. It integrates with Apple's Find My network, offers strong magnetic attachment, RFID blocking, and a privacy flap. It can securely hold up to 7 cards.

Key Features:

- **Apple Find My Integration:** Locate your wallet using the Apple Find My app, receive left-behind alerts, and play a sound to find it nearby.
- **Strong Magnetic Attachment:** Features a powerful 20N magnetic force for secure attachment to MagSafe-compatible iPhones or cases.
- **Card Capacity:** Designed to hold up to 7 cards and some cash.
- **Privacy Flap & RFID Blocking:** A flap design prevents cards from falling out and conceals private information. Integrated RFID blocking protects your cards from unauthorized scanning and demagnetization.
- **Slim & Lightweight Design:** With a thickness of 0.15 inches and a weight of 80g, it maintains a minimalist profile.

Compatibility:

This wallet is compatible with iPhone 16, 16 Pro, 16 Pro Max, 16 Plus, iPhone 15, 15 Pro, 15 Pro Max, 15 Plus, iPhone 14, 14 Pro, 14 Pro Max, 14 Plus, iPhone 13, 13 Pro, 13 Pro Max, iPhone 12, 12 Pro, 12 Pro Max. It requires a MagSafe-compatible iPhone or a MagSafe-compatible case for proper magnetic attachment. **Note:** Android devices are not supported.



Image: The Miroddi MF38 MagSafe Wallet in White, securely attached to the back of an iPhone.



Miroddi MF38 Find Wallet

Easily locate misplaced wallets!



Image: The wallet's integration with Apple Find My, showing its location on a map via an iPhone.

2. SETUP INSTRUCTIONS

2.1 Initial Charging

Before first use, it is recommended to fully charge the wallet. The wallet contains a rechargeable battery that can last up to 6 months on a single charge. To charge, simply place the wallet on a wireless charger (e.g., a MagSafe charger). A full charge typically takes approximately 6 hours.

Image: The Miroddi MagSafe Wallet being charged wirelessly on a compatible charging pad.

2.2 Pairing with Apple Find My

1. Ensure your iPhone is updated to the latest iOS version and Bluetooth is enabled.
2. Open the Apple Find My app on your iPhone.
3. Place the Miroddi MagSafe Wallet near your iPhone. A prompt should appear on your iPhone screen to connect the wallet.
4. Follow the on-screen instructions to complete the pairing process. You may be asked to name your wallet.
5. Once paired, you can view your wallet's location, set up left-behind alerts, and play a sound through the Find My app.

 


Image: Visual guide demonstrating the four steps to pair, locate, play sound, and find your Miroddi wallet using the Find My app.

2.3 Attaching to iPhone

Align the Miroddi MagSafe Wallet with the MagSafe ring on the back of your iPhone or MagSafe-compatible case. The strong magnets will snap the wallet securely into place.

Left behind Remind



Find Your Nearby Wallet by Loud Alarm

Image: A hand holding an iPhone with the Miroddi MagSafe Wallet securely attached to its back.

3. OPERATING INSTRUCTIONS

3.1 Using Apple Find My Features

- **Locate:** Open the Find My app on your iPhone. Select your Miroddi wallet from the 'Items' tab to see its current or last known location on a map.
- **Play Sound:** If your wallet is nearby, tap 'Play Sound' in the Find My app to emit an audible alert from the wallet, helping you pinpoint its exact location.

- **Left-Behind Alerts:** Configure alerts in the Find My app to receive a notification on your iPhone if you leave your wallet behind at a recognized location.
- **Directions:** If your wallet is far away, the Find My app can provide directions to its location.

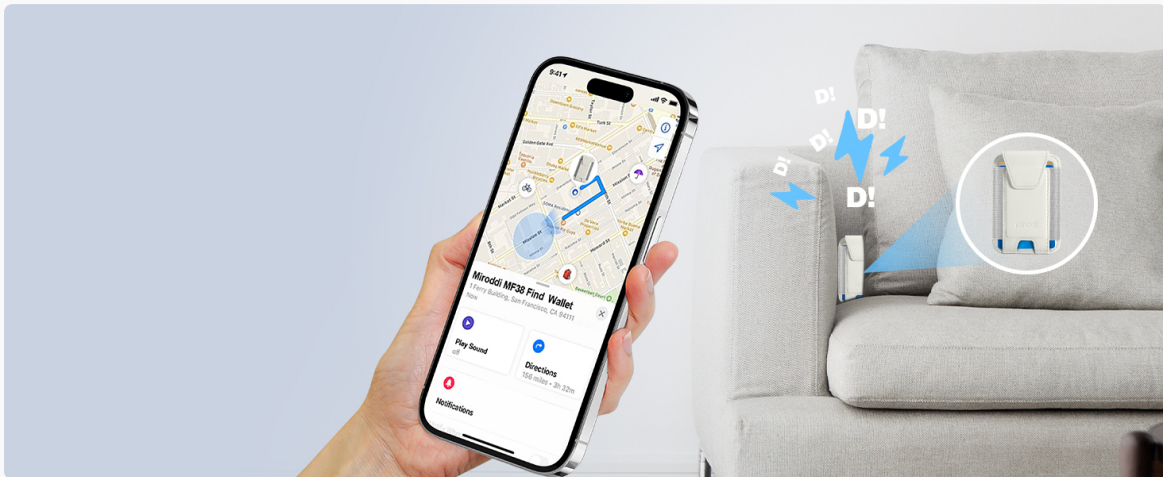


Image: The Find My app interface on an iPhone, showing the wallet's location and options for interaction.



Image: An iPhone displaying a 'Wallet left behind' alert, demonstrating the proactive tracking feature.

3.2 Inserting and Removing Cards

The wallet features a thumb slot for easy access to your cards. Gently push cards up from the bottom slot to retrieve them. The privacy flap helps secure cards and prevents them from accidentally sliding out.

Simple Life

Snap & Go



Kote: Not compatible with non-magnetic case

Image: A hand demonstrating how to insert a credit card into the Miroddi MagSafe Wallet.

3.3 RFID Blocking

The wallet is equipped with RFID blocking technology to protect your credit cards and other sensitive information from electronic theft. This feature works automatically when cards are stored inside the wallet.

Smart Card Storage

Conveniently holds up to 7 cards and cash



Image: The Miroddi MagSafe Wallet protecting cards from unauthorized scanning at a payment terminal.

4. MAINTENANCE

4.1 Cleaning

To clean your Miroddi MagSafe Wallet, use a wet wipe. Gently wipe the exterior surfaces to remove dirt or smudges. Avoid using harsh chemicals or abrasive materials, as these may damage the wallet's finish.

4.2 Charging

The wallet's internal battery should be charged periodically to ensure continuous Find My functionality. A single charge can last up to 6 months. Recharge by placing the wallet on a wireless charger. If you charge your iPhone with a cable while the wallet is connected, it may also help maintain the wallet's charge.

5. TROUBLESHOOTING

5.1 Find My Functionality Issues

- **Wallet not appearing in Find My:** Ensure the wallet is charged. If it has been a long time since the last charge, the battery might be depleted.
- **Difficulty re-pairing:** If you unpair the wallet and have trouble re-pairing, try turning off and resetting your iPhone's Bluetooth, then attempt the pairing process again. Sometimes, multiple attempts or a device restart may be necessary.
- **No sound from wallet:** Check the battery level in the Find My app. A low battery might affect the sound feature.

5.2 Magnetic Attachment Issues

- **Wallet not attaching securely:** Ensure your iPhone or case is MagSafe compatible. Non-magnetic cases will prevent proper attachment. Clean the back of your iPhone/case and the wallet's magnetic surface to ensure no debris interferes with the connection.
- **Wallet feels loose:** While the magnets are strong, excessive force or certain movements can dislodge it. Ensure it is properly aligned.

5.3 Card Storage Issues

- **Cards difficult to insert/remove:** The wallet is designed to hold up to 7 cards. Overfilling may make it difficult to access cards. Remove some cards if you experience excessive tightness.
- **Cards falling out:** Ensure the privacy flap is properly closed. The flap is designed to prevent cards from sliding out.

6. SPECIFICATIONS

Brand	Miroddi
Model Name	MF38
Color	White
Material	Leather
Magnetic Strength	20 N
Card Capacity	Up to 7 cards
Special Features	Apple Find My compatible, RFID Blocking, Privacy Flap, Strong Magnetic Attachment
Thickness	0.15 inches

Item Weight	0.12 Kilograms (approx. 80g)
Included Components	1 x Miroddi MagSafe Wallet

7. WARRANTY INFORMATION

The Miroddi MF38 MagSafe Wallet comes with a **2-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

8. SUPPORT

For further assistance, technical support, or warranty inquiries, please contact Miroddi customer service through the retailer where the product was purchased or visit the official Miroddi website for contact information.

9. PRODUCT VIDEOS

Your browser does not support the video tag.

Video: An official product video from Miroddi Direct demonstrating the MagSafe Wallet's compatibility with Apple Find My and its strong magnetic attachment.