

[Manuals.plus](#) /

› [BABY JOY](#) /

› BABY JOY 3-in-1 Convertible Wooden Highchair Instruction Manual (Model MZ802)

BABY JOY MZ802

BABY JOY 3-in-1 Convertible Wooden Highchair

INSTRUCTION MANUAL - MODEL MZ802

1. INTRODUCTION

Thank you for choosing the BABY JOY 3-in-1 Convertible Wooden Highchair. This versatile highchair is designed to adapt to your child's growth, offering multiple configurations from infancy to toddlerhood. Please read this manual carefully before assembly and use to ensure safe and proper operation.



Image 1: The BABY JOY 3-in-1 Convertible Wooden Highchair in its standard highchair configuration.

2. SAFETY INFORMATION

Your child's safety is our top priority. Always follow these safety guidelines:

- Always secure your child with the **5-point safety harness** when using the highchair.
- Ensure the highchair is placed on a **flat, stable surface**.
- Never leave your child unattended in the highchair.
- Regularly check all components for proper assembly and wear.
- The highchair features **smooth, round edges** and an **anti-falling baffle** for enhanced safety.
- Do not use the highchair if any parts are damaged or missing.

Enhanced Safety



Smooth Round Edges



5-Point Safety Harness



Plastic or
PU Anti-falling Baffle



Image 2: Detailed view of the highchair's safety features, including the 5-point harness and smooth design.

3. PRODUCT COMPONENTS

Before assembly, ensure all parts are present:

- Highchair Seat (PE material)
- PU Leather Cushion (removable)
- Wooden Legs (Beech wood)
- X-shaped Reinforced Bars
- Footrest (wooden)
- Removable Tray (PP material, BPA-free)
- 5-Point Safety Harness
- Anti-slip Foot Pads (4 for high chair, 4 extra for low chair)
- Plastic or PU Anti-falling Baffle

4. SETUP AND ASSEMBLY

The BABY JOY highchair features a 6-in-1 convertible design. Assembly is required and can be easily adapted to various configurations.

4.1. High Chair Configuration

1. Attach the long wooden legs to the highchair seat base, ensuring they are securely fastened.
2. Install the X-shaped reinforced bars between the legs for added stability.
3. Slide the wooden footrest into the designated slots on the front legs.
4. Place the PU leather cushion into the seat.
5. Attach the 5-point safety harness and ensure it is properly threaded through the cushion.
6. Slide the removable tray onto the armrests until it clicks securely into place.
7. Attach the anti-slip foot pads to the bottom of each leg.



Image 3: Visual guide to the 6-in-1 convertible highchair configurations.

4.2. Converting to Lower Chair/Toddler Chair

To convert the highchair to a lower chair or toddler chair, simply detach the longer sections of the wooden legs. Replace the footrest and attach the extra anti-slip foot pads provided for the shorter legs.



Image 4: Illustration of the stable construction with wooden legs and reinforced bars.

5. OPERATING INSTRUCTIONS

5.1. Adjusting the Tray

The food tray offers 3 adjustable positions to accommodate your growing child. To adjust, press the release buttons on the sides of the tray and slide it forward or backward to the desired position. Ensure it locks securely.

3-Position Adjustable Food Tray



Waterproof



BPA-Free



Heat-resistant



Dishwasher Safe



Easy to Detach and Clean



Image 5: The adjustable and removable food tray.

5.2. Using the 5-Point Harness

To secure your child, place them in the seat and fasten the shoulder and waist straps. Adjust the straps for a snug, comfortable fit. The harness buckle is designed for quick release when needed.

5.3. Removing the Tray

To remove the tray for cleaning or to allow your child to sit closer to a table, press the release buttons on both sides and pull the tray forward and up. The tray is dishwasher safe.

6. MAINTENANCE AND CLEANING

Keeping your highchair clean is simple:

- The **PU leather cushion** is waterproof and can be easily wiped clean with a damp cloth and mild soap. It is also removable for thorough cleaning.
- The **PP food tray** is BPA-free, heat-resistant, and **dishwasher safe**. Remove it and wash as needed.

- Wipe down wooden legs and plastic components with a damp cloth. Avoid harsh chemicals that may damage the materials.
- Regularly check the harness straps for food residue and clean them with mild soap and water.



Image 6: The removable and easy-to-clean PU leather cushion.

7. TROUBLESHOOTING

If you encounter any issues, please refer to the following common solutions:

- **Highchair feels unstable:** Ensure all leg connections are tightened and the X-shaped reinforced bars are correctly installed. Verify anti-slip foot pads are in place.
- **Tray not locking:** Check for any obstructions in the tray's sliding mechanism. Ensure both release buttons are fully depressed when attaching or adjusting.
- **Harness too tight/loose:** Adjust the straps by sliding the buckles to achieve a secure and comfortable fit for your child.

For further assistance, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model Number	MZ802
Product Dimensions (L x W x H)	24 x 22 x 36 inches
Net Weight	12 lbs (5 Kilograms)
Maximum Weight Recommendation	33 Pounds
Suitable Age Range	6-36 Months Old
Color	Black
Material Type	Beech Wood, Faux Leather (PU), Plastic (PP, PE)
Assembly Required	Yes
Tray Features	3-position adjustable, Removable, BPA-free, Heat-resistant, Dishwasher Safe



Suitable Age: 6-36 Months Old



Weight Capacity: 33 lbs



Dimensions



Includes 4 Foot Pads for Low Chair

Image 7: Key dimensions and specifications of the highchair.

9. WARRANTY AND SUPPORT

For any questions, concerns, or warranty information regarding your BABY JOY highchair, please contact our customer support team. Refer to your purchase documentation for specific warranty details and contact information.

We are committed to providing high-quality products and excellent customer service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CY8MFSHP>

More documents and user manuals: **<https://manuals.plus/>**