

## PLANTKA PLANTKA Main Brush

# PLANTKA Main Brush Replacement for Roborock S8, S8+, S8 Pro Ultra Robot Vacuum Cleaner (2 Pieces)

Instruction Manual

## 1. INTRODUCTION

This manual provides instructions for the installation and maintenance of the PLANTKA Main Brush Replacement, designed for Roborock S8, S8+, and S8 Pro Ultra robot vacuum cleaners. This package includes two main brushes, ensuring you have a spare for continuous optimal performance.

The main brushes are crafted from high-strength, environmentally friendly materials to ensure long-lasting durability and effective cleaning. Regular replacement of these parts is crucial for maintaining your robot vacuum's efficiency.



Figure 1: Two PLANTKA Main Brushes (Red and Black)

## 2. INSTALLATION

Replacing the main brush is a straightforward process that can be performed as part of routine maintenance. Follow these steps to install your new main brush:

1. **Prepare the Vacuum:** Turn off your Roborock S8 series robot vacuum cleaner and place it upside down on a clean, flat surface to access the main brush compartment.
2. **Open the Brush Cover:** Locate the main brush cover, usually secured by latches or clips. Release these to open the cover.
3. **Remove the Old Brush:** Gently lift and remove the old main brush from its compartment. Note how it is seated to ensure correct installation of the new brush.
4. **Clean the Compartment:** Use a small brush or cloth to clean any debris, hair, or dust accumulated in the brush compartment and around the brush bearings.
5. **Install the New Brush:** Insert the new PLANTKA main brush into the compartment, aligning its ends with the designated slots. Ensure it fits snugly and can rotate freely.
6. **Close the Cover:** Close the main brush cover and secure the latches or clips.

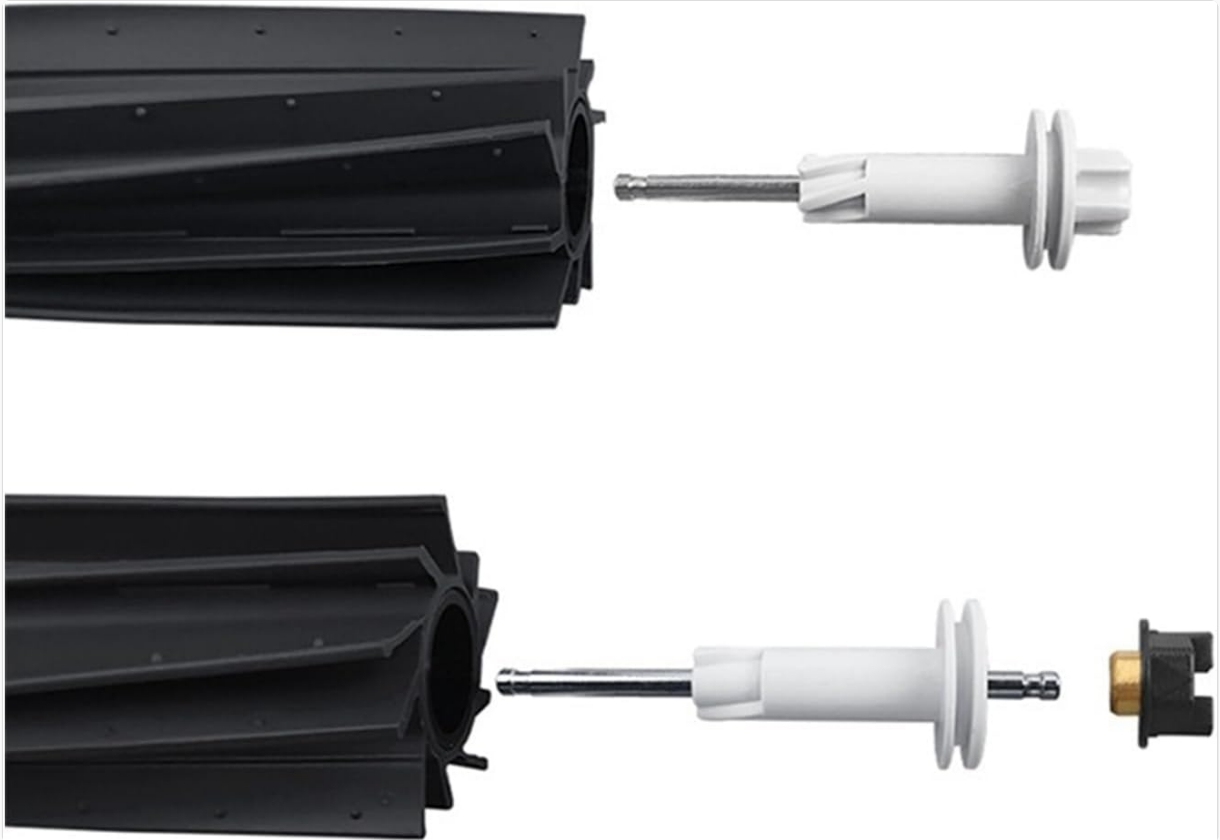 


Figure 2: Disassembly of Main Brush End Cap

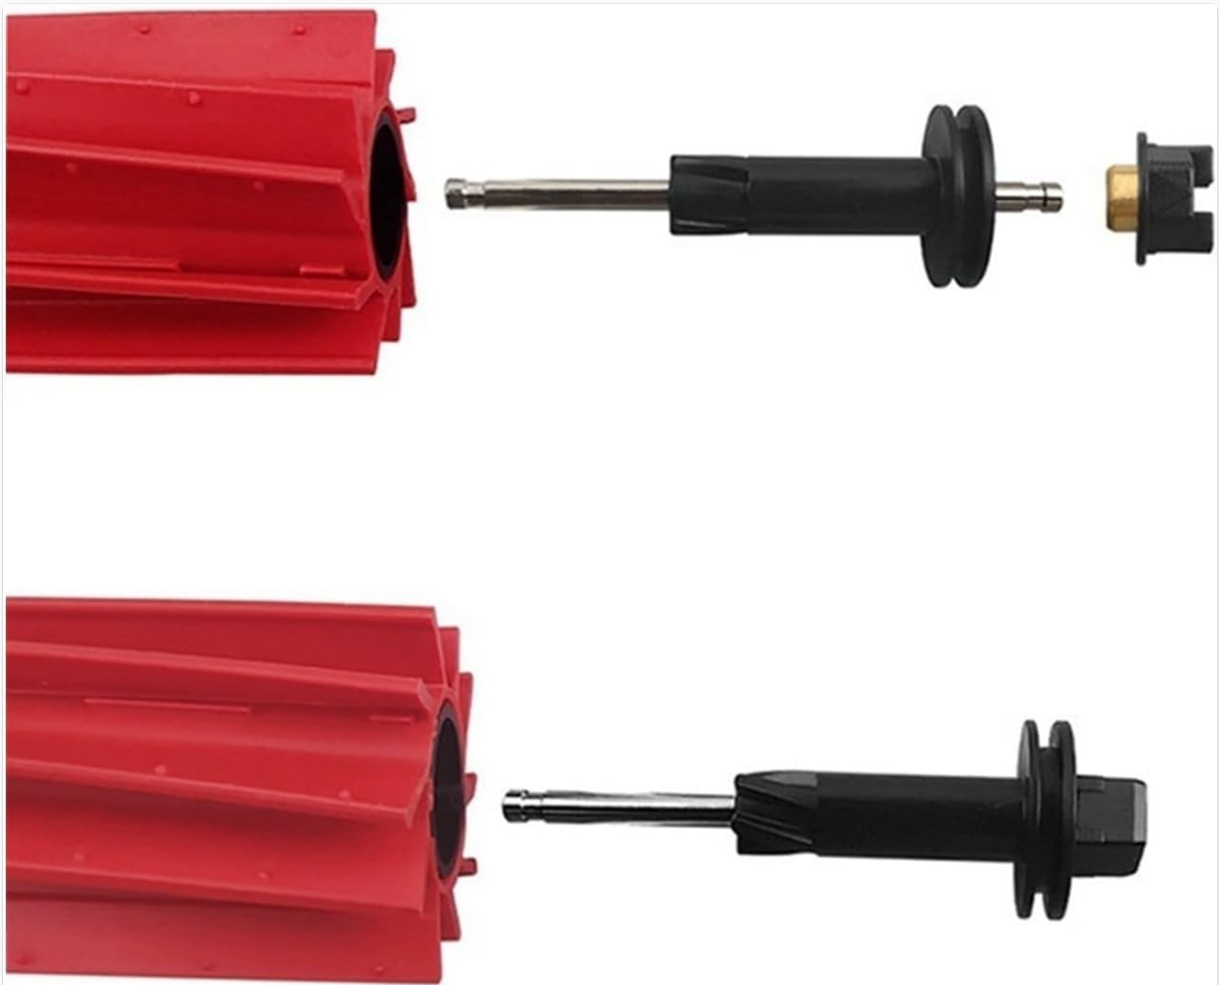 


Figure 3: Disassembly of Main Brush End Cap (Red Variant)

### 3. MAINTENANCE

Regular maintenance of your main brush ensures optimal cleaning performance and extends the lifespan of your robot vacuum. The main brush is designed to be easily removable for cleaning.

- **Cleaning Frequency:** It is recommended to clean the main brush weekly, or more frequently if your home has a high volume of pet hair or debris.
- **Debris Removal:** The main brush is removable and effectively collects debris wrapped around its bushings. After removing the brush, carefully untangle and remove any hair, strings, or other debris that may have become entangled.
- **Replacement Schedule:** For best results and to maintain peak cleaning efficiency, spare parts like the main brush should be replaced every 2-3 months.

## 4. SPECIFICATIONS

Feature	Detail
Product Name	PLANTKA Main Brush Replacement
Compatibility	Roborock S8, S8+, S8 Pro Ultra Robot Vacuum Cleaner
Quantity	2 Pieces
Color	Black & Red
Material	High-strength plastic
Dimensions (each brush)	Approximately 197mm length
Item Weight (per brush)	Approximately 25 grams (total 50 grams for 2 pieces)
Manufacturer	PLANTKA

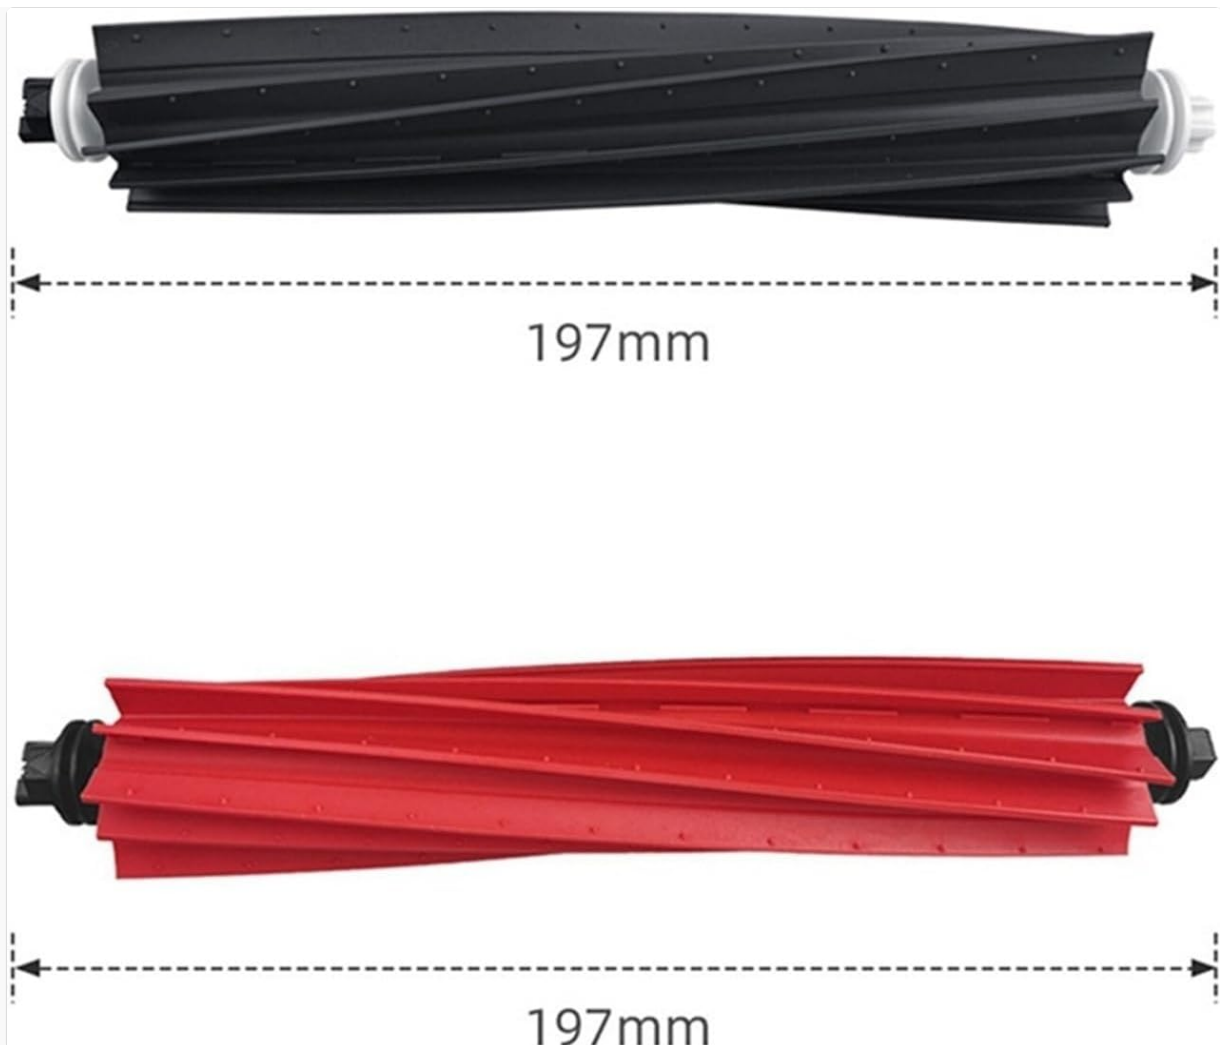 


Figure 4: Main Brush Dimensions

## 5. TROUBLESHOOTING

If you experience issues after replacing the main brush, consider the following:

- **Improper Installation:** Ensure the brush is correctly seated in its compartment and the cover is securely closed. Refer to the installation steps.
- **Debris Entanglement:** Check for any new debris or hair that might have quickly entangled around the brush or its ends, hindering its rotation.
- **Vacuum Malfunction:** If issues persist, the problem might not be with the brush itself. Consult the original instruction manual for your Roborock S8 series robot vacuum cleaner for further troubleshooting steps related to the vacuum's internal components or sensors.

## 6. WARRANTY AND SUPPORT

For any questions or concerns regarding your PLANTKA Main Brush Replacement, please do not hesitate to contact the seller or manufacturer directly. Specific warranty details may vary and are typically provided with your purchase documentation.

