

[manuals.plus](#) /› [CROSSIO](#) /› [CROSSIO 22" Retractable Ceiling Fan with Lights User Manual](#)**CROSSIO FS8808-01**

# **CROSSIO 22" Retractable Ceiling Fan with Lights User Manual**

Model: FS8808-01

## **1. INTRODUCTION**

---

Thank you for choosing the CROSSIO 22" Retractable Ceiling Fan with Lights. This innovative ceiling fan combines modern design with practical functionality, featuring retractable blades that disappear when not in use, transforming it into a stylish light fixture. Designed for small spaces such as bedrooms, living rooms, dining rooms, and patios, it offers 6 wind speeds, a reversible motor for year-round comfort, and convenient remote control operation. Please read this manual thoroughly before installation and use to ensure safe and optimal performance.



Figure 1: The CROSSIO 22-inch Retractable Ceiling Fan with Lights, showcasing its black caged design and retractable blades.

## 2. SAFETY INSTRUCTIONS

---

To reduce the risk of fire, electric shock, or personal injury, please follow these important safety guidelines:

- Read all instructions carefully before beginning installation.
- Ensure the power is turned off at the circuit breaker before installation or maintenance.
- All wiring must be in accordance with national and local electrical codes. If you are unsure, consult a qualified electrician.
- The mounting structure must be capable of supporting the weight of the fan (approximately 7.63 pounds).
- Do not bend the blade holders when installing the blades, balancing the blades, or cleaning the fan.
- Keep hands, clothing, and other objects clear of the fan blades when the fan is operating.
- Do not operate the fan without the light cage properly installed.
- Use only E26 bulbs (not included) as specified. Do not exceed the maximum wattage.

## 3. PACKAGE CONTENTS

---

Carefully unpack your ceiling fan and ensure all items are present and undamaged. If any parts are missing or damaged, contact customer support immediately.

- Ceiling Fan Body with Retractable Blades
- Mounting Bracket
- Remote Control
- Receiver for Remote Control
- Hardware Pack (screws, wire nuts, etc.)
- Instruction Manual

## 4. SETUP AND INSTALLATION

---

Follow these steps for proper installation. For a visual guide, please refer to the official installation video provided below.

Your browser does not support the video tag.

Video 1: Official installation guide for the CROSSIO 22" Caged Small Ceiling Fan with Lights. This video demonstrates the step-by-step assembly and wiring process.

### Installation Steps:

- 1. Prepare the Fan Body:** Remove the bottom cover of the fan body. Use a screwdriver to remove the screws securing the internal components.
- 2. Install the Canopy:** Place the canopy over the fan body. Insert the remote control receiver into the canopy, ensuring all wires are properly connected (as shown in the video).
- 3. Attach the Mounting Bracket:** Secure the mounting bracket to your ceiling junction box using appropriate screws. Ensure it is firmly attached and can support the fan's weight.
- 4. Hang the Fan:** Carefully lift the fan body and hang it onto the slot of the mounting bracket. This allows you to work on the wiring hands-free.
- 5. Connect Wiring:** Connect the electrical wires from the ceiling to the fan's wiring. Ensure the ground wire (green), neutral wire (white), and live wire (black) are connected correctly using wire nuts.
- 6. Attach the Canopy to the Bracket:** Once wiring is complete, secure the canopy to the mounting bracket using the provided screws.
- 7. Install Light Bulbs:** Screw in the required E26 light bulbs (not included) into the sockets within the caged light fixture.

## 5. OPERATING INSTRUCTIONS

---

Your CROSSIO ceiling fan is operated via the included remote control. Ensure the remote has working batteries (not included).



Figure 2: Remote control layout with functions for fan speed, light, and timer settings.

## Remote Control Functions:

- **Light On/Off:** Press the 'LIGHT ON/OFF' button to toggle the light.
- **Fan On/Off:** Press the 'FAN/OFF' button to turn the fan on or off.
- **Fan Speed:** Buttons '1' through '6' control the fan speed, from lowest (1) to highest (6).
- **Natural Wind Mode:** Press the 'Natural Wind' button for a gentle, varying breeze.
- **Timer:** Set the fan to turn off automatically after 1, 2, or 4 hours using the '1H', '2H', '4H' buttons.
- **Reversible Function:** Use the 'F' (Forward Rotation) and 'R' (Reverse Rotation) buttons to change the blade direction. This allows for warm air circulation in winter and cool air in summer.

# 6 WIND SPEEDS



**1-2 Gear**

Suitable for sleep



**3-4 Gear**

Family entertainment



**5-6 Gear**

Enjoy cool summer

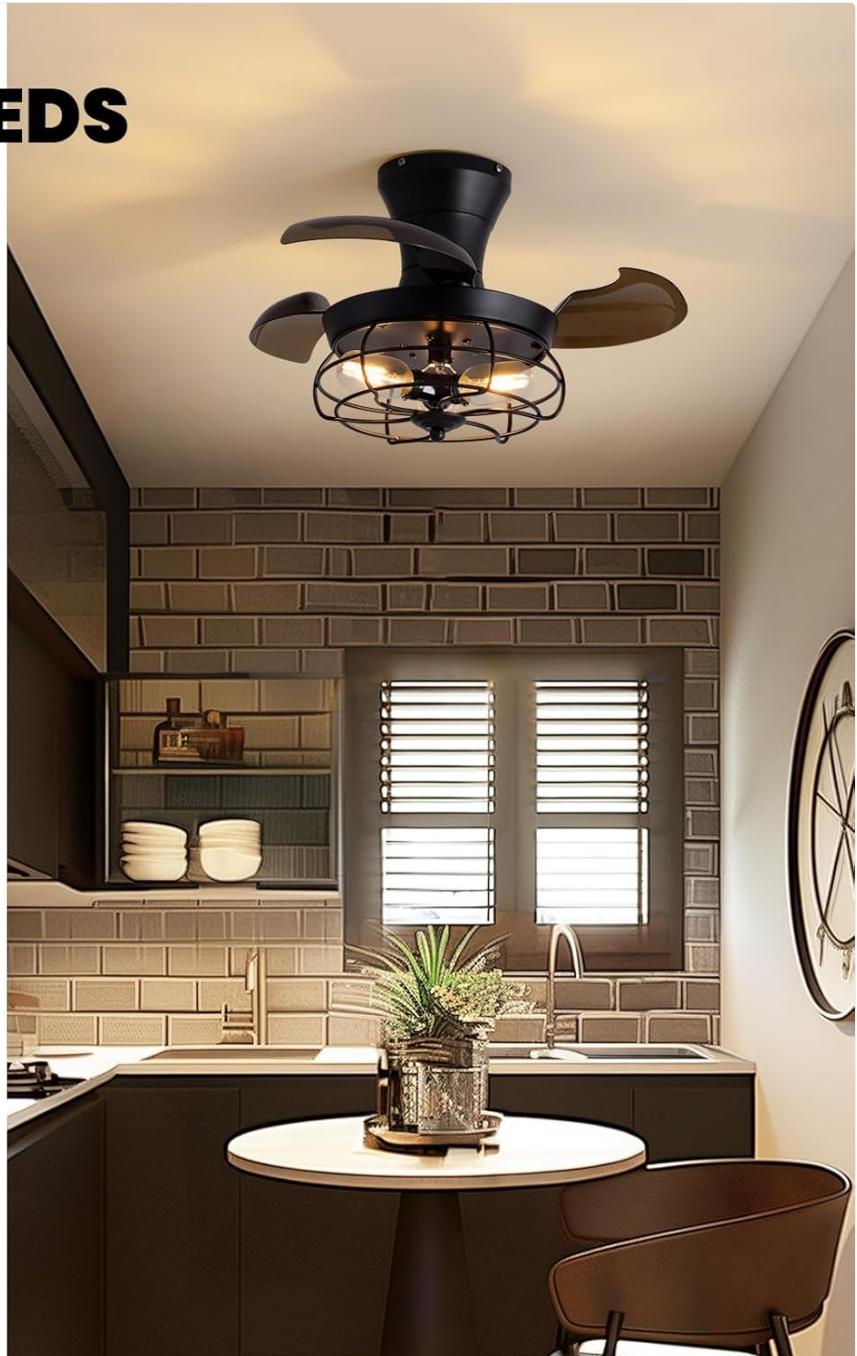


Figure 3: Illustration of the fan's 6 wind speed settings and their recommended uses.

# REVERSE FUNCTION

Suitable for all seasons



Figure 4: Visual representation of the fan's reversible function for different seasons.

## 6. MAINTENANCE

Regular maintenance helps ensure the longevity and optimal performance of your ceiling fan.

- **Cleaning:** To clean the fan, wipe with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure power is off before cleaning.
- **Bulb Replacement:** Turn off power before replacing bulbs. Allow bulbs to cool completely. Unscrew old bulbs and replace with new E26 bulbs (max 60W per socket).
- **Tighten Fasteners:** Periodically check all screws and fasteners to ensure they are secure.

## 7. TROUBLESHOOTING

If you encounter any issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Remote control battery dead.	Check circuit breaker; Verify all wire connections are secure; Replace remote control battery.
Light does not work	Bulb is loose or burnt out; Incorrect bulb type; Loose wire connection.	Tighten or replace bulb; Ensure E26 bulbs are used; Check light wiring connections.
Fan is noisy	Loose screws; Blades unbalanced; Motor issue.	Tighten all screws on the fan body and blades; Check blade balance; Contact customer support if noise persists.
Remote control not working	Battery dead or incorrectly inserted; Remote not paired with receiver.	Replace battery, ensuring correct polarity; Refer to remote pairing instructions (usually involves turning power off/on and pressing a button on the remote within a few seconds).

## 8. SPECIFICATIONS

---

Detailed specifications for your CROSSIO ceiling fan:

- **Brand:** CROSSIO
- **Model Name:** FS8808-01
- **Color:** Black
- **Electric Fan Design:** Ceiling Fan
- **Power Source:** AC
- **Style:** Modern
- **Product Dimensions:** 22"D x 22"W x 11"H
- **Room Type:** Bedroom, Closet, Dining Room, Kitchen, Office
- **Special Features:** 6 Wind Speeds, Natural Wind, Timer, Retractable Blades, Reversible Motor
- **Recommended Uses:** Indoor
- **Wattage:** 60 watts (max per light socket)
- **Number of Blades:** 3
- **Voltage:** 120 Volts
- **Switch Type:** Remote
- **Included Components:** Remote Control
- **Blade Material:** Polycarbonate (PC)
- **Item Weight:** 7.63 pounds
- **UPC:** 728205279785

# 22" CEILING FAN



3 PC Fan Blades



High Quality Metal



Standard E26 Bulb Base

Figure 5: Detailed dimensions and key components of the CROSSIO ceiling fan.

## 9. WARRANTY AND SUPPORT

CROSSIO products are designed for durability and performance. This product comes with a standard manufacturer's warranty. For specific warranty details, please refer to the documentation included with your purchase or contact our customer support.

If you encounter any problems with your retractable ceiling fan with lights, please do not hesitate to let us know. Our dedicated customer support team is ready to assist you with any questions or concerns.

### Contact Information:

Please refer to your product packaging or the official CROSSIO website for the most current contact details for customer service and technical support.

