

Manuals.plus /

› AGKG123 /

› T59 Bluetooth Headphones Wireless Earbuds 72hrs Playtime Wireless Charging Case Digital Display Sports Ear Buds with Earhook Premium Deep Bass IPX7 Waterproof in-Ear Earphones Black


AGKG123 T59

T59 Bluetooth Headphones User Manual

Model: T59 | Brand: AGKG123

INTRODUCTION

Thank you for choosing the AGKG123 T59 Bluetooth Headphones. These wireless earbuds are designed to provide a high-quality audio experience with features like long playtime, a digital charging case, and a secure fit for various activities. This manual will guide you through the setup, operation, and maintenance of your new headphones.

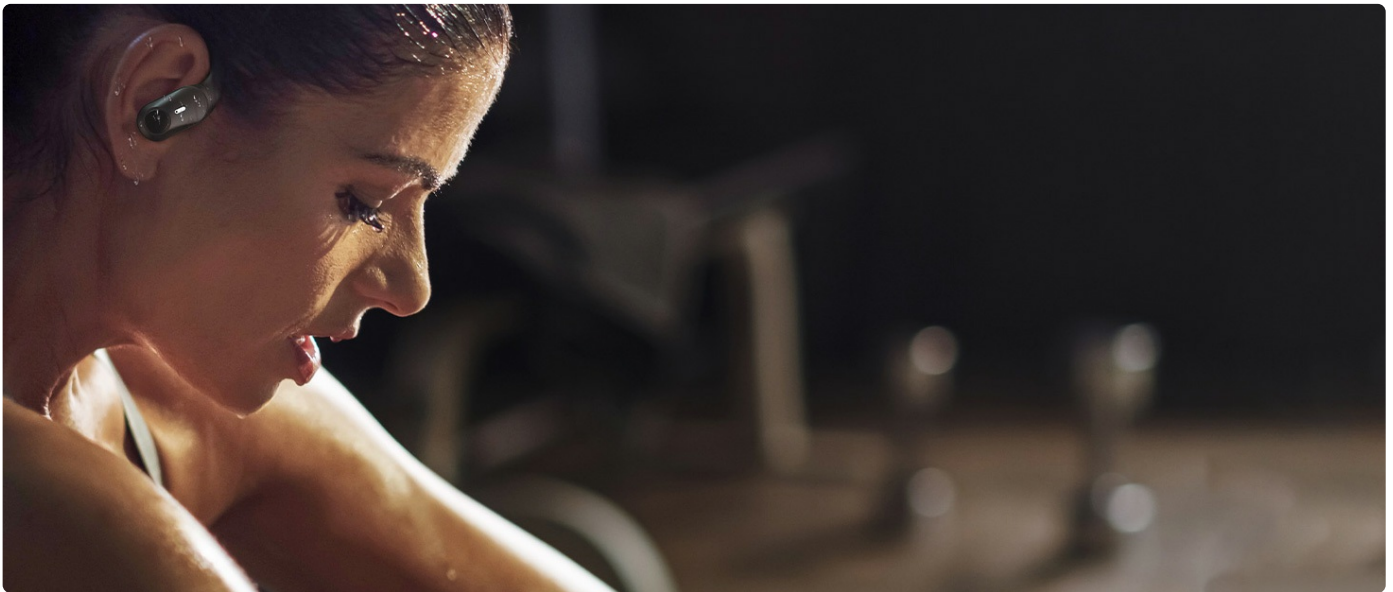

The AGKG123 T59 True Wireless Sports Headphones, showcasing their stylish appearance, LED digital display, and battery compartment.

WHAT'S IN THE BOX

- T59 Bluetooth Headphones (Left and Right Earbuds)
- Wireless Charging Case
- USB Type-C Charging Cable
- User Manual

- Multiple Sizes of Ear Tips (S, M, L)



Contents of the T59 Bluetooth Headphones package, including the earbuds and charging case.

PRODUCT OVERVIEW

Familiarize yourself with the components of your T59 headphones.

Display de Bateria LED Individual



The charging case features a dual LED digital display, showing the battery percentage of the case and the individual charging status of the left and right earbuds.



The T59 earbuds securely seated within their open charging case.


SETUP

Wearing the Earbuds

For optimal sound quality and comfort, select the ear tips that best fit your ears. The T59 earbuds are designed with flexible ear hooks to ensure a secure fit, especially during physical activity.

1. Choose the most suitable ear tips (S, M, L) for your ear canal.
2. Plug the earbuds along with the ear canal into your ears.
3. Rotate the ear hooks backward until they fit securely around your ears.

Over-ear Headphones Made for Movement

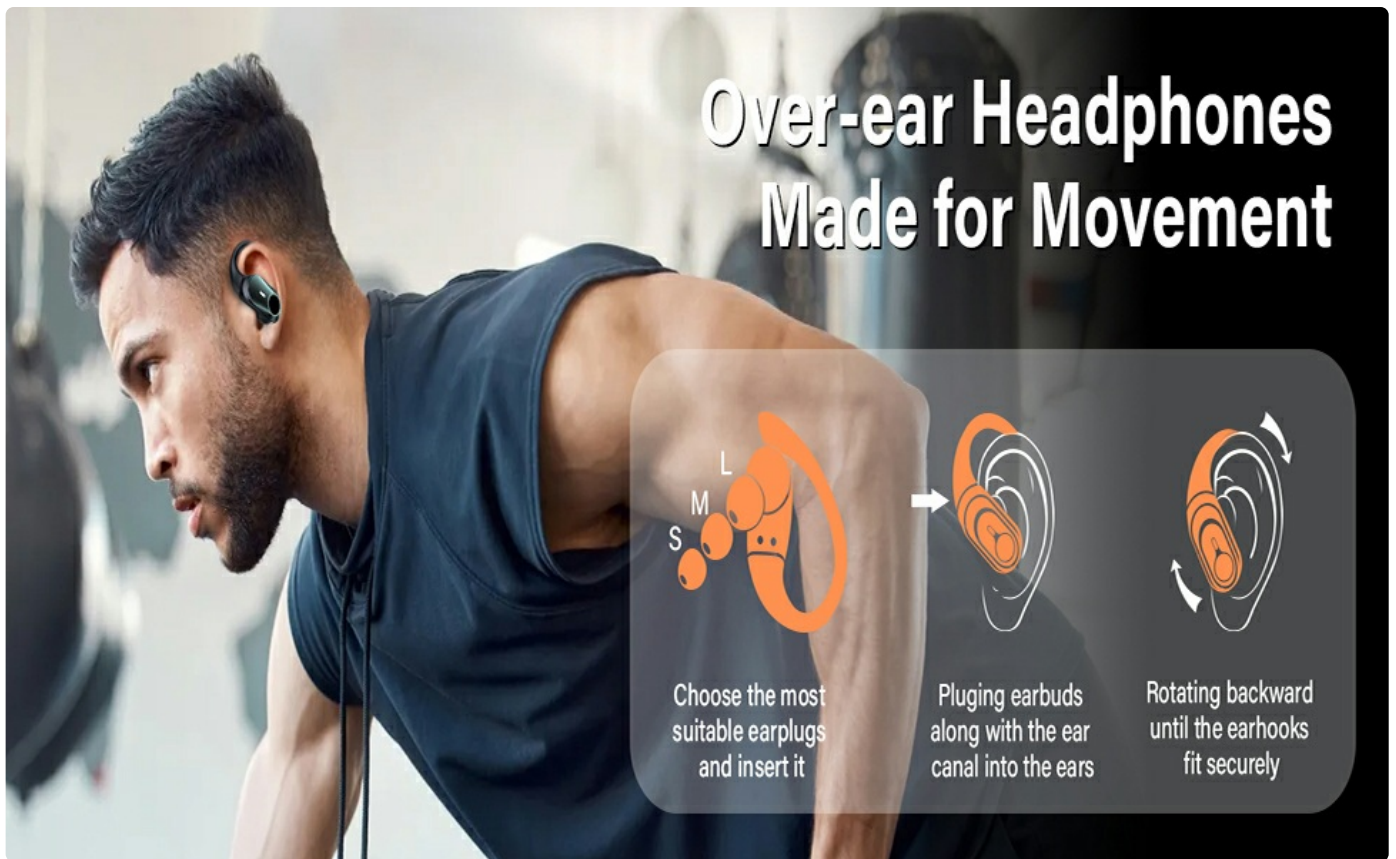

Visual guide on how to properly wear the T59 over-ear headphones for a secure and comfortable fit.

CHARGING

The T59 headphones offer both wired and wireless charging options for convenience.

Charging the Case and Earbuds

- **Wired Charging:** Connect the provided USB Type-C cable to the charging port on the case and to a power source.
- **Wireless Charging:** Place the charging case on a Qi-certified wireless charging pad (not included).
- The dual LED digital display on the case will show the real-time battery status of the case and each earbud.

Each earbud provides up to 9 hours of listening time on a single charge. The charging case extends the total playtime to approximately 70 hours.

Estojo sem fio e USB-C Chrging



The T59 charging case supports both wireless charging and wired charging via a USB-C cable.

Long Battery Life for All-Day Enjoyment



Illustration of the T59's long battery life, with 9 hours on a single earbud charge and up to 70 hours total with the charging case.

PAIRING (BLUETOOTH 5.0)

The T59 earbuds feature Bluetooth 5.0 for a fast and stable connection.

One-Step Pairing

1. Open the charging case. The earbuds will automatically power on.
2. On your device (smartphone, tablet, laptop, etc.), enable Bluetooth.
3. Search for "T59" in the list of available Bluetooth devices and select it to pair.
4. Once paired, the earbuds will automatically connect to your device when taken out of the charging case for future use.

The earbuds support both binaural mode for stereo sound and mono mode, allowing you to use either the left or right earbud independently.

Your browser does not support the video tag.

Official product video demonstrating the features of the T59 Headworn Bluetooth Earphones, including pairing, controls, and water resistance.

OPERATING THE EARBUDS

Button Controls

The T59 headphones feature intuitive one-button controls on each earbud for easy management of music and calls.

Play/Pause: Press once (Left or Right earbud).

Answer/End Call: Press once (Left or Right earbud).

Next Track: Quick press twice (Right earbud).

Previous Track: Quick press twice (Left earbud).

Volume Up: Hold and long press 2 seconds (Right earbud).

Volume Down: Hold and long press 2 seconds (Left earbud).

Activate Voice Assistant: Quick press thrice (Left or Right earbud).



Detailed diagram illustrating the various button controls on the T59 earbuds for music playback, calls, and voice assistant activation.

AUDIO QUALITY AND CALL PERFORMANCE

The T59 earbuds are equipped with 13mm double-layer diaphragm drivers, delivering high-fidelity sound with strong bass, clear mids, and bright treble. Built-in microphones utilize HD Voice Technology to isolate your voice from surrounding noise, ensuring clear conversations.

Áudio de alta fidelidade

Drivers de 11mm e otimizados para volume

O EQ ativo mantém o áudio claro e equilibrado em qualquer volume.

Chamada Cristalina

Os microfones trabalham juntos para rejeitar ruídos ao seu redor, mantendo sua voz clara a cada chamada.

An exploded view of the earbud's internal components, highlighting the 13mm drivers for high-fidelity audio and the microphone system for crystal-clear calls.

WATER RESISTANCE (IPX7)

The T59 headphones are IPX7 waterproof, making them resistant to sweat and rain. This design allows you to use them during workouts or in light rain conditions without concern.



IPX7 Rated
water Resistance
Fearless of rain and sweat

The T59 headphones are IPX7 rated, providing resistance against water and sweat, suitable for outdoor activities.



The T59 earbuds are designed to withstand sweat, making them ideal for intense workouts.

MAINTENANCE AND CARE

- Clean the earbuds and charging case regularly with a soft, dry cloth.
- Avoid using abrasive cleaners or solvents.
- Ensure the charging contacts on both the earbuds and the case are clean and dry before charging.
- Store the headphones in their charging case when not in use to protect them and maintain battery life.
- Do not expose the earbuds or case to extreme temperatures or direct sunlight for prolonged periods.

TROUBLESHOOTING

Problem	Solution
Earbuds not pairing/connecting.	<ul style="list-style-type: none">◦ Ensure earbuds are charged.◦ Place earbuds back in the case, close, then reopen to reset.◦ Turn off and on Bluetooth on your device.◦ Forget "T59" from your device's Bluetooth list and re-pair.
Only one earbud working.	<ul style="list-style-type: none">◦ Ensure both earbuds are charged.◦ Place both earbuds back in the case, close, then reopen.◦ Check if you are in mono mode; switch to binaural mode if available on your device.
Low volume or poor sound quality.	<ul style="list-style-type: none">◦ Adjust volume on both earbuds and your connected device.◦ Ensure ear tips are properly sealed in your ear canal.◦ Clean any debris from the earbud speakers.
Charging case not charging.	<ul style="list-style-type: none">◦ Check the USB-C cable and power adapter.◦ Ensure the wireless charging pad is Qi-certified and properly aligned.◦ Clean the charging port on the case.

SPECIFICATIONS

Feature	Detail
Model Name	T59
Brand	AGKG123
Connectivity Technology	Wireless (Bluetooth 5.0)
Wireless Communication Technology	Bluetooth
Bluetooth Range	10 Meters (30 feet)
Earbud Playtime (Single Charge)	Up to 9 hours
Total Playtime with Charging Case	Up to 70 hours
Charging Time (Earbuds & Case)	Approximately 2 hours
Water Resistance Level	IPX7 Waterproof
Audio Driver Size	13 Millimeters
Frequency Range	20 Hz - 20,000 Hz
Impedance	16 Ohm
Control Type	Touch / Button Control
Headphones Jack	USB Type-C (for charging)
Material	Plastic
Item Weight	5.9 ounces

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided with your purchase or visit the official AGKG123 website. Keep your proof of purchase for any warranty claims.

The product includes a user manual and a charging cable. For additional accessories or replacement parts, please contact customer support.