

[Manuals.plus](#) /

› [Huhomco](#) /

› Pressure Washer Cordless Battery Powered 1450PSI with 2×4.0Ah Battery, Battery Operated Pressure Washer, Portable Power Washer Handheld for Car Cleaning

Huhomco 6005

Huhomco Cordless Pressure Washer User Manual

Model: 6005

INTRODUCTION

Thank you for choosing the Huhomco Cordless Pressure Washer. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new pressure washer. Please read this manual thoroughly before first use and keep it for future reference.

The Huhomco Cordless Pressure Washer is designed for versatile cleaning tasks, offering powerful performance without the need for a continuous power outlet. Its portable design and multiple water sourcing options make it ideal for various applications, from car cleaning to patio maintenance.



Figure 1: Huhomco Cordless Pressure Washer and included accessories.

WHAT'S INCLUDED

Your Huhomco Cordless Pressure Washer package includes the following components:

- Cordless Pressure Washer Unit
- 2 x 4000mAh Lithium-Ion Batteries
- Fast Charger
- Extension Rod
- 180° Rotating Nozzle
- 0° Spray Nozzle
- 6-in-1 Nozzle
- Foam Pot Nozzle (Soap Bottle)
- Stop Valve
- Transition Connector

- Water Tap Connector
- 5-meter Hose (196.85 inches)
- Optimized Water Filter
- Storage Bag
- User Manual (this document)

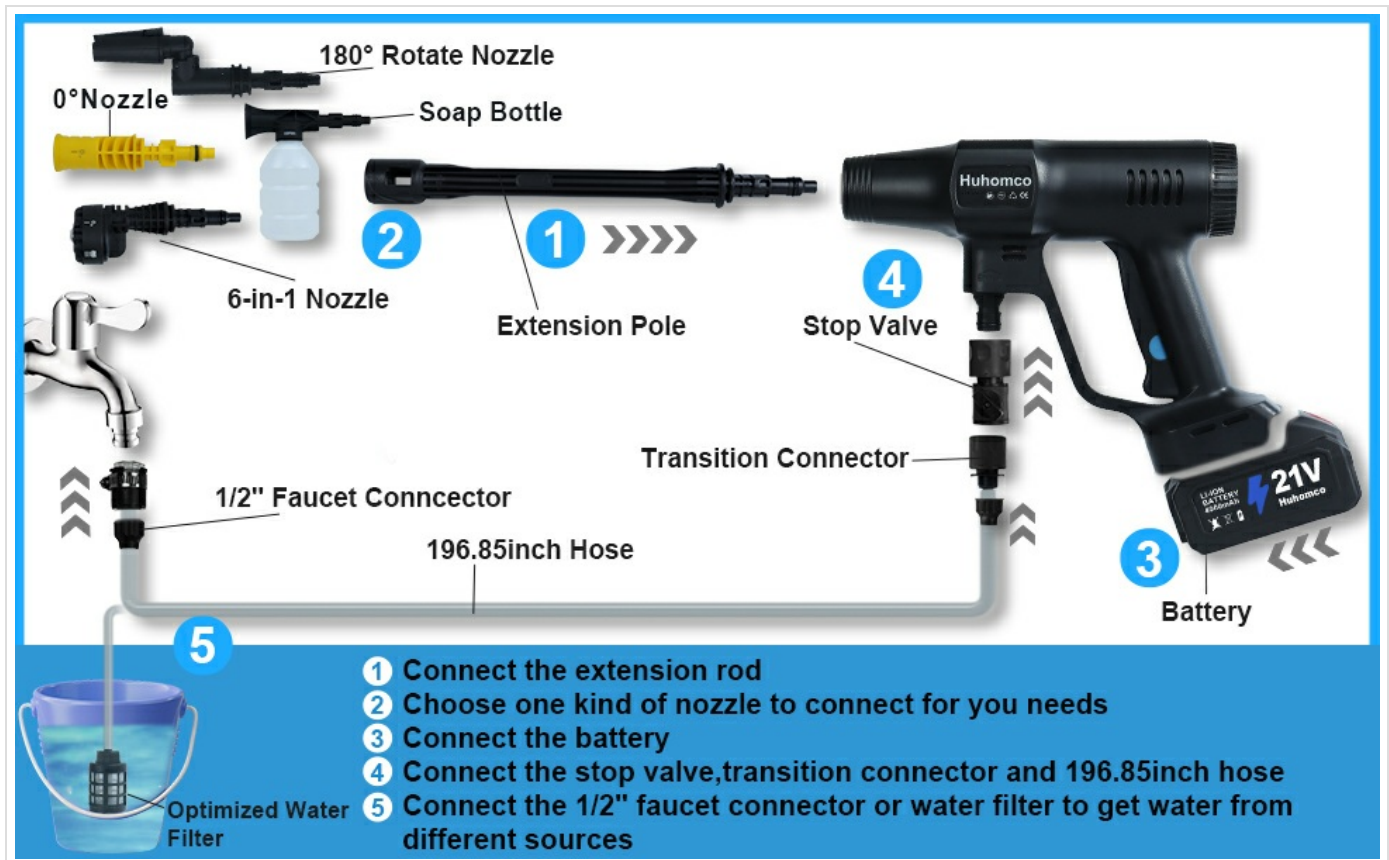


Figure 2: All components included in the Huhomco Cordless Pressure Washer kit.

Your browser does not support the video tag.

Video 1: Overview of the accessories included with the Huhomco cordless pressure washer.

SETUP

Follow these steps to set up your pressure washer for operation:

1. Assemble the Unit:

- Connect the extension rod to the main pressure washer unit.
- Choose your desired nozzle (e.g., 6-in-1 nozzle, 0° spray nozzle, 180° rotating nozzle, or foam pot nozzle) and attach it to the end of the extension rod.

2. Install the Battery:

- Ensure the battery is fully charged. Insert one of the 4000mAh lithium-ion batteries into the battery slot at the base of the pressure washer handle until it clicks securely into place.

3. Connect Water Source: Your pressure washer supports two methods for water intake:

◦ Method 1: Faucet Connection

Connect the provided 5-meter hose to the stop valve, then to the transition connector, and finally to the pressure washer unit. Attach the water tap connector to the other end of the hose and connect it to a 1/2" faucet. *Note: This connection is specifically designed for the provided hose and 1/2" faucets, not standard garden hoses.*

- **Method 2: Self-Priming from a Container**

Connect the 5-meter hose to the stop valve, then to the transition connector, and finally to the pressure washer unit. Attach the optimized water filter to the other end of the hose. Place the filter end into a bucket, lake, or swimming pool to draw water. Ensure the filter is fully submerged.



Figure 3: Step-by-step guide for assembling the pressure washer and connecting to a water source.

Two Ways of Drawing Water



Use with Water Tap Connector (Needs to use our 5m hose provided, can only connect to 1/2" faucet, NOT support connecting to garden hose)



Use with Optimized Water Filter



Figure 4: Visual representation of connecting to a water tap and using the optimized water filter for self-priming.

Your browser does not support the video tag.

Video 2: Demonstration of how to easily install and set up the Huhomco cordless power washer.

OPERATING INSTRUCTIONS

Once assembled and connected to a water source, you can begin operating your pressure washer:

1. **Prime the Pump (if using self-priming):** Before starting, ensure the hose and pump are filled with water. Squeeze the trigger for a few seconds to allow water to flow through and expel any air.
2. **Select Pressure Setting:** The unit features 3 gear precision pressure control. Use the buttons on the top of the unit to select the desired pressure:
 - **Gear 1 (0-30 BAR):** Gentle cleaning, ideal for watering plants or rinsing delicate surfaces.
 - **Gear 2 (30-50 BAR):** Medium pressure for daily household cleaning tasks like scrubbing tiles or countertops.
 - **Gear 3 (50-100 BAR / 1450 PSI Max):** High pressure for tough jobs such as removing grease from driveways or

cleaning vehicles.

3. Choose the Right Nozzle:

- **0° Nozzle:** Delivers a powerful, focused stream for blasting stubborn dirt and grime.
- **180° Rotating Nozzle:** Allows adjustment of the spray angle for hard-to-reach areas.
- **6-in-1 Nozzle:** Offers multiple spray patterns (0°, 15°, 25°, 40°, Shower, Foam) for versatile cleaning. Rotate the nozzle head to select the desired pattern.
- **Foam Pot Nozzle:** Fill with appropriate cleaning solution to generate soapy foam for enhanced cleaning efficiency.

4. **Begin Cleaning:** Aim the nozzle at the surface to be cleaned and press the trigger. Maintain a safe distance from the surface to avoid damage, especially with higher pressure settings.



Figure 5: Pressure control settings on the unit.



Figure 6: The four distinct nozzles for various cleaning needs.

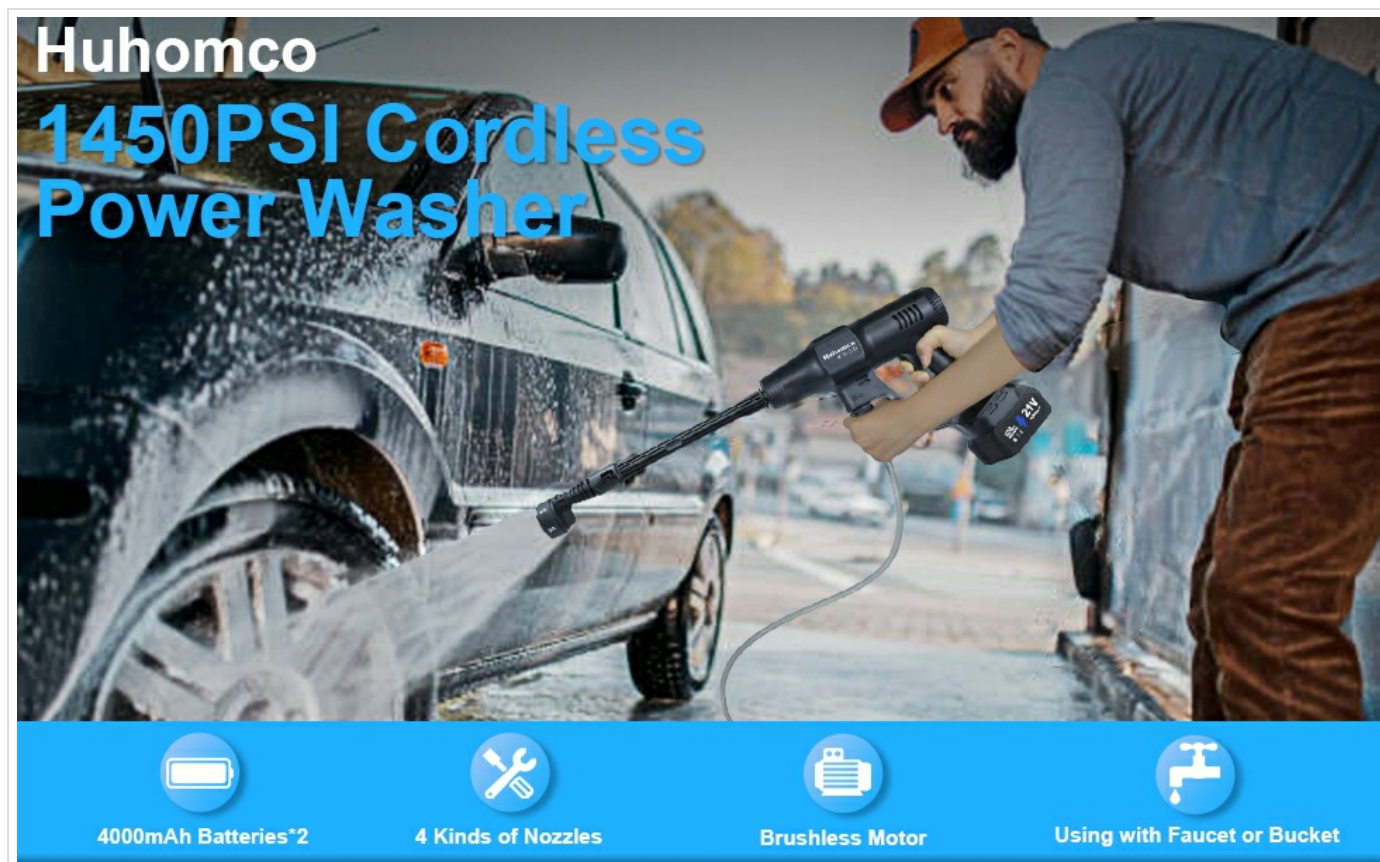


Figure 7: The 6-in-1 nozzle provides multiple spray options.

Your browser does not support the video tag.

Video 3: Demonstration of different nozzles for various washing tasks.

Proper maintenance ensures the longevity and optimal performance of your pressure washer:

- **Cleaning:** After each use, rinse the unit and accessories with clean water to remove any detergent or debris. Wipe down the exterior with a damp cloth.
- **Storage:** Store the pressure washer and its accessories in the provided storage bag in a dry, cool place, away from direct sunlight and freezing temperatures. Ensure all water is drained from the unit and hose before storage to prevent damage.
- **Battery Care:** Store batteries in a cool, dry place. For long-term storage, charge batteries to about 50% capacity. Avoid fully discharging batteries before recharging.
- **Filter Cleaning:** Regularly inspect and clean the optimized water filter to prevent clogging and ensure consistent water flow.

TROUBLESHOOTING

If you encounter issues with your pressure washer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No water flow or low pressure	◦ Insufficient water supply. ◦ Clogged water filter. ◦ Air in the pump/hose (not primed). ◦ Hose kinked or blocked.	◦ Ensure adequate water source. ◦ Clean the water filter. ◦ Prime the pump by squeezing the trigger until steady water flow. ◦ Straighten the hose and check for obstructions.
Unit stops unexpectedly during operation	◦ Battery is low or depleted. ◦ Battery connection is loose. ◦ Overheating (unlikely with normal use). ◦ Battery casing damage (as reported by some users).	◦ Recharge or replace the battery. ◦ Ensure battery is securely clicked into place. ◦ Allow unit to cool down. ◦ If battery casing is cracked, contact customer support for replacement.
Battery not charging	◦ Charger not properly connected. ◦ Faulty charger or battery.	◦ Check all connections. ◦ Contact customer support for assistance.

SPECIFICATIONS

- **Brand:** Huhomco
- **Model:** 6005
- **Power Source:** Battery Powered
- **Maximum Pressure:** 1450 PSI / 100 Bar
- **Motor:** 300W Brushless Motor
- **Battery:** 2 x 4000mAh Lithium Ion (21V)
- **Hose Length:** 5 Meters (196.85 inches)
- **Item Weight:** 2 Pounds
- **Product Dimensions:** 5"L x 5"W x 5"H
- **Color:** Black-A

WARRANTY AND SUPPORT

For warranty information, technical support, or replacement parts, please contact Huhomco customer service directly. Refer to the contact information provided on the product packaging or the official Huhomco website.

Please retain your proof of purchase for any warranty claims.

© 2024 Huhomco. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I reset the Huhomco 6005 Cordless Pressure Washer, and why is it not spraying even though the motor is running?

Based on the manual for the Huhomco 6005, there is no dedicated "reset" button. If your motor is running but the unit is not spraying, the most common cause is air trapped in the...

[Read full answer](#)