

[Manuals.plus](#) /

› [TopMade](#) /

› TopMade Wireless Charger Desk Organizer with Digital Thermometer and Clock (Model HB20B)

TopMade HB20B

TopMade Wireless Charger Desk Organizer with Digital Thermometer and Clock

Model: HB20B | Brand: TopMade

PRODUCT OVERVIEW

The TopMade Wireless Charger Desk Organizer is a multi-functional device designed to streamline your workspace. It combines a pen holder, a fast wireless charging station, a digital thermometer, an indoor hygrometer, and a clock into a single, compact unit. This organizer helps maintain a tidy desk while providing essential information and charging capabilities.



Image: The TopMade Wireless Charger Desk Organizer in black, showcasing its various features including the pen holder, digital display, and wireless charging pad.

SETUP INSTRUCTIONS

- 1. Install Battery:** Locate the battery compartment, typically on the underside or back of the unit. Insert one AAA battery (included) ensuring correct polarity. This battery powers the clock, thermometer, and hygrometer display.
- 2. Connect Power:** Use the provided Type-C to C cable to connect the organizer to a suitable power adapter (not included). The wireless charging function requires a power connection.
- 3. Set Time and Date:**
 - Press the "MODE" button to cycle through settings (Time, Year, Month, Day).
 - Use the "ADJ" button to adjust the values for each setting.
 - Press "MODE" again to confirm each setting and move to the next.
- 4. Set Temperature Unit:** Press the "C/F" button to switch between Celsius (°C) and Fahrenheit (°F) display for the thermometer.

Your browser does not support the video tag.

Video: Demonstrates the setup process, including battery installation and setting the time, date, and temperature unit on the TopMade Wireless Charger Desk Organizer.



Image: Detailed view of the organizer's digital display and its labeled components, including the clock, thermometer, and humidity gauge.

OPERATING INSTRUCTIONS

Wireless Charging

- **Placement:** Place your Qi-compatible smartphone on the designated wireless charging pad. Ensure the phone is centered for optimal charging.
- **Case Compatibility:** The charger is designed to work with phone cases up to 5mm (0.2 inches) thick. For best performance, avoid cases with metal, magnets, or credit cards, as these can interfere with charging.
- **Charging Indicator:** A small LED indicator on the charging pad will illuminate to confirm that your device is charging.

Case-Friendly



Magnets



Popsocket



Metal Cases



Credit Cards

$\leq 5\text{mm}(0.2'')$



Image: Visual guide for case-friendly charging, highlighting compatible case thickness and items to avoid for effective wireless charging.

Pen Holder and Storage

Utilize the integrated pen holder compartment to store pens, pencils, scissors, remote controls, and other small office supplies, keeping your desk organized and clutter-free.

Before



After



Image: A "Before and After" scene demonstrating how the organizer helps declutter a desk by consolidating various items.

Digital Display (Clock, Thermometer, Hygrometer)

- The digital display continuously shows the current time, indoor temperature, and humidity levels.
- The temperature and humidity readings provide real-time environmental monitoring.
- The display also features a "smiley" or "sad" face indicator based on humidity levels, offering a quick visual cue for indoor comfort.

Image: Detailed explanation of the digital display, including the time, temperature, humidity, and the comfort indicator (smiley/sad face).

MAINTENANCE

- **Cleaning:** The organizer is made of PU leather and velvet lining, which are easy to clean. Wipe the exterior with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals.
- **Battery Replacement:** When the digital display dims or stops functioning, replace the AAA battery in the compartment.
- **General Care:** Keep the device away from excessive moisture and direct sunlight to prolong its lifespan.

WIDE COMPATIBILITY

iphone



iPhone 16/15/14/13/12/11/X/SE/8 Series

Galaxy



S25/24/23/22/21/20/10/9/8 Series



Pixel 9/8/7/6/5/4/3 Series



Note20/10/9/8/7/6 Series



Galaxy Z Flip/Fold Series



Nexus 6/5/4 Series

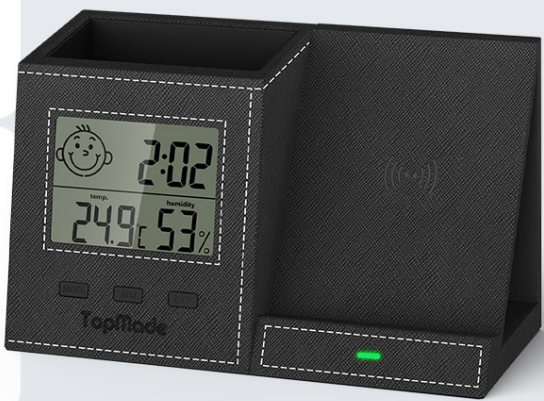


Image: Close-up view of the organizer's materials, including PU leather and velvet lining, which contribute to its durability and ease of cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device not charging wirelessly.	- Phone not properly aligned on charging pad. - Phone case is too thick or contains metal/magnets. - Power adapter not connected or insufficient power. - Device is not Qi-compatible.	- Re-position phone to ensure proper contact. - Remove phone case or use a case less than 5mm thick without metal. - Ensure the Type-C cable is securely connected to a working power adapter. - Verify your phone supports Qi wireless charging.
Digital display is blank or dim.	- AAA battery is low or depleted. - Battery inserted incorrectly.	- Replace the AAA battery. - Check battery polarity and re-insert correctly.
Time/Date/Temperature incorrect.	Settings need adjustment.	Refer to the "Set Time and Date" and "Set Temperature Unit" steps in the Setup section.

SPECIFICATIONS

Feature	Detail
Model Number	HB20B
Material	Faux Leather
Product Dimensions	4.13"D x 6.77"W x 4.37"H (10.5cm D x 17.2cm W x 11.1cm H)
Item Weight	15.5 ounces (0.44 kg)
Number of Compartments	2 (Pen Holder, Wireless Charging Stand)
Power Input	Type-C (cable included, adapter not included)

Feature	Detail
Wireless Charging Output	15W Fast Wireless Charging (compatible with Qi-enabled devices)
Display Functions	Digital Clock, Thermometer (°C/°F), Humidity Gauge
Display Battery	1 AAA battery (included)
Case Compatibility	Works with phone cases up to 5mm thick (avoid metal/magnets)



Image: Diagram illustrating the precise dimensions of the TopMade Wireless Charger Desk Organizer.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided in the packaging or visit the official TopMade website. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question