

Timex TW5M627009J

Timex Digital 33mm Watch

Model: TW5M627009J - Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Timex Digital 33mm Watch (Model TW5M627009J). Please read these instructions carefully to ensure proper use and to maximize the lifespan of your watch.

WATCH OVERVIEW

Your Timex Digital 33mm Watch features a clear digital display and multiple functions controlled by four buttons. Familiarize yourself with the button layout:

- **Button A (Top Left):** INDIGLO® Night-Light
- **Button B (Bottom Left):** MODE / Function Select
- **Button C (Top Right):** START / STOP / Increment Value
- **Button D (Bottom Right):** SET / RESET / Adjust





Image: Side view of the watch, highlighting the four control buttons (A, B, C, D) on the left and right sides of the watch case.



Image: Front view of the Timex Digital 33mm Watch, displaying the digital time and date on its face.

SETUP

Setting Time and Date

1. From the normal time display, press and hold **Button D (SET)** for approximately 3 seconds until the seconds begin to flash. This indicates you are in setting mode.
2. Press **Button B (MODE)** repeatedly to cycle through the settings: Seconds > Hours > Minutes > Year > Month > Day > 12/24-hour format. The current setting will flash.
3. When the desired value is flashing, press **Button C (START/STOP)** to increment the value. For seconds, pressing Button C will reset them to zero. For hours, minutes, year, month, and day, pressing Button C will advance the value.
4. Once all settings are adjusted, press **Button D (SET)** to exit the setting mode and return to the normal time display.

12/24-Hour Format

While in time setting mode (seconds flashing), press **Button B (MODE)** until the 12H or 24H indicator flashes. Press **Button C (START/STOP)** to toggle between 12-hour (with AM/PM indicator) and 24-hour (military) format. Press **Button D (SET)** to confirm and exit.

OPERATING FUNCTIONS

INDIGLO® Night-Light

Press **Button A (INDIGLO)** to illuminate the watch display for easy viewing in low-light conditions. The light will remain on for a few seconds.

Stopwatch Function

1. From the normal time display, press **Button B (MODE)** once to enter stopwatch mode. The display will show '00:00:00'.
2. Press **Button C (START/STOP)** to start the stopwatch.
3. Press **Button C (START/STOP)** again to pause the stopwatch.
4. Press **Button D (RESET)** to reset the stopwatch to zero while it is paused.
5. Press **Button B (MODE)** to return to the normal time display.

Alarm Setting

1. From the normal time display, press **Button B (MODE)** twice to enter alarm setting mode. The alarm time will be displayed, and the hour digits will flash.
2. Press **Button C (START/STOP)** to adjust the hour.
3. Press **Button B (MODE)** to move to the minute setting. The minute digits will flash.
4. Press **Button C (START/STOP)** to adjust the minutes.
5. Press **Button B (MODE)** again to toggle the alarm ON/OFF. An alarm icon will appear when the alarm is active.
6. Press **Button D (SET)** to confirm the alarm setting and exit.

Hourly Chime

While in alarm setting mode, after setting the alarm time, press **Button B (MODE)** one more time. You can then press **Button C (START/STOP)** to toggle the hourly chime ON/OFF. An icon (often a bell or chime symbol) will indicate if the hourly chime is active. Press **Button D (SET)** to exit.

Second Time Zone (Dual Time)

1. From the normal time display, press **Button B (MODE)** three times to enter dual time mode.
2. Press and hold **Button D (SET)** until the hour digits flash.
3. Press **Button C (START/STOP)** to adjust the hour.
4. Press **Button B (MODE)** to move to the minute setting.
5. Press **Button C (START/STOP)** to adjust the minutes.
6. Press **Button D (SET)** to confirm and exit.
7. To view the second time zone, simply cycle to dual time mode using **Button B (MODE)**.

CARE AND MAINTENANCE

Water Resistance

Your Timex Digital 33mm Watch is water resistant up to 50 meters (164 feet). This means it is suitable for showering, swimming in shallow water, and general water activities. It is **not** suitable for diving or high-

impact water sports. Do not press any buttons while the watch is submerged in water.

Battery Replacement

The watch uses one Lithium Metal battery, model CR2032. When the display dims or the INDIGLO® light weakens, it may be time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and maintain water resistance.



Image: Close-up of the watch's stainless steel back, indicating 'WATER RESISTANT 50 METERS' and 'CR2032 BATTERY'.

Cleaning

Clean your watch regularly with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the watch case or strap.

TROUBLESHOOTING

- Display is blank or dim:** The battery may need replacement. Refer to the 'Battery Replacement' section.
- Time is incorrect:** Re-set the time and date following the 'Setting Time and Date' instructions. Ensure the 12/24-hour format is correctly selected.
- Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable, though this model typically does not have one). If issues persist, a battery replacement might resolve it, or contact customer support.
- Water inside the watch:** If moisture appears inside the watch, have it inspected by a professional immediately to prevent further damage.

SPECIFICATIONS

Feature	Detail
Model Number	TW5M627009J
Case Size	33mm
Case Material	Black Resin
Band Material	Black Resin
Lens Material	Acrylic
Display Type	Digital
Water Resistance	50 meters (164 feet)
Battery Type	CR2032 Lithium Metal (included)
Functions	Time, Date, Day, Stopwatch, Alarm, Hourly Chime, Second Time Zone, INDIGLO® Night-Light

WARRANTY AND SUPPORT

For warranty information, detailed manuals, or further assistance, please visit the official Timex website or contact Timex customer support. Keep your purchase receipt as proof of purchase for warranty claims.

Official Timex Website: www.timex.com

