

Timex TW5M613009J

Timex 33mm Unisex Digital Watch User Manual

Model: TW5M613009J

INTRODUCTION

This manual provides comprehensive instructions for the operation, maintenance, and troubleshooting of your new Timex 33mm Unisex Digital Watch, Model TW5M613009J. Please read this manual carefully to ensure proper use and to maximize the lifespan of your timepiece.





Figure 1: Front view of the Timex 33mm Unisex Digital Watch. This image shows the watch face with digital display, the silver-tone resin case, and the black resin strap. The watch features multiple buttons on the sides for various functions.

SETUP

1. Initial Power On and Time Setting

Your Timex digital watch comes with a pre-installed lithium metal battery. Upon first use, or after a battery replacement, you may need to set the time and date.

1. Press and hold the **MODE** button (typically located on the bottom left) until the time display begins to flash. This indicates you are in setting mode.
2. Press the **SET** button (typically top left) to cycle through the settings: hours, minutes, year, month, day.
3. Use the **START/STOP** button (typically top right) to adjust the flashing value up or down.
4. Once all settings are correct, press the **MODE** button again to exit the setting mode and save your changes.

2. Adjusting the Strap

The watch features a black resin strap with a buckle clasp, designed to fit wrist circumferences from 142mm to 205mm. To adjust the fit:

- Unfasten the buckle.
- Slide the strap through the buckle until you find a comfortable and secure fit on your wrist.

- Fasten the buckle securely. Ensure the watch is snug but not overly tight, allowing for proper circulation.



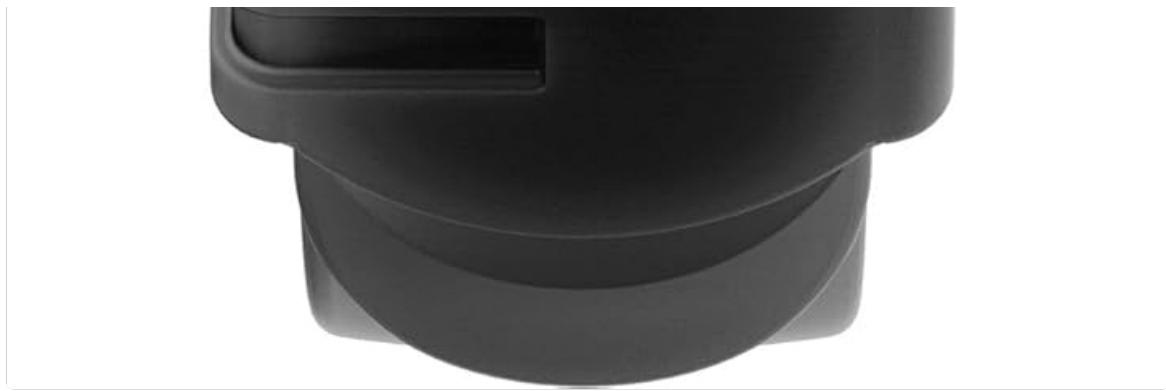


Figure 2: Detail of the watch strap and buckle. This image highlights the durable resin strap and the metal buckle, illustrating how the strap can be adjusted for various wrist sizes.

OPERATING INSTRUCTIONS

1. Basic Time and Date Display

The watch primarily displays the time and date in digital format. The display includes hours, minutes, seconds, day of the week, and date.

2. Using the Alarm Function

To set and activate the alarm:

1. From the main time display, press the **MODE** button repeatedly until the alarm setting screen appears (often indicated by an alarm icon).
2. Use the **SET** button to select the hour or minute to adjust.
3. Use the **START/STOP** button to change the value.
4. Press **MODE** to confirm and exit.
5. To turn the alarm on or off, press the **START/STOP** button while on the alarm display screen. An alarm icon will appear when activated.

3. Using the Countdown Timer

The watch includes a countdown timer feature:

1. Press the **MODE** button repeatedly until the countdown timer screen is displayed.
2. Press **SET** to select the hours, minutes, or seconds to set.
3. Use **START/STOP** to adjust the time.
4. Once the desired countdown time is set, press **START/STOP** to begin the countdown.
5. Press **START/STOP** again to pause/resume the countdown.
6. To reset the timer, press the **SET** button while the timer is paused.

4. Indiglo Night-Light

The watch features an Indiglo night-light for illumination in low-light conditions. Press the **INDIGLO** button (typically on the top right or a dedicated button) to activate the backlight. It will remain lit for a few seconds.

MAINTENANCE

1. Cleaning Your Watch

To maintain the appearance of your watch:

- Wipe the watch case and strap with a soft, damp cloth.
- Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the resin materials and acrylic lens.
- For stubborn dirt on the strap, a mild soap solution can be used, followed by thorough rinsing with clean water and drying.

2. Water Resistance

This watch is water resistant to 50 meters (WR50M). This means it is suitable for short periods of recreational swimming. **It is not suitable for diving, snorkeling, or high-impact water sports.** Do not press any buttons while the watch is submerged in water, as this can compromise the water resistance seal.



Figure 3: Side profile of the Timex watch. This image illustrates the watch's slim design and the placement of the control buttons on the side of the case.

3. Battery Replacement

The watch uses one Lithium metal battery. When the display dims or functions become erratic, it may be time to replace the battery. It is recommended to have battery replacement performed by a qualified watch technician to ensure the water

resistance seal is properly maintained.



Figure 4: Rear view of the Timex watch case. This image shows the stainless steel case back, which is secured by four screws, and indicates the water resistance rating of 50 meters.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low or dead battery.	Replace the battery. Consult a professional watch technician.
Time/Date is incorrect.	Time not set correctly after battery change or accidental reset.	Refer to the "Initial Power On and Time Setting" section to reset the time and date.
Alarm does not sound.	Alarm is not activated or set incorrectly.	Ensure the alarm is turned ON and the alarm time is set correctly. Check volume settings if applicable (though this model is basic digital).
Buttons are unresponsive.	Watch may be in a locked mode or experiencing a temporary software glitch.	Try pressing all buttons firmly. If unresponsive, a battery removal/reinsertion (by a professional) might be necessary for a hard reset.

SPECIFICATIONS

Feature	Detail
Model Number	TW5M613009J
Case Material	Resin
Case Diameter	33 mm
Strap Material	Resin
Strap Fit	142 mm to 205 mm wrist circumference
Lens Material	Acrylic
Water Resistance	50 meters (WR50M)
Battery Type	1 Lithium Metal (included)
Functions	Digital Time/Date Display, Alarm, Countdown Timer, Indiglo Night-Light
Manufacturer	Timex
ASIN	B0CYCMSTMV

WARRANTY AND SUPPORT

Timex watches are manufactured to high standards and are backed by a limited warranty. For specific warranty details, including coverage period and terms, please refer to the warranty card included with your purchase or visit the official Timex website.

For technical support, service, or to inquire about spare parts availability, please contact Timex Customer Service. Contact information can typically be found on the Timex official website or on the packaging materials.

- Official Website:** www.timex.com (Please check for regional websites for local support)
- Spare Parts Availability:** Information unavailable at the time of this manual's publication.

© 2025 Timex. All rights reserved. This manual is for informational purposes only.