

Timex TW5M61900

Timex Sport Digital Watch TW5M61900 User Manual

Model: TW5M61900

INTRODUCTION

This manual provides instructions for the Timex Sport Digital Watch TW5M61900. This watch features a digital display, daily alarm, dual time zone settings, a 24-hour stopwatch, and the INDIGLO® backlight. It is water-resistant up to 50 meters.



Front view of the Timex Sport Digital Watch TW5M61900. The digital display shows the time, day of the week, and date. Buttons for various functions are visible around the bezel.

Button Functions

The watch features multiple buttons for operation. Refer to the image below for button identification.



Side view of the watch, illustrating the placement of control buttons.

- **MODE Button:** Cycles through display modes (Time, Alarm, Stopwatch).
- **INDIGLO Button:** Activates the INDIGLO® backlight.
- **ST/STP/ALM Button:** Starts/stops stopwatch, sets alarm.
- **RESET/NEXT Button:** Resets stopwatch, advances settings during setup.

Setting Time and Date

1. Press the **MODE** button repeatedly until the time setting mode is displayed (usually indicated by flashing digits).
2. Use the **RESET/NEXT** button to advance the flashing digit (hours, minutes, AM/PM).
3. Use the **ST/STP/ALM** button to change the value of the flashing digit.
4. Continue this process for setting the month, date, and day of the week.
5. Press the **MODE** button to exit the setting mode.

OPERATING INSTRUCTIONS

Using the INDIGLO® Backlight

Press the **INDIGLO** button to illuminate the watch face for visibility in low-light conditions. The backlight will remain active for a few seconds.

Setting and Using the Alarm

1. Press the **MODE** button until the alarm display appears.
2. Press and hold the **ST/STP/ALM** button until the alarm time digits begin to flash.
3. Use the **RESET/NEXT** button to select the hour or minute digit.
4. Use the **ST/STP/ALM** button to adjust the selected digit's value.
5. Press the **MODE** button to save the alarm time and exit.
6. To activate/deactivate the alarm, press the **ST/STP/ALM** button once while in alarm mode. An alarm icon will indicate activation.

Using the 24-Hour Stopwatch

1. Press the **MODE** button until the stopwatch display appears (usually showing 00:00:00).
2. Press the **ST/STP/ALM** button to start the stopwatch.
3. Press the **ST/STP/ALM** button again to pause the stopwatch.
4. To resume, press **ST/STP/ALM**.
5. To reset the stopwatch to zero, press the **RESET/NEXT** button while the stopwatch is paused.

MAINTENANCE

Water Resistance

This watch is water-resistant to 30 meters (WR30M). This means it is suitable for splashes or brief immersion in water. It is **not** suitable for swimming or bathing. Do not press any buttons while the watch is wet or submerged.





Rear view of the watch, displaying the stainless steel back case with water resistance rating.

Battery Replacement

The watch uses one Lithium metal battery (CR2032 cell). Battery replacement should be performed by a qualified technician to ensure water resistance is maintained. Attempting to replace the battery yourself may void the warranty and compromise the watch's water resistance.



Angled rear view, highlighting the battery type and water resistance marking.

Cleaning

Clean the watch case and strap with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the watch's finish.

TROUBLESHOOTING

- **Watch display is blank:** The battery may be depleted. Replace the battery (refer to Maintenance section).
- **Time is incorrect:** Re-set the time and date (refer to Setup section). Ensure AM/PM is correctly set.
- **INDIGLO® backlight not working:** Check battery level. If the battery is low, the backlight may dim or stop functioning before the main display.
- **Water inside the watch:** Immediately cease use and contact customer support. Water intrusion can cause

permanent damage.

SPECIFICATIONS

| | |
|---------------------|---|
| Model Number | TW5M61900 |
| Case Diameter | 50 mm |
| Case Material | Resin |
| Strap Material | Resin |
| Water Resistance | 30 meters (WR30M) - Suitable for splashes, brief immersion. Not for swimming/bathing. |
| Display Type | Digital |
| Backlight | INDIGLO® |
| Battery Type | 1 Lithium metal (CR2032) |
| Wrist Circumference | 150 mm to 205 mm |

WARRANTY INFORMATION

Specific warranty details are typically provided with the product packaging or on the manufacturer's official website. Generally, Timex watches come with a limited warranty covering manufacturing defects. Please retain your proof of purchase for warranty claims.

For detailed warranty terms and conditions, please visit the official Timex website or contact their customer service.

CUSTOMER SUPPORT

For further assistance, technical support, or service inquiries, please visit the official Timex website or refer to the contact information provided in your product packaging.

Official Timex Website: www.timex.com

