



Manuals.plus /

› Lifelong /

› Lifelong 2.5L Air Fryer LLHF26 User Manual

## Lifelong LLHF26

# Lifelong 2.5L Air Fryer LLHF26 User Manual

Model: LLHF26

## 1. INTRODUCTION

Thank you for choosing the Lifelong 2.5L Air Fryer, Model LLHF26. This appliance is designed to provide a healthier way to prepare your favorite fried foods by using hot air circulation. Please read this manual thoroughly before operating the appliance and retain it for future reference. Proper use and maintenance will ensure optimal performance and extend the lifespan of your air fryer.

## 2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury.

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse the cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to 'off', then remove the plug from the wall outlet.
- Do not use the appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- Do not block any ventilation openings.

## 3. PRODUCT OVERVIEW

### 3.1 Components

The Lifelong 2.5L Air Fryer LLHF26 includes the following components:

- 1 N Air Fryer Unit
- 1 N User Manual
- 1 N Warranty Card

### 3.2 Key Features

- **Oil-Free Frying Innovation:** Utilizes Hot Air Circulation Technology for cooking with significantly less oil.
- **Perfectly Sized Capacity:** 2.5 litres capacity, suitable for 1-2 people.
- **User-Friendly Operation:** Features a manual control panel with a constant temperature setting of 180 degrees Celsius and a timer from 1 to 60 minutes.
- **Effortless Clean-Up:** Equipped with a non-stick air fryer basket for easy cleaning.
- **Versatile Cooking Options:** Capable of baking, grilling, roasting, reheating, and frying.



Image: The Lifelong 2.5L Air Fryer LLHF26, black with gold accents, shown with a basket of french fries.

لبلان

**2.5 Litres Capacity**



Image: The Lifelong 2.5L Air Fryer on a wooden table, with samosas in its basket, illustrating its 2.5-liter capacity.

**LifeLung**

## Manual Control Panel



**Cooking time**  
1 to 60 mins



**200°C Contant**  
**Temperature**



Image: A close-up of a hand adjusting the timer knob on the air fryer's manual control panel.

## 4. SETUP AND FIRST USE

1. **Unpack:** Carefully remove the air fryer and all its components from the packaging. Remove any stickers or labels.
2. **Clean:** Wash the air fryer basket and pan with warm soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the appliance with a damp cloth.
3. **Placement:** Place the air fryer on a stable, heat-resistant, and level surface. Ensure there is adequate space (at least 10 cm) around the appliance for proper air circulation.
4. **Pre-heat (Optional):** For the first use, it is recommended to run the air fryer empty for about 10 minutes at 180°C to eliminate any manufacturing odors. Ensure the area is well-ventilated during this process.

## 5. OPERATING INSTRUCTIONS

### 5.1 Basic Operation

1. Place the air fryer on a stable, heat-resistant surface.
2. Pull out the basket from the air fryer.
3. Place your ingredients into the basket. Do not overfill the basket to allow for proper air circulation.
4. Slide the basket back into the air fryer until it clicks into place.
5. Plug the power cord into a grounded wall outlet.
6. The air fryer operates at a constant temperature of 180°C. Use the timer knob to set the desired cooking time (1 to 60 minutes). The appliance will begin heating automatically.
7. During cooking, you can pull out the basket to shake or turn the ingredients for even cooking. The appliance will automatically pause and resume when the basket is reinserted.
8. Once the timer reaches zero, the air fryer will emit a sound, indicating that cooking is complete.
9. Carefully pull out the basket and transfer the cooked food to a plate. Use heat-resistant tongs.
10. Unplug the appliance after use.

## 5.2 Cooking Guide

The Lifelong Air Fryer can be used for various cooking methods, including frying, baking, grilling, roasting, and reheating. The 360° hot air circulation technology ensures even cooking.



Image: Crispy golden french fries, a common air fryer dish.



Image: Chocolate chip muffins, demonstrating baking capability.



Image: Paneer tikka skewers, showcasing grilling or roasting.



Image: Roasted chicken drumsticks, illustrating roasting functionality.

## 6. CLEANING AND MAINTENANCE

---

Regular cleaning and maintenance will ensure the longevity and hygiene of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool down completely before cleaning.
2. **Clean Basket and Pan:** The non-stick air fryer basket and pan can be washed with warm soapy water. Use a non-abrasive sponge to avoid damaging the non-stick coating. Rinse thoroughly and dry completely.
3. **Clean Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not use harsh abrasive cleaners or scouring pads.
4. **Clean Interior:** If necessary, wipe the interior of the appliance with a damp cloth. Avoid getting water into the electrical components.
5. **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.

## 7. TROUBLESHOOTING

---

If you encounter issues with your Lifelong Air Fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in; basket not inserted correctly; power outage.	Ensure the power cord is securely plugged into a working outlet. Make sure the basket is fully inserted until it clicks. Check your household's power supply.
Food is not cooked evenly.	Basket is overfilled; food not shaken or turned.	Do not overfill the basket. Shake or turn ingredients halfway through the cooking process.
White smoke coming from the appliance.	Grease residue from previous use; fatty ingredients.	Clean the basket and pan thoroughly after each use. For fatty foods, consider draining excess fat during cooking.
Food is not crispy.	Too much moisture; insufficient cooking time.	Pat food dry before air frying. Increase cooking time slightly. A light coating of oil can also help achieve crispiness.

## 8. SPECIFICATIONS

Feature	Detail
Model Name	LLHF26
Capacity	2.5 litres
Output Wattage	800 Watts
Voltage	220 Volts
Control Method	Manual Knob (Timer)
Temperature Setting	Constant 180°C
Timer Range	1 to 60 minutes
Air Frying Technology	Hot Air Circulation Technology
Non-stick Coating	Yes
Product Dimensions (D x W x H)	22.7D x 22.7W x 25H Centimeters
Item Weight	1.9 kg
Colour	Black
Material	Plastic

## 9. WARRANTY AND CUSTOMER SUPPORT

Your Lifelong 2.5L Air Fryer LLHF26 comes with a warranty. Please refer to the included Warranty Card for detailed terms and conditions, including the warranty period and coverage.

For any product-related queries, assistance, or service requests, please contact Lifelong customer support:

- **Telephone:** +91 9711558877
- **Email:** [customercare@lifelongonline.com](mailto:customercare@lifelongonline.com)

- **Manufacturer/Importer Address:** 5th Floor, Unit No. 508, DLF South Court, Saket District Center, Saket New Delhi, India - 110017

Please have your model number (LLHF26) and purchase details ready when contacting customer support.