

IBELL AF650MN

iBELL AF650MN 6.5 Litre Air Fryer User Manual

Model: **AF650MN** | Brand: **IBELL**

1. IMPORTANT SAFEGUARDS

Please read all instructions carefully before using the iBELL AF650MN Air Fryer. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Electrical Safety:** Ensure the voltage indicated on the appliance matches your local mains voltage before connecting. Do not immerse the main unit, cord, or plug in water or other liquids.
- **Hot Surfaces:** The appliance surfaces become hot during use. Always use oven mitts when handling hot components. Do not touch hot surfaces directly.
- **Ventilation:** Do not block any ventilation openings. Allow sufficient space (at least 10 cm) around the appliance for proper air circulation.
- **Children:** This appliance is not intended for use by children. Keep the appliance and its cord out of reach of children.
- **Maintenance:** Do not attempt to repair the appliance yourself. Contact qualified service personnel for repairs.
- **Proper Use:** Use the appliance only for its intended household purpose. Do not use outdoors.

2. PRODUCT OVERVIEW

The iBELL AF650MN Air Fryer utilizes Smart Rapid Air Technology to cook food with little to no oil, offering a healthier alternative to traditional frying. It features a generous 6.5-litre capacity and 1600W power for efficient cooking.



Figure 2.1: iBELL AF650MN Air Fryer with its basket containing fries.

Components:

- **Main Unit:** Houses the heating element and fan.
- **Fryer Basket:** Detachable, non-stick coated basket for holding food.
- **Crisper Plate:** Sits inside the basket to allow air circulation around food.
- **Control Panel:** Digital touch display for setting temperature, time, and selecting presets.
- **Cool-Touch Handle:** For safe handling of the fryer basket.



Figure 2.2: Detachable basket and crisper plate for easy cleaning.

3. SETUP AND FIRST USE

Unpacking:

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Check that all components are present and undamaged.

Cleaning Before First Use:

1. Clean the fryer basket and crisper plate with hot water, a mild dishwashing liquid, and a non-abrasive sponge. These parts are also dishwasher safe.
2. Wipe the inside and outside of the main unit with a damp cloth.
3. Ensure all parts are thoroughly dry before use.

Placement:

- Place the air fryer on a stable, heat-resistant surface.
- Ensure there is at least 10 cm of free space on the back, sides, and above the appliance to allow for proper air circulation.
- Do not place the appliance near flammable materials or heat sources.

4. OPERATING INSTRUCTIONS

The iBELL AF650MN Air Fryer features a digital touch control panel for easy operation.



Figure 4.1: Digital display with touch controls.

Basic Operation:

1. Plug the power cord into a grounded wall outlet. The air fryer will beep, and the display will light up briefly.
2. Pull out the fryer basket using the cool-touch handle. Place food inside the basket, ensuring not to overfill.
3. Slide the fryer basket back into the main unit until it clicks into place.
4. Press the Power button to turn on the appliance.

Setting Temperature and Time:

- Use the temperature control buttons (usually + and - icons) to adjust the cooking temperature between 80°C and 200°C.
- Use the timer control buttons to set the cooking time, typically up to 60 minutes.
- The air fryer will automatically start cooking after a few seconds of inactivity or by pressing the Start/Pause button.

Using Cooking Presets:

The iBELL AF650MN comes with 8 pre-programmed cooking functions for common dishes.

1600 W
POWER

8 Cooking
Preset



Figure 4.2: Control panel displaying 8 cooking presets.

1. After turning on the air fryer, press the 'Menu' or 'Preset' button to cycle through the available presets (e.g., Fries, Steak, Fish, Shrimp, Baking, Chicken).
2. Once a preset is selected, the air fryer will automatically set the optimal temperature and time for that food type.
3. You can manually adjust the temperature and time even after selecting a preset if desired.

Auto-Off Function:

The air fryer will automatically shut off when the set cooking time has elapsed. You can also manually turn off the appliance by pressing and holding the Power button.

5. COOKING GUIDE

For best results, follow these general guidelines when air frying:

- **Preheating:** For optimal crispiness, preheat the air fryer for 3-5 minutes before adding food.
- **Oil Usage:** While air frying requires little to no oil, a light spray or toss with oil can enhance crispiness

and flavor for some foods.

- **Do Not Overfill:** Avoid overcrowding the basket. Cook food in smaller batches to ensure even cooking and browning.
- **Shake or Flip:** For even cooking, especially with smaller items like fries or nuggets, shake the basket halfway through the cooking time. For larger items, flip them.
- **Check Doneness:** Always ensure food is cooked to a safe internal temperature. Cooking times may vary based on food type, quantity, and desired crispiness.



Figure 5.1: Visual representation of preset menu options.

Refer to a reliable air fryer recipe book or online resources for specific cooking times and temperatures for various ingredients.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

After Each Use:

1. Unplug the air fryer from the power outlet and allow it to cool down completely before cleaning.
2. Remove the fryer basket and crisper plate. Wash them with hot water, a mild dishwashing liquid, and a non-abrasive sponge. For stubborn food residue, soak them in hot water for about 10 minutes. Both parts are dishwasher safe.
3. Wipe the exterior of the appliance with a damp cloth. Do not use abrasive cleaners or scouring pads.
4. Clean the interior of the appliance with a damp cloth and mild detergent. Ensure no water enters the heating element area.
5. Ensure all parts are completely dry before storing or using again.

Warning: Never immerse the main unit of the air fryer in water or any other liquid.

7. TROUBLESHOOTING

If you encounter issues with your iBELL AF650MN Air Fryer, refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|---------------------------------------|--|---|
| Air fryer does not turn on. | Appliance not plugged in. Power outlet not working. | Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. |
| Food is not cooked evenly. | Basket is overcrowded. Food not shaken/flipped. | Cook in smaller batches. Shake the basket or flip food halfway through cooking. |
| Food is not crispy. | Too much food in the basket. Not enough oil (for some foods). Temperature too low. | Reduce food quantity. Lightly spray or toss food with oil. Increase temperature slightly. |
| White smoke comes from the appliance. | Grease residue from previous use. Fatty food being cooked. | Clean the basket and crisper plate thoroughly. For fatty foods, place a piece of aluminum foil under the crisper plate to catch excess fat. |

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

| Feature | Specification |
|--------------------------------|--|
| Model Name | AF650MN |
| Brand | IBELL |
| Capacity | 6.5 Litres |
| Output Wattage | 1600 Watts |
| Voltage | 230 Volts |
| Min Temperature Setting | 80 Degrees Celsius |
| Max Temperature Setting | 200 Degrees Celsius |
| Control Method | Touch |
| Air Frying Technology | Rapid Air Technology |
| Product Dimensions (D x W x H) | 27.3D x 29W x 32H Centimeters |
| Item Weight | 5.96 Kilograms |
| Material | Aluminium, Plastic (Outer), Non-stick coated plastic (Inner) |
| Dishwasher Safe Parts | Yes (Basket, Crisper Plate) |
| Special Features | Automatic Shut-Off, 8 Cooking Presets |

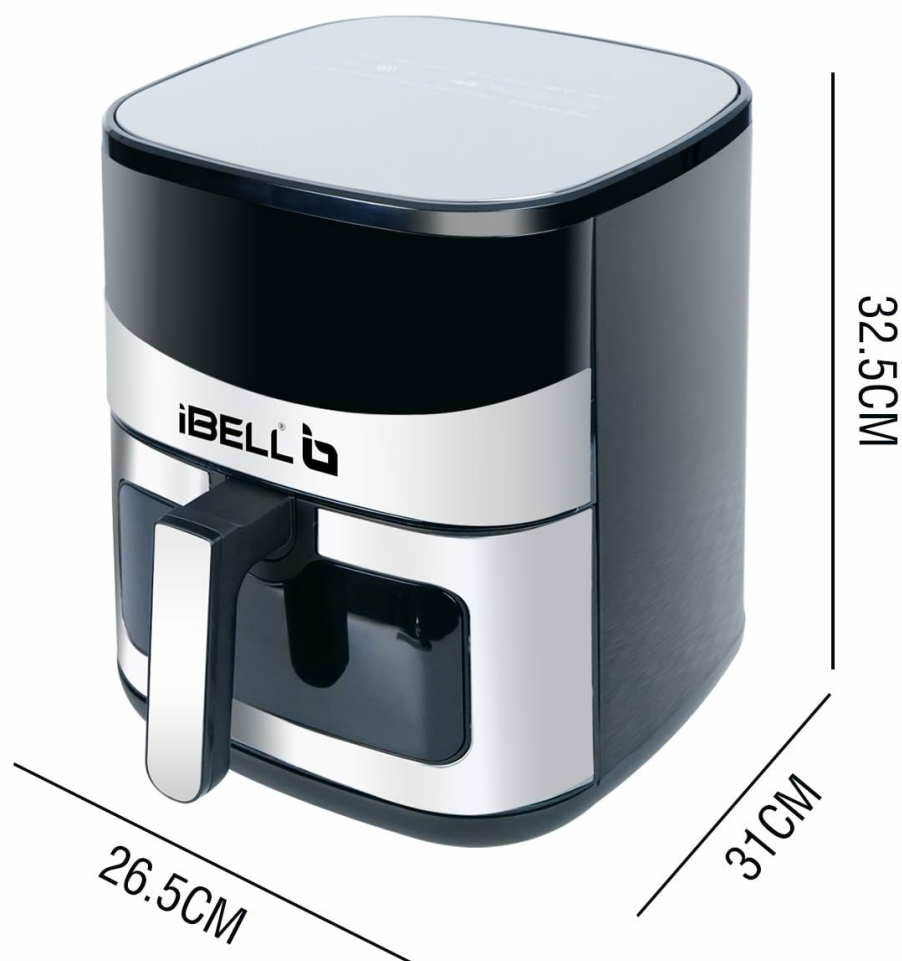


Figure 8.1: Product dimensions of the iBELL AF650MN Air Fryer.

9. WARRANTY AND SUPPORT

Warranty Information:

The iBELL AF650MN Air Fryer comes with a **2-Year Warranty** provided by iBELL. Please retain your purchase receipt as proof of purchase for warranty claims.

Customer Support:

For any queries, service requests, or technical assistance, please contact iBELL customer support:

- **Phone:** 1800 2020 260
- **Email:** connect@ibellstore.com
- **Manufacturer Address:** Innovative Technologies, iBELL Fida's Building, Thottumugham P.O, Aluva, Kerala - 683105

10. PRODUCT VIDEO OVERVIEW

Watch this video for a quick overview of the iBELL AF650MN Air Fryer's features and benefits.

Your browser does not support the video tag.

Video 10.1: An overview of the iBELL AF650MN Air Fryer, highlighting its 6.5L capacity, 1600W power, 8 cooking presets, Smart Rapid Air Technology, detachable basket, and 2-year warranty.

© 2026 IBELL. All rights reserved.