



Manuals.plus /

- › Zostuic /
- › Zostuic 4K Digital Camera Instruction Manual

Zostuic DC202

Zostuic 4K Digital Camera Instruction Manual

Model: DC202

1. INTRODUCTION

This manual provides comprehensive instructions for the operation, maintenance, and troubleshooting of your Zostuic 4K Digital Camera. Please read this manual thoroughly before using the camera to ensure proper functionality and to maximize your photographic and videographic experience.



Figure 1: Zostuic 4K Digital Camera and included accessories.

2. WHAT'S IN THE BOX

Verify that all items listed below are included in your package:

- Digital Camera (1 unit)
- 32G micro SD Card (1 unit)
- Rechargeable 1050mAh Batteries (2 units)
- User Manual (1 unit)
- Camera Bag (1 unit)
- Wrist Strap (1 unit)
- Cleaning Cloth (1 unit)
- Charger (1 unit)
- Cradle Charger (1 unit)
- USB Cable (1 unit)
- HDMI Cable (1 unit)

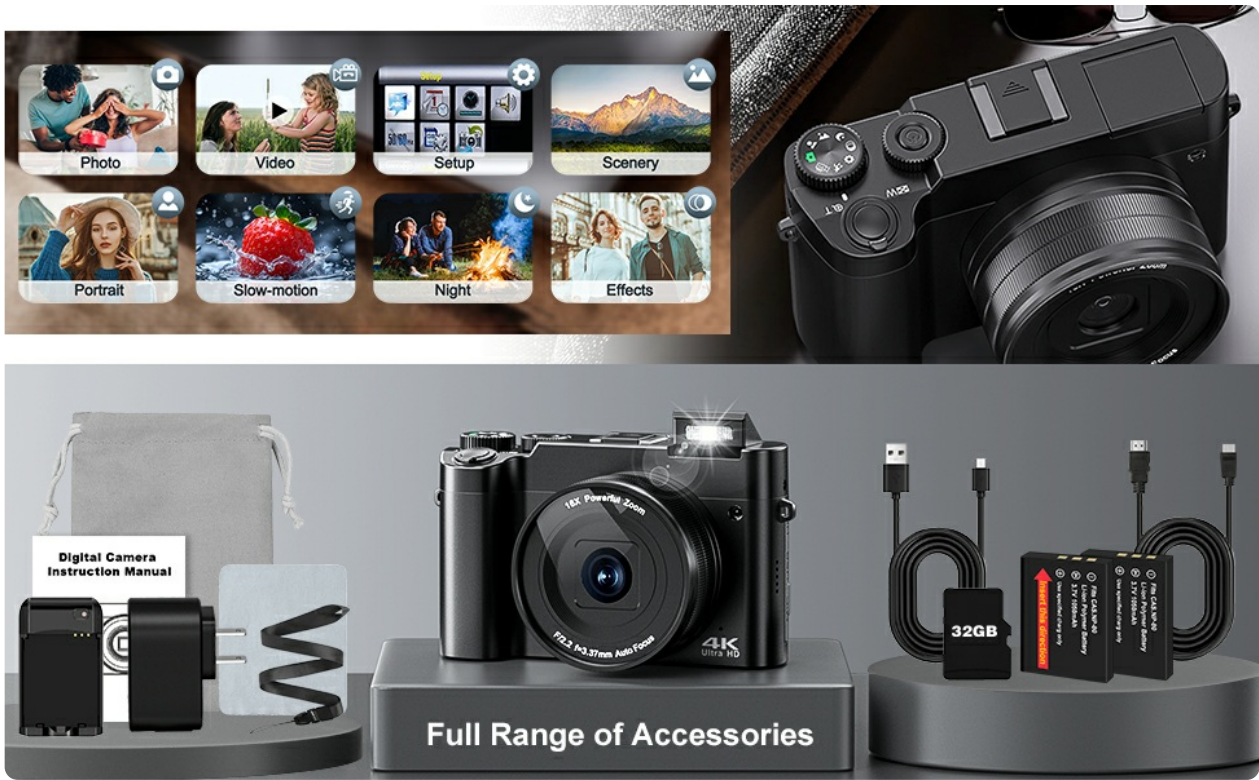


Figure 2: Overview of all components included in the camera package.

3. PRODUCT OVERVIEW

Familiarize yourself with the camera's main components and controls.



Figure 3: Labeled diagram of the camera's features including pop-up flash, hot shoe, zoom adjust dial, rotary dial, conversion lens, screen, buttons, and ports.

Key Features:

- **64MP 4K Resolution:** High-quality photography and 4K video.
- **Dual-lens Design:** Front and rear cameras for versatile shooting, including selfies and vlogging.
- **Autofocus & 16X Digital Zoom:** Clear capture of distant and macro scenery.
- **6-axis Anti-shake:** Enhanced stability for photos and videos.
- **3-inch IPS HD Screen:** Clear display with a user-friendly interface.
- **Pop-up Flash:** True flash for night scenes and low-light conditions.
- **Hot Shoe:** For external flash and microphone (not included).
- **Mode Dial:** Quick access to various shooting settings.

4. SETUP

4.1 Charging the Batteries

The camera comes with two rechargeable 1050mAh batteries. It is recommended to fully charge the batteries before first use.

1. Insert one or both batteries into the provided cradle charger.
2. Connect the cradle charger to a power source using the USB cable and charger.
3. The indicator light on the charger will show charging status (e.g., red for charging, green for fully charged).



Figure 4: Charging the camera batteries using the cradle charger.

4.2 Inserting the Battery and SD Card

1. Open the battery compartment cover on the bottom of the camera.
2. Insert a charged battery into the compartment, ensuring correct orientation.
3. Insert the 32GB micro SD card (or a compatible card up to 256GB) into the SD card slot until it clicks into place. Ensure the card is formatted before first use in the camera.
4. Close the battery compartment cover securely.

Important: Please format the 32G SD card before using the camera for the first time.

5. BASIC OPERATION

5.1 Powering On/Off

Press and hold the power button located on the top of the camera to turn it on or off. The screen will display "WELCOME" upon startup.



Figure 5: Top view of the camera showing the mode dial and power button.

5.2 Selecting Shooting Modes

Rotate the mode dial on the top of the camera to select your desired shooting mode:

- **Photo Mode:** For capturing still images.
- **Video Mode:** For recording video footage.
- **Setup Mode:** To access camera settings.
- **Special Scene Modes:** Includes options like Scenery, Portrait, Slow-motion, Night, and various Filters.

Figure 6: Camera display showing various shooting modes and features like 64MP, 6-axis anti-shake, flash, 16X zoom, autofocus, filters, and time-lapse.

5.3 Taking Photos and Recording Videos

- In Photo Mode, press the shutter button halfway to focus, then fully press to capture the image.
- In Video Mode, press the shutter button once to start recording, and press again to stop.
- The camera features autofocus for clear images and 6-axis anti-shake for stable shots.

Clearer Advanced Technology

Perfectly Capture Dynamic Scenes


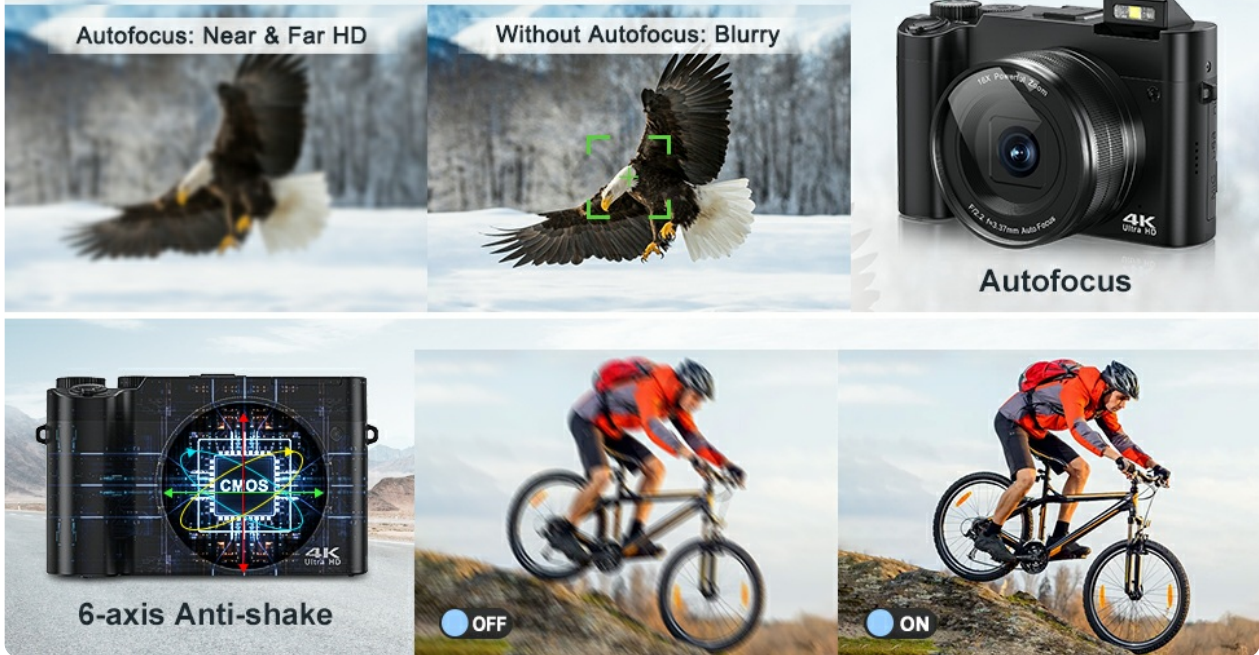


Figure 7: Demonstrating the clarity of autofocus and the stability provided by 6-axis anti-shake technology.

5.4 Using the Flash

To activate the pop-up flash, slide the flash release button. The flash is effective up to 39.37 inches (1 meter) for illuminating night scenes.

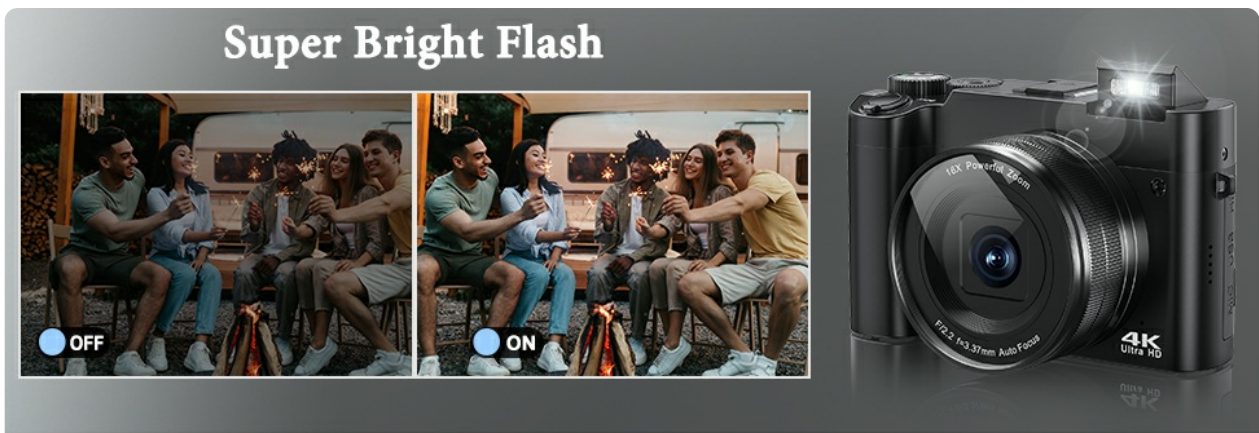

20+ Filters for You to Choose From



Figure 8: Illustrating the effect of the super bright flash in low-light conditions.

6. ADVANCED FEATURES

- **Filters:** Apply over 20 different filters to your photos to create various atmospheres.
- **Time-lapse:** Set the camera to capture images at intervals (2/5/10 seconds).

- **Continuous Shooting:** Capture a series of rapid photos.
- **Slow Motion:** Record videos in slow motion.
- **Webcam Functionality:** Connect the camera to a computer for live broadcasting or video calls.
- **Timestamp:** Add date and time to your photos.
- **Exposure Compensation:** Adjust exposure from -3.0 to +3.0.



Figure 9: Demonstrating the camera's use for vlogging, webcam functionality, and 16X digital zoom capabilities.

7. DATA TRANSFER

You can transfer photos and videos from your camera to various devices:

- **To Computer:** Connect the camera to a Windows computer using the USB cable while the camera is powered on.
- **To TV:** Use the HDMI cable to connect the camera to a television for viewing content on a larger screen.
- **To Smartphone:** Insert the SD card into a card converter (not included) and then connect the converter to your smartphone.



Figure 10: Connectivity options for transferring media from the camera to other devices.

8. MAINTENANCE

- **Cleaning:** Use the provided cleaning cloth to gently wipe the camera lens and screen. Avoid using harsh chemicals.
- **Storage:** Store the camera in the provided camera bag when not in use to protect it from dust and scratches.
- **Battery Care:** Remove batteries if the camera will not be used for an extended period. Store batteries in a cool, dry place.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Battery is low or not inserted correctly.	Ensure batteries are fully charged and inserted with correct polarity.
Images are blurry.	Lens is dirty; camera not focusing; anti-shake off.	Clean the lens; ensure autofocus is engaged; activate anti-shake feature.
SD card error.	SD card not formatted or incompatible.	Format the SD card in the camera settings; ensure it is a compatible size (up to 256GB).
Flash not working.	Flash is not popped up or battery is low.	Ensure the pop-up flash is activated; check battery level.

10. SPECIFICATIONS

Feature	Detail
Brand	Zostuic
Model Name	DC218
Model Number	DC202
Photo Sensor Resolution	64 MP (Max Display Resolution) / 1.3 MP (Sensor)
Video Resolution	4320p (4K)
Digital Zoom	16x
Image Stabilization	Digital (6-axis Anti-shake)
Screen Size	3-inch IPS HD Screen
Battery Type	Rechargeable Lithium-Polymer (1050mAh)
External Memory Support	SD, Micro SD (up to 256 GB)
Connectivity	USB, HDMI
Item Weight	0.52 Pounds

11. WARRANTY AND SUPPORT

Your Zostuic 4K Digital Camera comes with a **2-year warranty** from the manufacturer.

For any questions, technical assistance, or warranty claims, please contact Zostuic after-sales service. Refer to the contact information provided on the product packaging or the official Zostuic website.



Figure 11: Zostuic customer support is available to assist you.