

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Sokany](#) /

› [Sokany 10L Dual Basket Air Fryer SK-10008 Instruction Manual](#)

## Sokany SK-10008

# Sokany 10L Dual Basket Air Fryer

MODEL: SK-10008

## Introduction

Thank you for purchasing the Sokany 10L Dual Basket Air Fryer, Model SK-10008. This appliance is designed to cook a variety of foods using rapid hot air circulation, offering a healthier alternative to traditional frying with little to no oil. Please read this manual thoroughly before operating the appliance and retain it for future reference.

## Important Safety Instructions

- Read all instructions before use.
- Do not immerse the main unit, cord, or plug in water or other liquids to prevent electric shock.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use attachments not recommended by the appliance manufacturer, as this may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- Avoid contact with hot surfaces. Use handles or knobs.

## Product Overview

The Sokany SK-10008 is a dual-basket air fryer designed for efficient and versatile cooking. It features two independent cooking zones, allowing you to cook different foods at different temperatures and times simultaneously.



Figure 1: Front view of the Sokany 10L Dual Basket Air Fryer SK-10008, showing the digital control panel and two cooking baskets.

### Components:

- **Main Unit:** Houses the heating element, fan, and control panel.
- **Control Panel:** Digital display with touch controls for temperature, time, and pre-set functions.
- **Cooking Baskets (x2):** Removable baskets for holding food during cooking.
- **Crisper Plates (x2):** Inserted into the baskets to allow air circulation around food.
- **Handles (x2):** For safe removal and insertion of cooking baskets.



Figure 2: Side view of the Sokany 10L Dual Basket Air Fryer SK-10008, highlighting its compact design.

## Setup

### Before First Use:

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Wipe the exterior of the appliance with a damp cloth.
3. Wash the cooking baskets and crisper plates thoroughly with hot water, dish soap, and a non-abrasive sponge. Rinse and dry completely.
4. Place the air fryer on a stable, level, heat-resistant surface, away from walls or other appliances to ensure proper ventilation.
5. Plug the power cord into a grounded electrical outlet.

## Operating Instructions

### General Operation:

1. Place the crisper plates inside the cooking baskets.
2. Place your food into the cooking baskets. Do not overfill.
3. Slide the baskets back into the main unit until they click into place.
4. Press the Power button to turn on the appliance.
5. Select the desired cooking zone (1 or 2) if using only one, or both for synchronized cooking.
6. Adjust the temperature and time using the digital controls. The appliance is programmable, allowing precise settings.
7. Press the Start/Pause button to begin cooking.
8. Some recipes may require shaking the baskets halfway through cooking. Carefully remove the basket, shake, and reinsert.
9. Once cooking is complete, the air fryer will beep. Carefully remove the baskets and transfer food to a serving dish.

### Dual Zone Cooking:

The dual basket design allows for cooking two different foods simultaneously. You can set independent temperatures and times for each basket. Refer to the control panel for specific dual-zone synchronization options (e.g., 'Sync Finish' or 'Match Cook' if available on your model).

## Maintenance and Cleaning

Clean the air fryer after every use to prevent food residue buildup.

### Cleaning Steps:

1. Unplug the air fryer and allow it to cool completely before cleaning.
2. Remove the cooking baskets and crisper plates.
3. Wash the baskets and crisper plates with hot water, dish soap, and a non-abrasive sponge. For stubborn food residue, soak them in hot water for about 10 minutes.
4. Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or scourers.
5. Clean the interior of the appliance with a damp cloth and mild detergent if necessary.
6. Ensure all parts are completely dry before reassembling or storing the appliance.

**Note:** The cooking baskets and crisper plates are not dishwasher safe. Hand washing is recommended.

## Troubleshooting

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in.	Ensure the power cord is securely plugged into a grounded outlet.
Food is not cooked evenly.	Baskets are overcrowded; food not shaken.	Do not overfill baskets. Shake baskets halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use; fatty food.	Clean the baskets and crisper plates thoroughly. For fatty foods, ensure crisper plate is in place to drain fat.
Food is not crispy.	Too much moisture in food; insufficient oil (if required).	Pat food dry before air frying. Lightly brush or spray with oil for extra crispiness.

## Specifications

Feature	Detail
Brand	Sokany
Model	SK-10008
Color	Black
Capacity	8.5 Liters (Total)
Power / Wattage	1800 Watts (Rated)

Feature	Detail
Voltage	60 Volts (Note: This voltage seems unusual for a kitchen appliance. Please verify with local electrical standards.)
Material	Glass (likely for viewing windows or specific components, not entire body)
Special Features	Programmable
Item Weight	1.3 Kilograms
Product Dimensions (D x W x H)	12 cm x 22 cm x 30 cm
Recommended Uses	Food, Baking, Roasting

## Warranty and Support

---

For warranty information and customer support, please refer to the warranty card included with your purchase or contact Sokany customer service directly. Keep your proof of purchase for any warranty claims.