### Manuals+

Q & A | Deep Search | Upload

# HyperGear Halo Waterproof LED Wireless Speaker

# HyperGear Halo Waterproof LED Wireless Speaker User Manual

Model: Halo Waterproof LED Wireless Speaker
Brand: HyperGear

### INTRODUCTION

Thank you for choosing the HyperGear Halo Waterproof LED Wireless Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity. The Halo speaker combines powerful HD sound with a vibrant 360° multicolor LED light show, designed for both indoor and outdoor use. Its IPX6 waterproof rating makes it suitable for various environments, from poolside parties to everyday listening.

### WHAT'S IN THE BOX

- HyperGear Halo Waterproof LED Wireless Speaker
- USB-C Charging Cable
- 3.5mm Aux Cord

### SETUP GUIDE

### 1. Charging the Speaker

Before first use, fully charge your Halo speaker. Connect the included USB-C charging cable to the speaker's charging port and the other end to a USB power adapter (not included). The LED indicator will show charging status and turn off when fully charged.

### 2. Powering On/Off

Press and hold the Power button on the speaker's top panel to turn it on or off. A sound prompt will indicate the power status.

# 3. Bluetooth Pairing

- 1. Ensure the speaker is powered on and in Bluetooth pairing mode (indicated by a flashing LED).
- 2. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
- 3. Select "HyperGear Halo" from the list.
- 4. Once paired, the speaker will emit a confirmation sound, and the LED will stop flashing.

The speaker will automatically reconnect to the last paired device when powered on, if within range.

# No Wires, No Worries

Upgraded with Bluetooth 5.3 wireless technology for a skip-free connection with any device



The top panel of the HyperGear Halo speaker, showing controls and its connection to a smartphone via Bluetooth.

# **OPERATING INSTRUCTIONS**

### **Basic Controls**

Button/Function	Action
Power Button	Press and hold to Power On/Off
Play/Pause	Press once to Play/Pause music
Volume Up (+)	Press once to increase volume
Volume Down (-)	Press once to decrease volume
Next Track	Press and hold Volume Up (+)

Button/Function	Action
Previous Track	Press and hold Volume Down (-)
Answer/End Call	Press Play/Pause button once
Reject Call	Press and hold Play/Pause button
Light Mode Button	Press to cycle through 6 LED light modes

# **Party Mode (Stereo Pairing)**

To achieve immersive stereo sound, you can pair two HyperGear Halo speakers together:

- 1. Ensure both Halo speakers are powered on and not connected to any other Bluetooth device.
- 2. On one speaker (this will be the primary speaker), double-press the Power button. It will enter pairing mode for Party Mode.
- 3. The two speakers will automatically connect to each other. A confirmation sound will indicate successful pairing.
- 4. Now, connect your device to the primary speaker via Bluetooth as described in the 'Bluetooth Pairing' section. Both speakers will play synchronized audio and light shows.



Two HyperGear Halo speakers paired together for Party Mode, offering synchronized audio and light effects.

**Alternative Playback Modes** 



The side panel of the HyperGear Halo speaker, revealing the AUX, microSD, and USB-C ports for versatile connectivity.

- Aux-In: Connect your device using the included 3.5mm Aux cord to the speaker's AUX port for a wired audio connection.
- microSD Card: Insert a microSD card loaded with audio files into the designated slot. The speaker will automatically play music from the card.

# **FEATURES OVERVIEW**

• IPX6 Waterproof Rating: Designed to withstand splashes, rain, and spills, making it ideal for outdoor adventures and poolside use.



The HyperGear Halo speaker immersed in water, highlighting its robust waterproof design.

• Powerful 5W Front-Firing Sound: Equipped with a 52mm full-range driver for rich, dynamic audio with pulse-pounding bass. The front-firing design ensures clearer sound projection.



Visual representation of the HyperGear Halo speaker's powerful audio features, including its 5W output and 52mm driver.

• 360° Multicolor LED Lights: Features a vibrant light ring that synchronizes with your music, offering 6 different lighting modes to enhance your listening experience.



The HyperGear Halo speaker showcasing its beat-synced 360° multicolor LED light ring with various lighting modes.

- Built-in Microphone: Allows for convenient hands-free calling.
- Bluetooth 5.3 Technology: Provides a stable, stutter-free wireless connection with a range of up to 33 feet.

# **SPECIFICATIONS**

Feature	Detail
Model Name	Halo Waterproof LED Wireless Speaker
Speaker Type	Multimedia
Connectivity Technology	Bluetooth 5.3
Audio Output Mode	Mono (Stereo with Party Mode)
Speaker Maximum Output Power	5 Watts

Feature	Detail
Audio Driver Size	52 Millimeters
Water Resistance Level	IPX6 Waterproof
Product Dimensions	3.27"D x 3.27"W x 4.13"H
Item Weight	1.05 pounds
Power Source	Battery Powered
Included Components	USB-C Charging Cable, 3.5mm Aux Cord
Control Method	Button
UPC	633755158858

### MAINTENANCE

- Cleaning: Wipe the speaker with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Storage: Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- Battery Care: To preserve battery life, avoid fully discharging the speaker frequently. Charge it regularly, even if not in use for extended periods.
- Waterproof Seal: Ensure the silicone cover for the charging and AUX ports is securely closed when near water to maintain its IPX6 rating.

### **TROUBLESHOOTING**

Problem	Possible Solution
Speaker does not power on.	Ensure the speaker is charged. Connect it to a power source and try again.
Cannot pair with Bluetooth device.	Make sure the speaker is in pairing mode (flashing LED). Turn off and on Bluetooth on your device. Ensure no other devices are connected to the speaker. Move speaker closer to your device.
No sound from speaker.	Check volume levels on both the speaker and your device. Ensure the correct input mode (Bluetooth, Aux, MicroSD) is selected. If using Aux, ensure the cable is fully inserted.
Party Mode not working.	Ensure both speakers are fully charged and not connected to any other Bluetooth devices. Try resetting both speakers by powering them off and on, then re-attempt Party Mode pairing.
LED lights are not working.	Press the Light Mode button to cycle through modes. Ensure the speaker is powered on.

# WARRANTY AND SUPPORT

The HyperGear Halo Waterproof LED Wireless Speaker comes with a **Limited Warranty**. For specific details regarding warranty coverage, duration, and claims, please refer to the warranty card included with your product or visit the official HyperGear website. For technical support or further assistance, please contact HyperGear customer service through their official channels.

© 2024 HyperGear. All rights reserved.