

BELLA 35126-043A

BELLA Single Serve Coffee Maker Instruction Manual

Model: 35126-043A

INTRODUCTION

Thank you for purchasing the BELLA Single Serve Coffee Maker. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new coffee maker. Please read all instructions carefully before first use and retain this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, and injury, always follow these basic safety precautions.

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Scalding may occur if the lid is removed during the brewing cycle.
- This appliance is for household use only.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your BELLA Single Serve Coffee Maker.



Image: The BELLA Single Serve Coffee Maker in Oatmilk color, shown with its K-Cup adapter and reusable ground coffee filter.

- **Water Reservoir:** Holds water for brewing (up to 14oz).
- **Lid:** Covers the water reservoir and brewing chamber.
- **Brewing Chamber:** Area where K-Cups or ground coffee filter are placed.
- **K-Cup Adapter:** For brewing with single-serve coffee pods.
- **Reusable Ground Coffee Filter:** For brewing with your favorite ground coffee.
- **Drip Tray:** Catches drips and can be adjusted for different mug sizes.

- **Power Button/Brew Button:** Initiates the brewing process.
- **Power Cord:** Connects the appliance to an electrical outlet.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and inspect the coffee maker for any damage.
2. **Initial Cleaning:** Before first use, wash the reusable filter, K-Cup adapter, and drip tray in warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the coffee maker with a damp cloth.
3. **First Brew Cycle (Cleaning Cycle):**
 - Place an empty mug on the drip tray.
 - Fill the water reservoir with clean water up to the 14oz mark. Do not add coffee or a K-Cup.
 - Close the lid securely.
 - Plug the coffee maker into a standard electrical outlet.
 - Press the power/brew button to start a brewing cycle.
 - Allow the cycle to complete. Discard the hot water.
 - Repeat this cleaning cycle 2-3 times to ensure the internal components are clean.

OPERATING INSTRUCTIONS

Brewing with K-Cups

1. **Prepare the Coffee Maker:** Ensure the K-Cup adapter is securely placed in the brewing chamber.
2. **Add Water:** Open the lid and fill the water reservoir with the desired amount of fresh, cold water (6oz to 14oz). Do not exceed the MAX fill line.
3. **Insert K-Cup:** Place a K-Cup pod into the K-Cup adapter. Close the lid firmly until it clicks.
4. **Position Mug:** Place your mug or travel mug on the drip tray. The drip tray can be adjusted to accommodate mugs up to 7 inches tall.



Fits travel mugs
Adjustable drip tray fits mugs
with heights up to 7"

Image: The adjustable drip tray of the coffee maker, designed to fit various mug sizes including travel mugs up to 7 inches.

5. **Start Brewing:** Press the power/brew button. The indicator light will illuminate, and brewing will begin.
6. **Completion:** The coffee maker will automatically shut off after the brewing cycle is complete. Carefully remove your hot beverage.

Brewing with Ground Coffee

1. **Prepare the Coffee Maker:** Ensure the reusable ground coffee filter is securely placed in the brewing chamber.
2. **Add Ground Coffee:** Open the lid and add your desired amount of ground coffee to the reusable filter. Do not overfill. Close the lid firmly until it clicks.
3. **Add Water:** Fill the water reservoir with the desired amount of fresh, cold water (6oz to 14oz). Do not exceed the MAX fill line.



14oz water tank

Measurement markings make it easy to fill

Image: A close-up view of the coffee maker's 14oz water tank, showing clear measurement markings for easy filling.

4. **Position Mug:** Place your mug or travel mug on the drip tray.
5. **Start Brewing:** Press the power/brew button. The indicator light will illuminate, and brewing will begin.
6. **Completion:** The coffee maker will automatically shut off after the brewing cycle is complete. Carefully remove your hot beverage.



Image: A split image demonstrating how to insert a coffee pod on the left and how to add fresh coffee grounds to the reusable filter on the right.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure optimal performance and extend the life of your coffee maker.

Daily Cleaning

- Always unplug the coffee maker before cleaning.
- Remove and empty the K-Cup adapter or reusable ground coffee filter after each use. Wash with warm, soapy water and rinse thoroughly. These parts are dishwasher safe (top rack).
- Remove and clean the drip tray and its cover. These parts are dishwasher safe (top rack).
- Wipe the exterior of the coffee maker with a damp, soft cloth. Do not use abrasive cleaners or scouring pads.
- Do not immerse the coffee maker in water or any other liquid.

Descaling (Mineral Deposit Removal)

Mineral deposits (calcium and lime) can build up in your coffee maker over time, affecting performance and taste. Descale your coffee maker every 1-3 months, depending on water hardness and frequency of use.

- 1. **Prepare Solution:** Mix 1 cup of white vinegar with 2 cups of water.
- 2. **Fill Reservoir:** Pour the vinegar solution into the water reservoir.
- 3. **Run Cycle:** Place an empty mug on the drip tray. Run a brew cycle without a K-Cup or coffee grounds.
- 4. **Soak:** After the cycle, let the coffee maker sit for at least 30 minutes with the solution inside.
- 5. **Rinse Cycles:** Discard the solution. Fill the reservoir with fresh, clean water and run 2-3 full brew cycles to rinse out any remaining vinegar taste.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee maker does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure the power cord is securely plugged into a working outlet. Check circuit breaker.
Coffee is not brewing or brewing slowly.	Insufficient water in reservoir; K-Cup/filter not properly seated; mineral buildup.	Ensure water reservoir is filled. Check K-Cup or reusable filter placement. Perform descaling procedure.
Coffee is lukewarm or not hot enough.	Mineral buildup; insufficient preheating time.	Perform descaling procedure. Ensure the machine has enough time to heat water before brewing.
Water leaks from the coffee maker.	Water reservoir overfilled; K-Cup/filter not properly seated; damaged component.	Do not overfill the water reservoir. Ensure K-Cup or reusable filter is correctly inserted. If problem persists, contact customer support.
Coffee grounds in brewed coffee.	Reusable filter overfilled; fine grind coffee used in reusable filter; K-Cup punctured incorrectly.	Do not overfill the reusable filter. Use a medium grind for best results. Ensure K-Cup is properly inserted.
Coffee maker turns off mid-brew.	Electrical issue; internal malfunction.	Ensure the outlet is stable. If this happens frequently, contact customer support.

SPECIFICATIONS

Brand	BELLA
Model Number	35126-043A
Product Dimensions	6.41"D x 12.51"W x 12"H
Item Weight	3.74 pounds
Power	1000 Watt
Brewing Capacity	6oz to 14oz

Coffee Input Type	Ground coffee, coffee pods
Special Features	Auto Shutoff, Removable Drip Tray, Dishwasher Safe Accessories
UPC	829486351266



Image: Diagram showing the dimensions of the BELLA Single Serve Coffee Maker: 12.99 inches height, 5.70 inches depth, and 8.38 inches width.

WARRANTY INFORMATION

The BELLA Single Serve Coffee Maker typically comes with a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions, or visit the official BELLA website for detailed information. Extended protection plans may also be available for purchase:

- 3-Year Protection Plan
- 4-Year Protection Plan

- Complete Protect (monthly plan covering multiple eligible purchases)

For details on these plans, please check with your retailer or the plan provider.

CUSTOMER SUPPORT

If you have any questions, require assistance, or need to report an issue with your BELLA Single Serve Coffee Maker, please contact BELLA customer support.

- **Online Support:** Visit the official BELLA website for FAQs, product registration, and contact forms.[Visit the BELLA Store on Amazon](#)
- **Contact Information:** Refer to your product packaging or the BELLA website for phone numbers and email addresses for direct support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question