

[Manuals.plus](#) /

› [Bennett Read](#) /

› Bennett Read Air Fryer Oven, 25 Litre Cooking Capacity Instruction Manual

Bennett Read KAF104

Bennett Read Air Fryer Oven Instruction Manual

Model: KAF104

INTRODUCTION

Thank you for choosing the Bennett Read Air Fryer Oven. This versatile appliance is designed to simplify your cooking experience, offering a wide range of functions including air frying, baking, toasting, broiling, grilling, dehydrating, and warming. With its generous 25-litre capacity and intuitive controls, you can prepare delicious meals for the whole family with ease. Please read this manual thoroughly before first use to ensure safe and optimal operation of your new appliance.

IMPORTANT SAFETY INSTRUCTIONS

- Always place the appliance on a stable, heat-resistant surface, away from walls or other appliances to ensure proper ventilation.
- Do not touch hot surfaces. Use oven mitts or gloves when handling hot components or food.
- To protect against electrical shock, do not immerse the cord, plugs, or the appliance body in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use attachments not recommended by the appliance manufacturer, as this may cause injuries.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for other than intended household use.

PRODUCT OVERVIEW



The Bennett Read Air Fryer Oven, Model KAF104, features a sleek silver and black design. The front includes a large glass door for easy viewing of food during cooking. Above the door are four control knobs: a power button, a function selector, an oven temperature selector, and a timer. The interior is spacious, demonstrating a roasted chicken on a rotisserie spit and vegetables on a tray below, highlighting its 25-litre cooking capacity and multi-functional capabilities.

The Bennett Read Air Fryer Oven is designed for convenience and versatility. It features an easy-to-clean, non-stick interior and a clear, easy-view glass door. The appliance is equipped with 4 upper and 2 lower super-powerful stainless steel heating elements for even cooking. Control is managed via an adjustable temperature dial up to 230°C and an adjustable 60-minute cooking timer with an auto shut-off function and alarm bell. A power indicator light is also present for user convenience.

SETUP

- 1. Unpacking:** Carefully remove the air fryer oven and all accessories from the packaging. Retain packaging for future storage or transport if needed.
- 2. Placement:** Place the appliance on a flat, stable, heat-resistant surface. Ensure there is adequate space (at least 10-15 cm) around all sides of the oven for proper air circulation. Do not place it directly against a wall or under cabinets.
- 3. Initial Cleaning:** Before first use, wipe the exterior with a damp cloth. Wash all removable accessories (baking tray, air fry basket, rotisserie spit, etc.) with warm, soapy water, rinse thoroughly, and dry completely. The interior can be wiped with a damp cloth.
- 4. First Use Burn-Off:** It is recommended to run the oven empty for about 10-15 minutes at 200°C on the 'Bake' setting to burn off any manufacturing residues. A slight odor or smoke may be present during this process; this is normal. Ensure the

area is well-ventilated.

5. **Power Connection:** Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

The Bennett Read Air Fryer Oven offers multiple cooking functions controlled by three main dials: Function, Oven Temperature, and Timer.

General Operation:

1. **Prepare Food:** Place your food on the appropriate accessory (e.g., air fry basket, baking tray).
2. **Insert Accessory:** Slide the accessory into the desired rack position inside the oven.
3. **Select Function:** Turn the 'FUNCTION' dial to select your desired cooking mode (Air Fry, Toast, Bake, Broil, Grill, Dehydrate, Warm).
4. **Set Temperature:** Turn the 'OVEN TEMP' dial to set the desired cooking temperature, up to 230°C.
5. **Set Timer:** Turn the 'TIMER' dial to set the cooking time, up to 60 minutes. The oven will automatically shut off and an alarm bell will sound when the timer reaches zero. For continuous cooking, turn the timer past the 60-minute mark to the 'Stay On' position (if available).
6. **Monitor Cooking:** The premium tempered glass door and interior lighting allow you to monitor your food without opening the door.
7. **Completion:** Once cooking is complete, carefully remove the food using oven mitts. Unplug the appliance when not in use.

Specific Functions:

- **Air Fry:** Utilizes rapid hot air circulation for crispy results with little to no oil. Ideal for fries, chicken wings, and other fried foods.
- **Bake:** Perfect for cakes, cookies, casseroles, and other baked goods.
- **Toast:** For toasting bread, bagels, and waffles.
- **Broil/Grill:** Uses top heating elements for browning and crisping the top of food, ideal for meats and gratins.
- **Dehydrate:** Low temperature, long duration cooking for drying fruits, vegetables, and making jerky.
- **Warm:** Keeps cooked food warm without further cooking.

MAINTENANCE AND CLEANING

Regular cleaning will ensure the longevity and optimal performance of your Bennett Read Air Fryer Oven.

1. **Always Unplug:** Before cleaning, ensure the appliance is unplugged from the power outlet and has completely cooled down.
2. **Interior Cleaning:** The non-stick interior can be wiped clean with a damp cloth and mild detergent. For stubborn food residue, a non-abrasive sponge can be used. Do not use metal scouring pads or abrasive cleaners, as they can damage the non-stick coating.
3. **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Do not use harsh chemicals or abrasive materials. The stainless steel finish is stain resistant, making it easy to maintain.
4. **Accessory Cleaning:** All removable accessories (baking tray, air fry basket, wire rack, rotisserie spit) should be washed in warm, soapy water. Rinse thoroughly and dry completely before storing or re-using. These parts are generally not dishwasher safe unless specified.
5. **Crumb Tray:** Regularly remove and clean the crumb tray located at the bottom of the oven to prevent grease and food buildup.
6. **Storage:** Ensure the oven is clean and dry before storing. Store in a cool, dry place.

TROUBLESHOOTING

If you encounter issues with your Bennett Read Air Fryer Oven, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet not working; timer not set.	Ensure the power cord is securely plugged into a working outlet. Check your circuit breaker. Turn the 'TIMER' dial to the desired cooking time.
Food is not cooking evenly.	Overcrowding the basket/tray; incorrect temperature/time; food not rotated.	Do not overcrowd the cooking area; cook in smaller batches if necessary. Adjust temperature and time according to recipe. For best results, flip or shake food halfway through cooking.
White smoke coming from the oven.	Grease or food residue on heating elements or interior; cooking high-fat foods.	Unplug and allow to cool. Clean the interior and heating elements thoroughly. For high-fat foods, ensure the drip tray is clean and consider using less oil.
Food is not crispy.	Too much oil; overcrowding; incorrect temperature/time.	Use minimal oil. Ensure food is in a single layer in the air fry basket. Increase cooking time or temperature slightly.

SPECIFICATIONS

Feature	Detail
Brand	Bennett Read
Model Number	KAF104
Colour	Silver/Black
Cooking Capacity	25 Litres
Product Dimensions (L x W x H)	46D x 42.3W x 42.7H centimetres
Item Weight	8.96 kg
Material	Metal
Temperature Control	Adjustable, up to 230°C
Heating Elements	4 Upper, 2 Lower Stainless Steel
Timer	Adjustable 60-minute with Auto Shut-off and Alarm Bell
Special Features	Stain Resistant, Premium Tempered Glass Door, Interior Lighting, Power Indicator Light

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or contact Bennett Read customer service directly. Keep your proof of purchase for any warranty claims. For technical assistance or spare parts, please reach out to the manufacturer's authorized service centers.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question