

DiDiSky GLS-C001

DiDiSky Under Cabinet LED Motion Sensor Lights User Manual

Model: GLS-C001

INTRODUCTION

Thank you for choosing DiDiSky Under Cabinet LED Motion Sensor Lights. This manual provides detailed instructions for the safe and efficient use of your new lighting system. Please read it thoroughly before installation and operation, and retain it for future reference.

PRODUCT FEATURES

- **Long-Lasting Battery & USB Charging:** 2200mAh rechargeable battery, up to 10 hours in "always on" mode, 40-60 days in automatic sensor mode. USB-C charging (2 hours for full charge).
- **Smart Motion Sensor:** Detects movement within 10 feet/120° and gradually lights up. Automatically shuts down after 20 seconds of no movement.
- **4 Lighting Modes:** Always Off, Always On, Auto (Day Mode), Auto (Night Mode).
- **Upgraded Dimmable Lights:** 62 LED beads, up to 160 lumens. Stepless dimming from 10% to 100% with memory function.
- **Easy Installation & Wide Application:** Built-in strong magnets for iron surfaces, or adhesive metal plates for non-metal surfaces. Removable for charging/relocation.

WHAT'S IN THE BOX

Item	Quantity
Motion Sensor Cabinet Lights	2
USB-C Charging Cords	2
Magnetic Adhesive Patches	4
Product User Manual	1

SAFETY INFORMATION

- Do not expose the lights to water or excessive moisture. The product is not water resistant.
- Do not disassemble or modify the product. This may cause damage and void the warranty.
- Keep out of reach of children.
- Use only the provided USB-C charging cords or certified equivalents.
- Avoid direct eye exposure to the LED light source.
- Ensure proper ventilation during charging.

SETUP

1. Charging the Lights

Before first use, fully charge the lights. Connect the provided USB-C charging cord to the light and a USB power source (e.g., computer, wall adapter). The indicator light will show charging status (e.g., red for charging, green for full). A full charge takes approximately 2 hours.

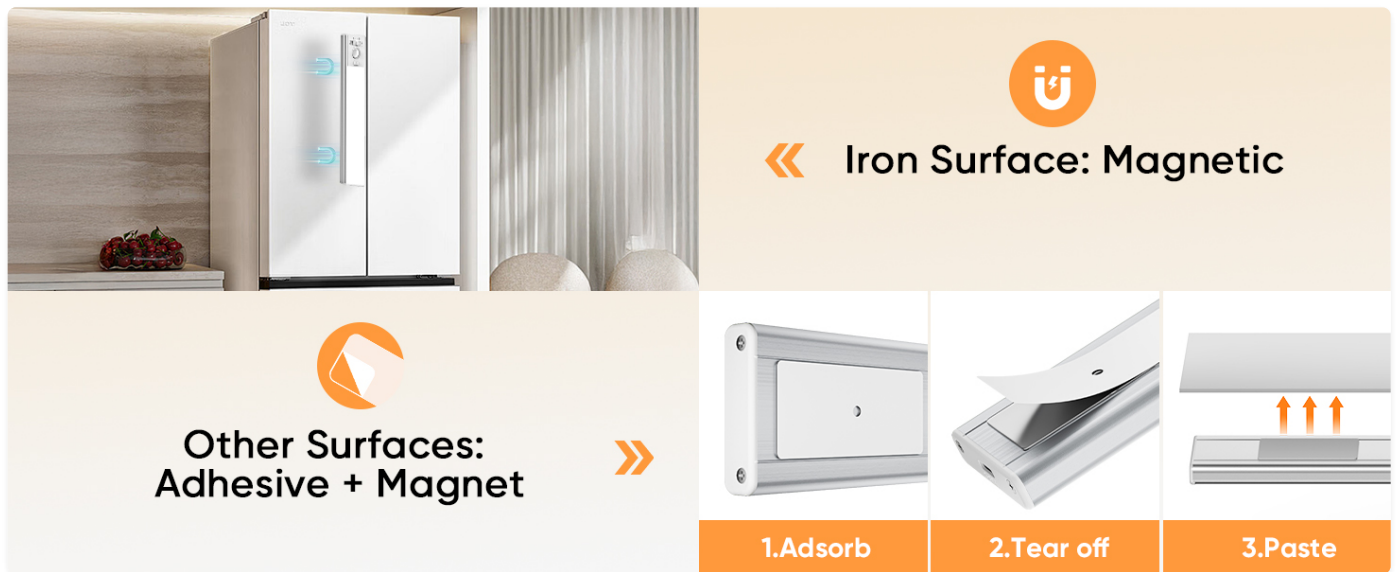 


Image: USB-C Charging Port and Battery Capacity. The light features a 2200mAh battery, providing up to 10 hours of continuous light or 30-60 days in motion sensor mode.

2. Installation

The lights offer two installation methods:

1. **Direct Magnetic Attachment:** If installing on an iron surface (e.g., metal cabinet, refrigerator), the built-in strong magnets allow for direct attachment.
2. **Adhesive Metal Plate:** For non-metal surfaces (e.g., wood cabinets, walls), use the included adhesive metal plates.
 - Clean the desired installation surface thoroughly to ensure it is dry and free of dust or grease.
 - Peel off the protective film from one side of the magnetic adhesive patch and firmly press it onto the desired location.
 - Align the light with the magnetic patch and attach it. The light can be easily detached for charging or repositioning.

Stepless Dimming

Meets Your Various Lighting Needs

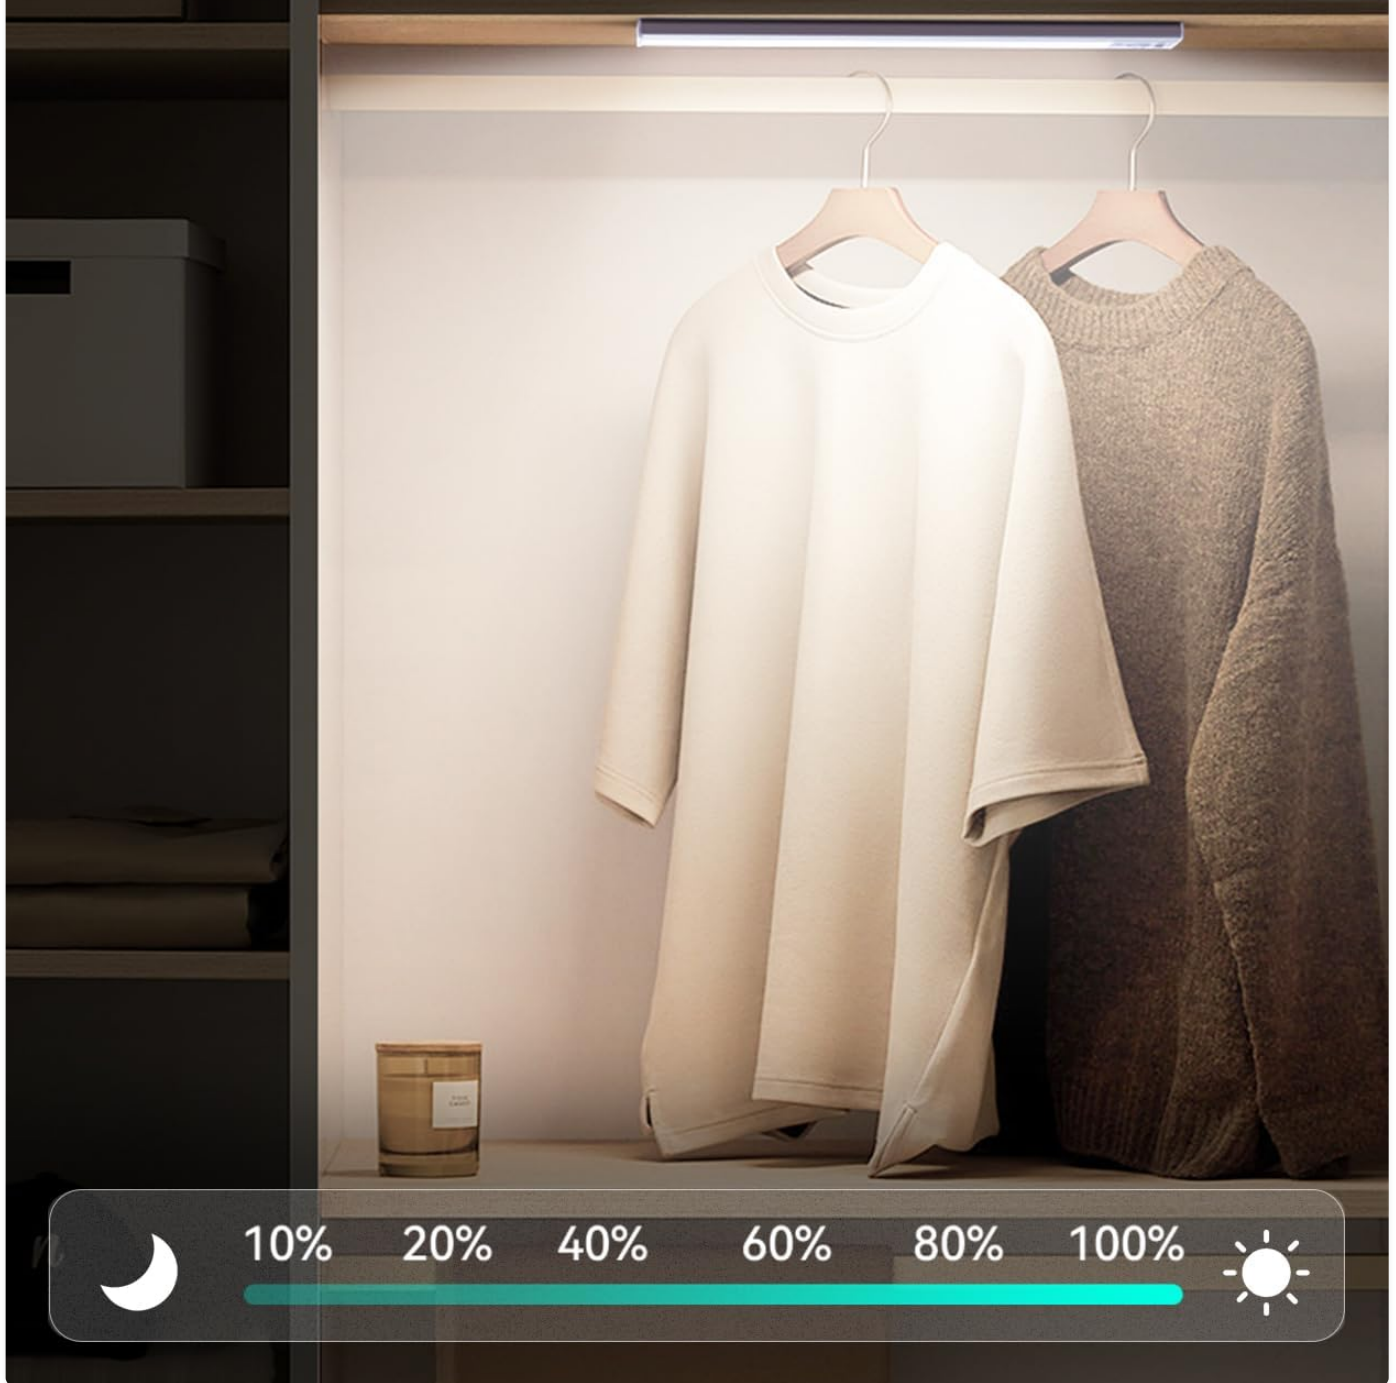 


Image: Easy Installation. The light can be directly attached to iron surfaces using its built-in magnets or to other surfaces using the provided adhesive metal plates.

OPERATING INSTRUCTIONS

Mode Selection

The light features a switch to select between different operating modes:

- **OFF:** The light is completely off.
- **ON:** The light stays continuously on. Ideal for tasks requiring constant illumination.

- **AUTO (Day Mode):** The motion sensor is active. The light will turn on when motion is detected, regardless of ambient light conditions.
- **AUTO (Night Mode):** The motion sensor is active, but the light will only turn on when motion is detected in low-light conditions (dark environment).

6 Mode To Choose

Flexible Lighting For You



Short press



Long press



ON /OFF



Day mode



Night mode

Image: 6 Mode Options. The light offers flexible lighting with options for short press, long press, ON/OFF, Day mode, and Night mode.

 
Brightness Adjustment (Stepless Dimming)

To adjust brightness, press and hold the control button. The brightness will cycle from 10% to 100%. Release the button at your desired brightness level. The light will remember your last brightness setting for convenience.

Easy Installation



Adhere Metal Plate

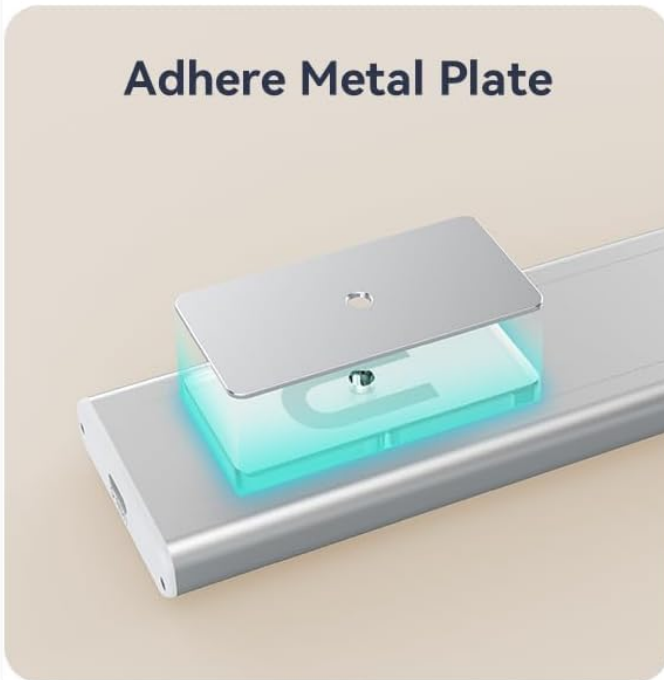

Built in Magnet



Image: Stepless Dimming. Adjust the light from 10% to 100% brightness to meet various lighting needs.

Motion Sensor Functionality

In AUTO mode, the built-in PIR motion sensor detects movement within a 10-foot (3-meter) range and a 120° wide angle. The light will gradually illuminate upon detection and slowly turn off after 20 seconds of no motion, conserving energy.




Light Up Your Drawers

Quickly spot what you need

Image: Sensitive PIR Motion Sensor. The sensor has a 10ft/120° motion detection range, waking up to soft, non-glare light.

 Non-stop lighting

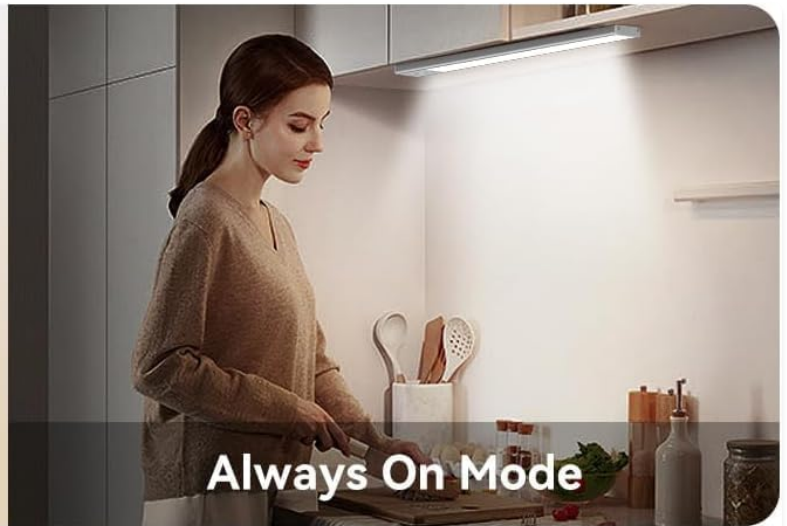


Always On Mode

Auto light up when
detects movement



All Day Mode

 Turn on automatically
in dark condition

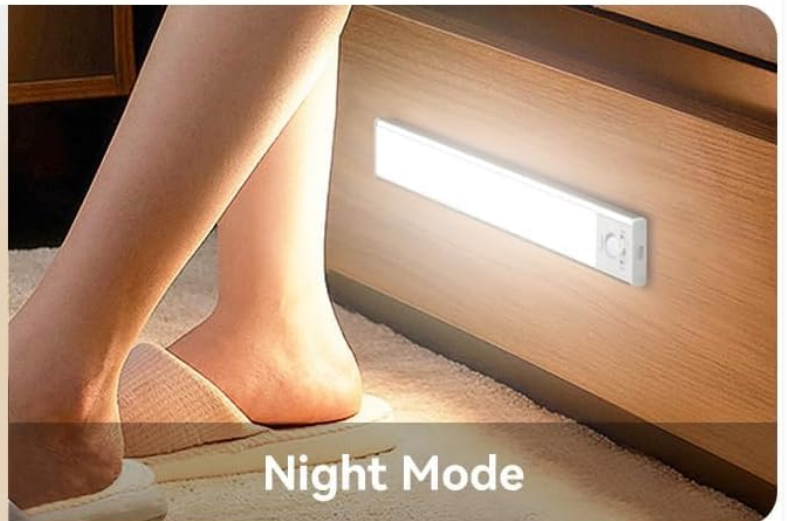

Night Mode

Image: Smart Motion Sensor Modes. Illustrates non-stop lighting (Always On), auto light up when movement is detected (All Day Mode), and automatic turn on in dark conditions (Night Mode).

MAINTENANCE

- **Cleaning:** Wipe the light gently with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Recharge when the light dims or the indicator suggests low battery.
- **Storage:** If storing for an extended period, charge the light to about 50% and store in a cool, dry place. Recharge

every 3-6 months to prevent deep discharge.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	Battery is low or depleted. Incorrect mode selected. Sensor obstructed.	Charge the light fully. Ensure switch is set to "ON" or "AUTO" mode. Clear any obstructions from the sensor.
Light turns on too frequently/infrequently.	Sensor sensitivity. Incorrect AUTO mode (Day/Night).	Adjust the light's position. If the sensor is too sensitive and triggers when you walk past, a small piece of metal tape (like aluminum foil) can be angled over the sensor to restrict its detection area, ensuring it only triggers when you reach directly into the space. Switch between Day Mode and Night Mode as appropriate for ambient light conditions.
Light color appears too cool.	Default color temperature.	While the color temperature is fixed at 6500 Kelvin, some users have found that applying an orange highlighter to the light's lens (and covering with clear tape for durability) can effectively warm the light output, giving it a more inviting glow.
Light does not dim.	Incorrect operation.	Ensure you are pressing and holding the control button for stepless dimming.

SPECIFICATIONS

Feature	Detail
Brand	DiDiSky
Model Name	GLS-C001
Product Dimensions	8.07"L x 1.77"W x 0.45"H
Item Weight	9.6 ounces
Material	Aluminum
Light Source Type	LED
Number of Light Sources	62
Brightness	160 Lumen
Color Temperature	6500 Kelvin (White Light)
Wattage	1.4 watts

Feature	Detail
Power Source	Battery Powered (2200mAh Lithium Polymer)
Charging Time	Approx. 2 hours (USB-C)
Battery Life (Always On)	Up to 10 hours
Battery Life (Motion Sensor)	40-60 days (based on average use)
Motion Sensor Range	10 feet / 120°
Control Method	Touch, Push Button
Special Features	Wireless, Energy Efficient, Dimmable, Rechargeable, Motion Sensor
Water Resistance Level	Not Water Resistant
UPC	732122381179

WARRANTY AND SUPPORT

DiDiSky products come with a limited warranty. For detailed warranty information, product support, or to purchase accessories, please visit the official DiDiSky store or contact customer service via the contact information provided on the product packaging or the retailer's website.

DiDiSky Store: [Visit DiDiSky Store on Amazon](#)

© 2025 DiDiSky. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question